


MDTools[®]

Library Manager 2018

User Manual

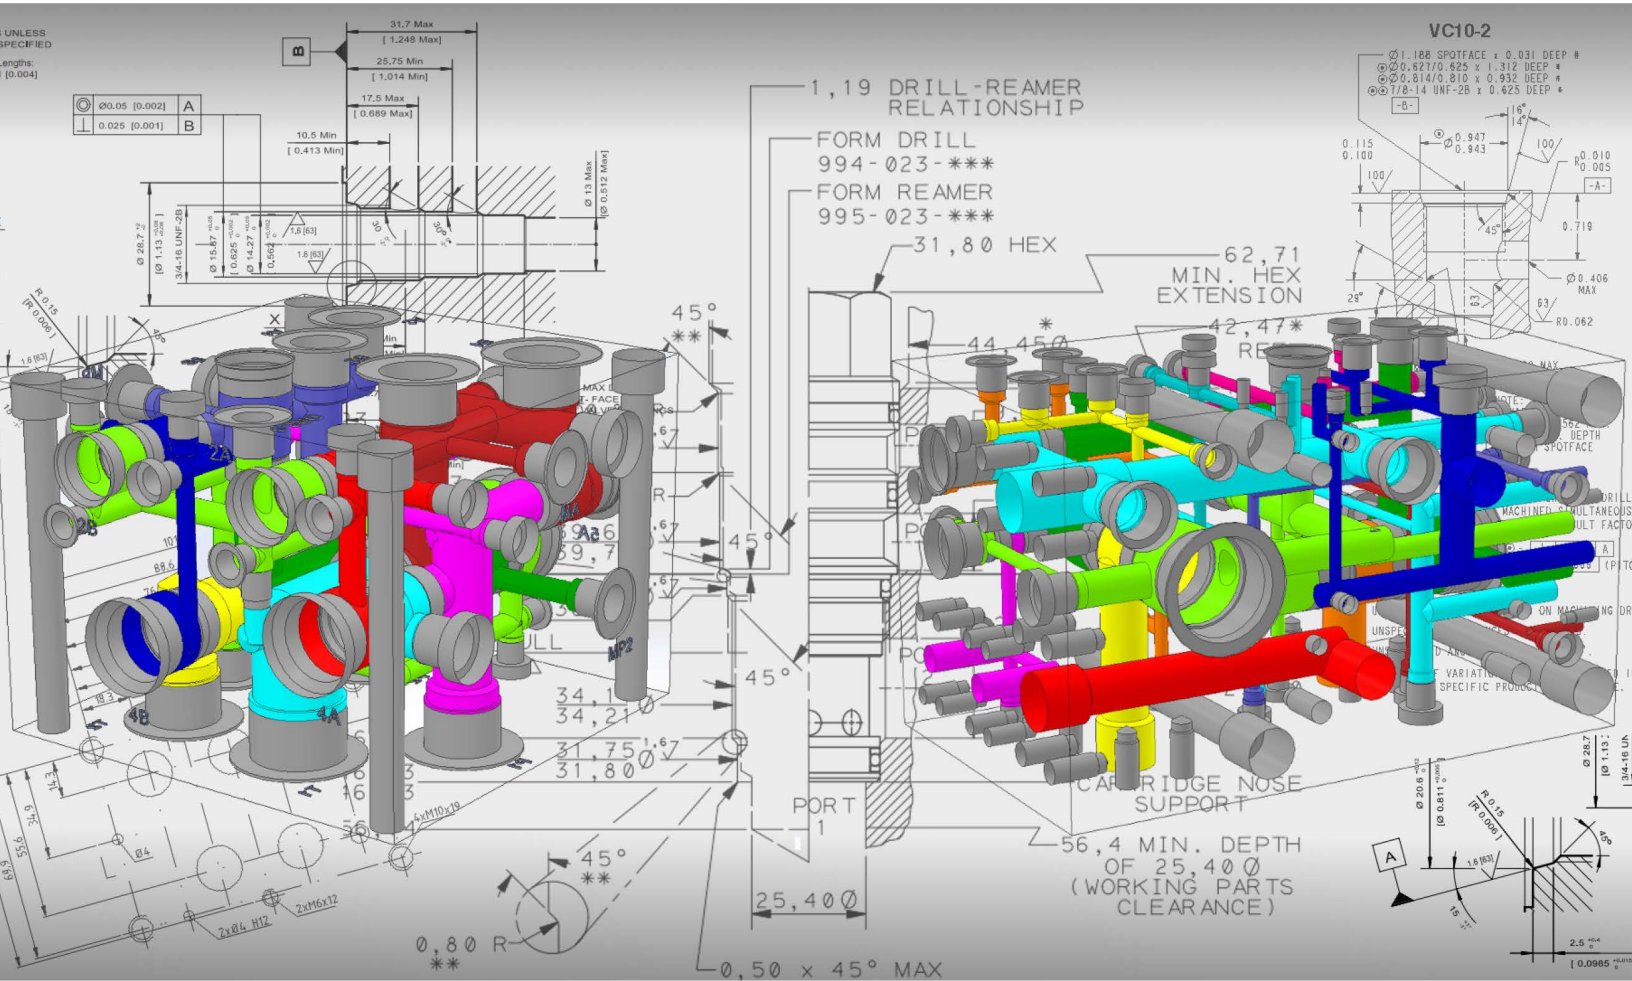

MDTools® Library Manager 2018

User Manual

VEST, Inc. 3250 W, Big Beaver Road, Suite 440, Troy, MI 48084 USA

Tel: 01 248 649 9550 Fax: 01 248 649 9560

Email: sales@VESTusa.com Visit: www.VESTusa.com

VEST, Inc.

Software Product License Agreement

Notice: Read this before installing the software.

Carefully read the terms and conditions of this agreement before opening the product package. Opening the package indicates your acceptance of these terms and conditions. If you do not agree with the terms and conditions of this Agreement, promptly return the package unopened to the place where you obtained it.

Definitions

The Software Product is licensed (not sold) to you. The Software product includes all copies of the Software Product and its related supporting materials.

License

VEST, Inc. (we, our, us) grants you a personal, non-transferable, and non-exclusive license to use the Software Product in the specified quantity only.

You may not:

distribute, sublicense or copy any portion of the Licensed Software product:

modify or prepare derivative works from the Licensed Software Product:

transmit the Licensed Software product electronically by any means:
or

use the Licensed Software product in multiple computer or multiple user arrangements unless that use is covered by individual license for each computer or user.

You agree that the Licensed Software product belongs to us and you agree to keep confidential and use your best efforts to prevent and protect the contents of the Licensed Software Product from unauthorized disclosure.

Limited

For 90 days from the date of shipment, we warrant that the media (for example, CD) on which the Licensed Software Product is contained will be free from defects in materials and workmanship. The warranty does not cover damage caused by viruses, improper use or neglect.

We do not warrant the contents of the Licensed Software Product (it is furnished "AS IS" and without warranty as to the performance or results you may obtain by using the Licensed Software Product) or that it will be error free.

You assume the entire risk as to the results and performance of the Licensed Software Product.

To get media warranty service during the 90-day warranty period, you may return the Product (postage paid) with a description of the problem to the place where you obtained it. The defective media on which the Licensed Software Product is contained will be replaced at no additional charge to you.

If you do not receive media that is free from defects in materials and workmanship during the 90-day warranty period, you will receive a refund or credit to your account for the amount you paid for the Licensed Software Product returned.

Disclaimer of Warranty

YOU UNDERSTAND AND AGREE AS FOLLOWS:

Warranties in this agreement replace all other warranties, express or implied, including any warranties of merchantability or fitness for a particular purpose. We disclaim and exclude all other warranties.

We will not be liable for any loss or damage caused by delay in furnishing a Licensed Software Product or any other performance under this Agreement.

Our entire liability and your exclusive remedies for our liability of any kind (including liability for negligence except liability for personal injury caused solely by our negligence) for the Licensed Software Product covered by the Agreement and all other performance or non-performance by us under or related to this Agreement are limited to the remedies specified by this Agreement.

In no event will our liability of any kind include any special incidental or consequential damages, even if we have knowledge of the potential loss or damage.

Special notice to consumers: some states do not allow the exclusion of implied warranties, so the above exclusion may not apply to you. The warranty gives you special legal rights, and you may also have other rights, which vary from state to state.

Termination

This Agreement is effective until terminated. You may terminate it any time by destroying the Licensed Software Product. It will also terminate if you do not comply with any term or condition of this Agreement. You agree upon termination to destroy the Licensed Software Product.

General

You are responsible for installation, management and operation of the Licensed Software Product.


Contents

1.	Introduction.....	1
2.	Installation.....	3
	MDTools Cavities.....	4
3.	Modeling Cavities	4
4.	Cavities	6
	Manage Libraries.....	7
5.	Adding a Library.....	8
6.	Deleting a Library.....	9
7.	Renaming a Library.....	10
	Create Cavities	11
8.	Adding/Modifying a Cavity	12
	Create New Cavities	16
9.	Cavity Geometry and Machining Details	17
10.	Cartridge Valve Port Details.....	18
11.	Undercut Details.....	19
12.	Plug Details	20
13.	Importing Cavity Data.....	21
	Create Footprints	22
14.	Creating/Modifying Footprints	24
15.	Editing Footprint Child Cavities.....	27
16.	Creating/Modifying Footprint Outline.....	29
	Special Cavities.....	30
17.	Creating O-ring Grooves	31
18.	Creating Slots.....	32
	Outlines.....	33
19.	Creating Outlines	34
20.	Reading Outline Data from AutoCAD.....	39
21.	Reading Outline Data from Inventor	41
22.	Reading Outline Data from SolidWorks	43
	Plugs	44
23.	Assigning Plug Models for Construction Ports.....	45
24.	Linking a Plug File with a Construction Port	46
25.	De-Linking a Plug File from a Construction Port	47
	Tools	48
26.	Adding a Tool.....	49
27.	Updating a Tool	50
28.	Deleting a Tool.....	50
	Setup.....	51
29.	Import Cavity	52
30.	Options	53
31.	Help	55
32.	About MDTools Library Manager	56
	Appendix.....	57
33.	List of Cavities - MDTools Library Manager 2018	58

1. Introduction

MDTools® Library Manager enables you to create and manage Cavities, Libraries, O-rings, slots, Outlines, Plugs, and Tools.

MDTools Library Manager 2018 can run independent of MDTools, i.e. you can run this program without installing or running MDTools.

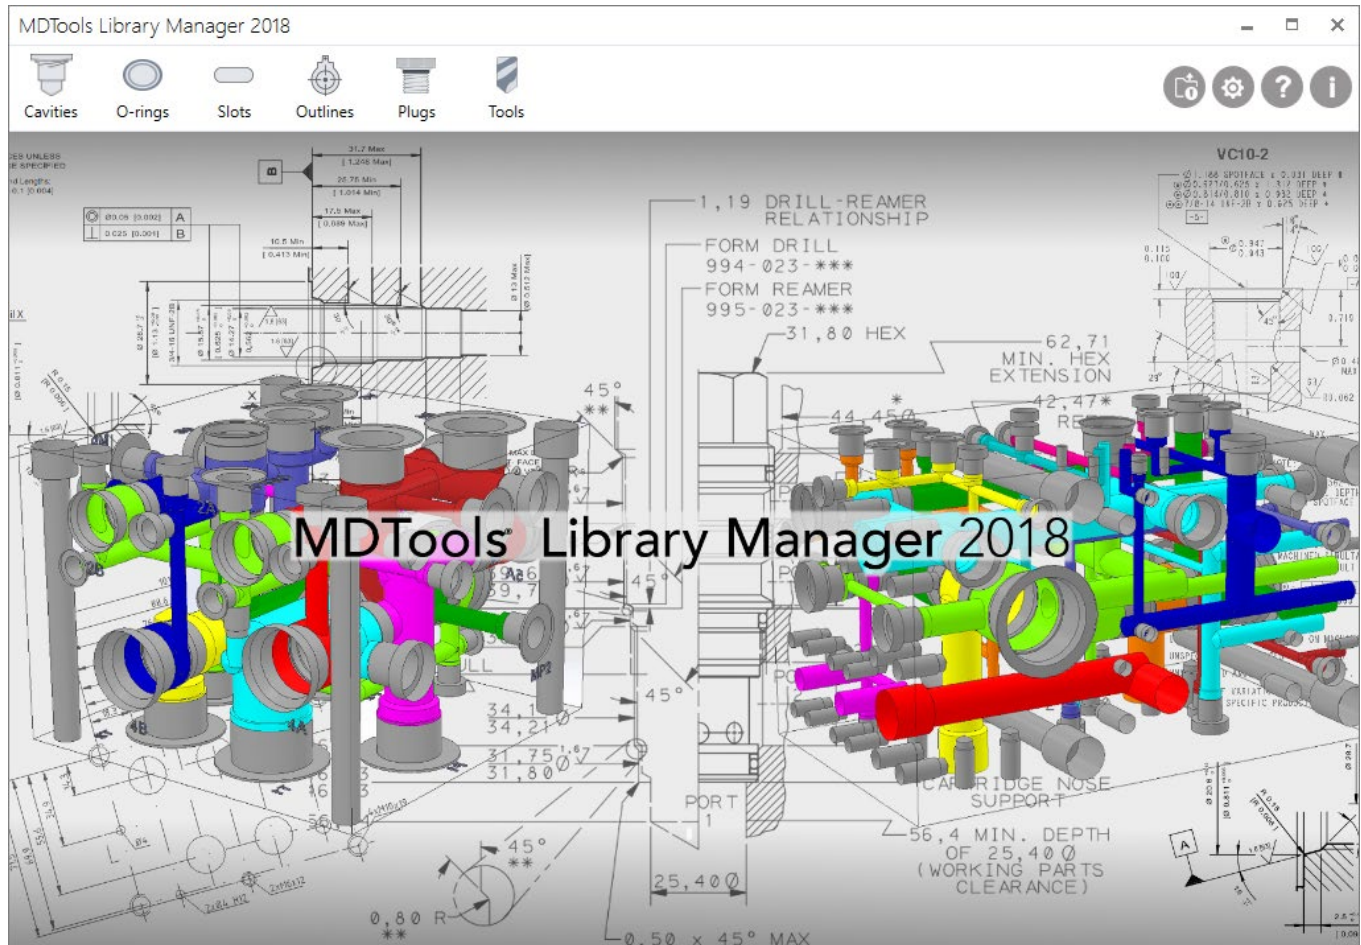


MDTools Library Manager 2018



MDTools Library Manager 2018 Ribbon

1. Click the MDTools Library Manager 2018 icon created on your desktop to run the MDTools Library Manager 2018.


You can also run the program by selecting the MDTools Library Manager 2018 option from the Windows Start Menu program.



Icon

2. Start
 - > All Apps
 - > VEST
 - > MDTools Library Manager 2018

The MDTools Library Manager 2018 displays.

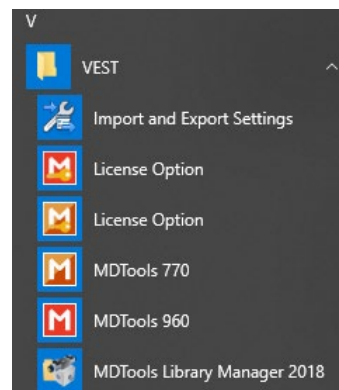

Program Menu

Cavities:

Customize the cavity data in MDTools libraries, per your specific requirements.

O-rings:

Add, edit, or delete the O-ring, O-ring groove and Counterbore data, per your specific requirements.

Slots:

Add, edit, or delete the slot data, per your specific requirements.

Outlines:

Create, modify, and store valve assembly outlines.

Plugs:

Assign the Valve model for cavities in your library to facilitate automatic assembly in MDTools.

Tools:

Add, edit, or delete the standard tool data, per your specific requirements.

Import Cavity:

Import cavities or footprints from other MDTools Cavity libraries into your library.

Import new cavities added in the MDTools Cavity library into your cavity library.

Options:


Define MDTools cavity library path, Units and Plug Model Library location and path.

Help:

Open the MDTools Library Manager 2018 user manual in .pdf format.

About Library Manager:

View the current MDTools Library Manager's release date and build number.

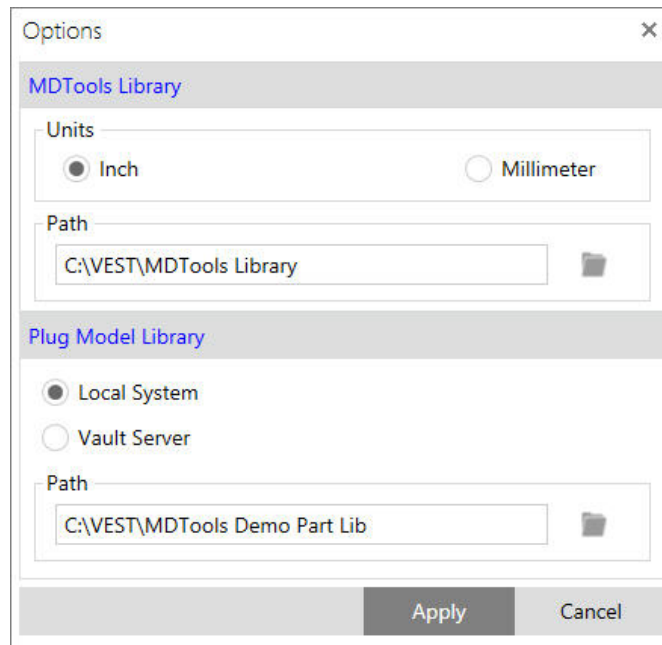

MDTools Library Manager: Options

2. Installation

Install MDTools Library Manager 2018 using the installation program.

The installer creates all required directories and installs the MDTools Library Manager on your system.

1. System Requirements

- Microsoft Windows XP/Windows Vista Business/Windows7/ Windows 8/ Windows 10 (64 Bit).
- Microsoft .NET Framework 4.5 or higher.

2. Software Installation

1. Insert the MDTools® CD-ROM (Inventor/SolidWorks version) in the CD drive of your system.

If Auto-run is not set, then:


2. Launch the Setup program.
Windows **Start** > **Run** > Browse
(Browse to E:\ MDToolsStart.exe assuming E is your CD drive).

3. Select **MDToolsStart.exe**.

4. Click **Open**.

5. Click **OK**.

The MDTools dialog box displays.

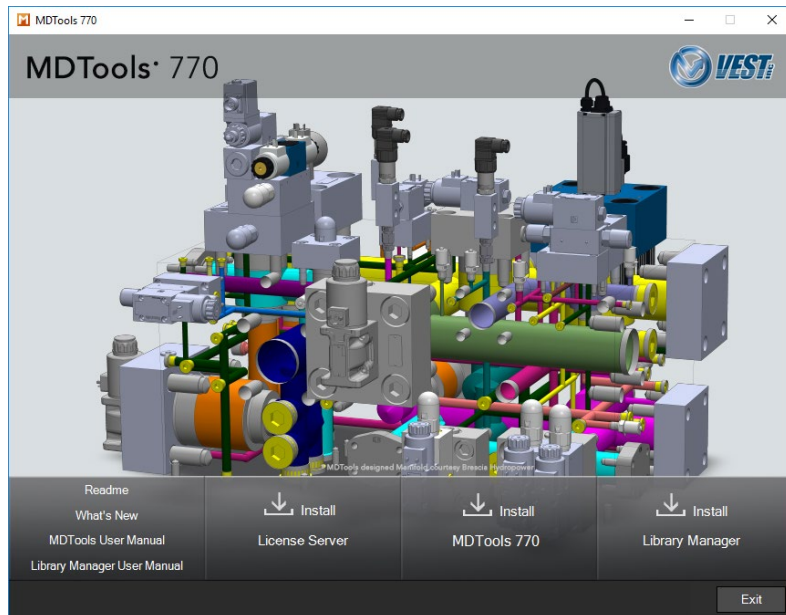

MDTools 770 Installation Wizard

Installing MDTools Library Manager 2018


1. Click **MDTools Library Manager 2018**.

The MDTools Library Manager 2018 Installation dialog box displays.

2. Respond to all the setup program prompts.

The MDTools Library Manager is installed on your system.

3. The installation program automatically creates the required directories in your system.

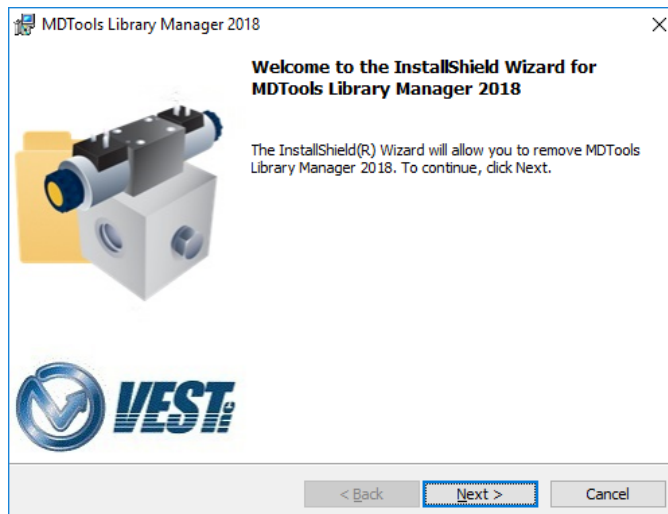

MDTools Library Manager 2018 Installation dialog box

MDTools Cavities

In MDTools®, all types of holes used in a manifold are called **Cavities**.

An MDTools cavity can be a drill hole, a port (SAE ports, BSP ports, NPT ports, etc), a cartridge valve cavity, a bolt hole, locating pin hole, or an undercut.

3. Modeling Cavities


Geometry of a cavity is defined in terms of its dimensions, and its relationship with the step number and step dimensions.

Each step, which consists of cylindrical and/or a conical pair, in the cavity profile is denoted by the term 'Step' in MDTools®.

Step information is analogous to a drill tool, which has the drill diameter, drill depth, and bottom cone angle of the drill.

Note:

Depth for Step1 through Step11 is measured from Step0.

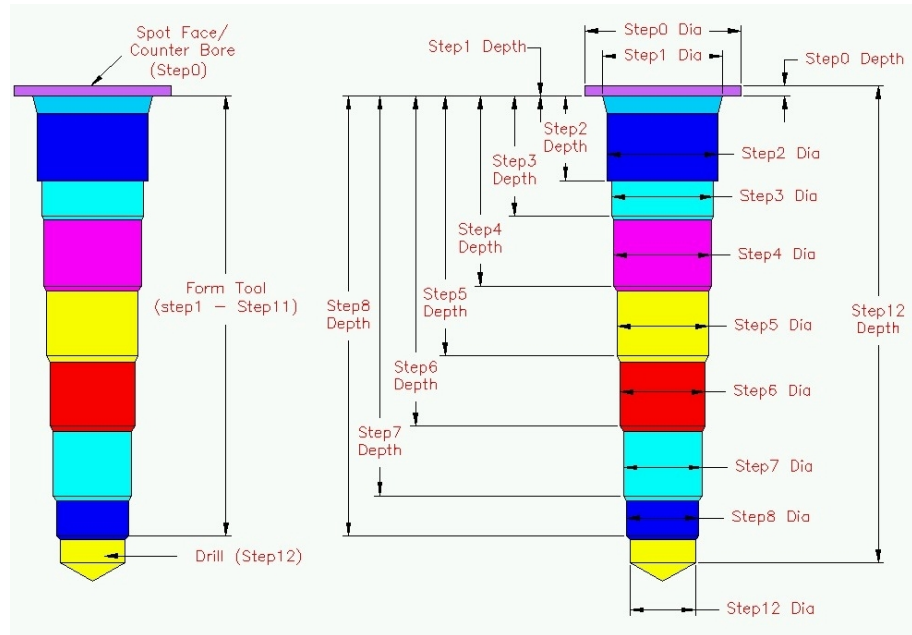

MDTools Cavity Geometry


1. Cartridge Valve Cavities

Cartridge valve cavities are divided into working areas (port areas) and dead areas.

All parts of a cavity other than the port areas are considered as Dead Areas.

Note:

Bottom port depth of a cartridge valve cavity is the starting depth of the bottom port from the spot face.

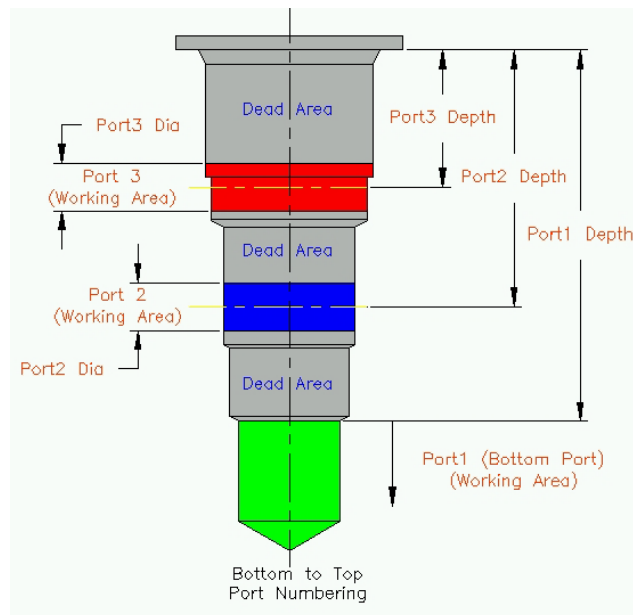

Typical 3-port Cartridge Valve Cavity


2. Ports

Cavities of ports are divided into working and dead areas.

Area of a cavity below the insertion depth of plug/fitting is considered as Working Area.
Area of a cavity down to the insertion depth is considered as Dead Area.

Note:

- For port cavities, the plug insertion depth must be specified.
- If not specified, the complete cavity is included in the working area during connectivity and wall thickness checks.

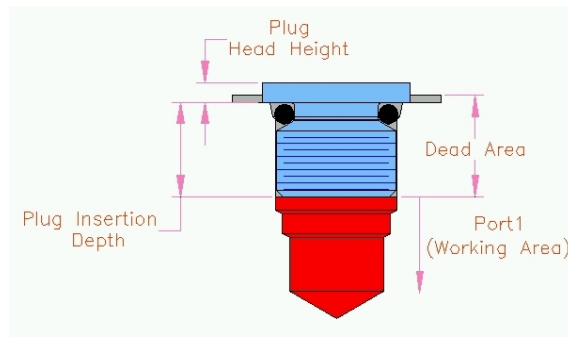


Port Cavities

3. Drill Holes

The complete cavity is treated as Working Area.

Hole dimensions are entered in Step0 of the cavity.

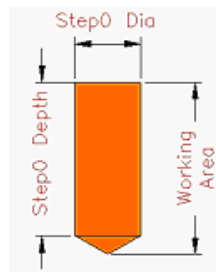


Drill Holes

4. Locating Pin Holes

The complete cavity is treated as Dead Area.

Hole dimensions are entered in Step0 of the cavity.

All the dimensions are fixed.

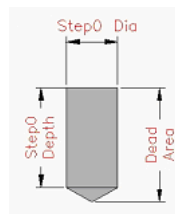


Location Pin Hole

5. Bolt Holes

The complete cavity is treated as Dead Area.

Three variations of bolt holes are used in manifold design.

- Threaded Bolt Hole (for mounting components on manifolds and for mounting manifolds)
- Through Drilled Bolt Hole
- Through Bolt Hole with Counter Bore (for mounting manifolds)

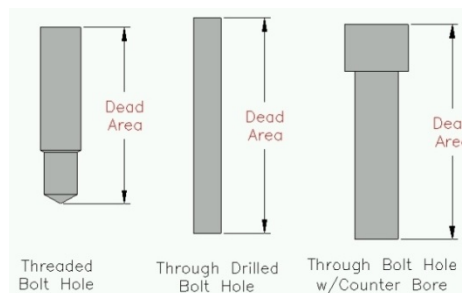


Bolt Holes

4. Cavities

Add, modify and delete library data and cavity data.

1. MDTools Library Manager ribbon
> **Cavities**
The Cavities/Footprints section displays.



MDTools Library Manager: Cavities

2. Perform the following operations from the Edit Cavity Library dialog box:
 - Add New library
 - Delete an existing library
 - Rename an existing library
 - Add cavities/footprints to the library
 - Modify cavities/footprints in the library
 - Delete an existing cavity/footprint

Note:


- You can edit both the Inch and Metric unit libraries per the Units option selected in Options Command.
- Do not edit the cavity library manually using Microsoft Access; always use the MDTools Library Manager program to edit the library.
- Microsoft Access is not required to edit the cavity library. You can edit the cavity library using the MDTools Cavity Library program even if Microsoft Access not installed on your machine.
- Whichever cavities you use in the manifold should be available in the MDTools Cavity Library. You cannot create a cavity inside the MDTools program, if it is not available in the library.
- Two separate databases, one for inch and one for metric units used to store the data.
- The Inch library is stored in the Microsoft Access database file named, InchVESTMDToolsLibrary.mdb and the Metric library is stored in MMVESTMDToolsLibrary.mdb.

These files are located in the root (installation) directory of MDTools Library.

- Share the cavity library over a network in your group by specifying the location of the library in the Options dialog box.
- Use *Options* to change the library path and units.

Manage Libraries

- 5 Adding a Library
- 6 Deleting a Library
- 7 Renaming a Library

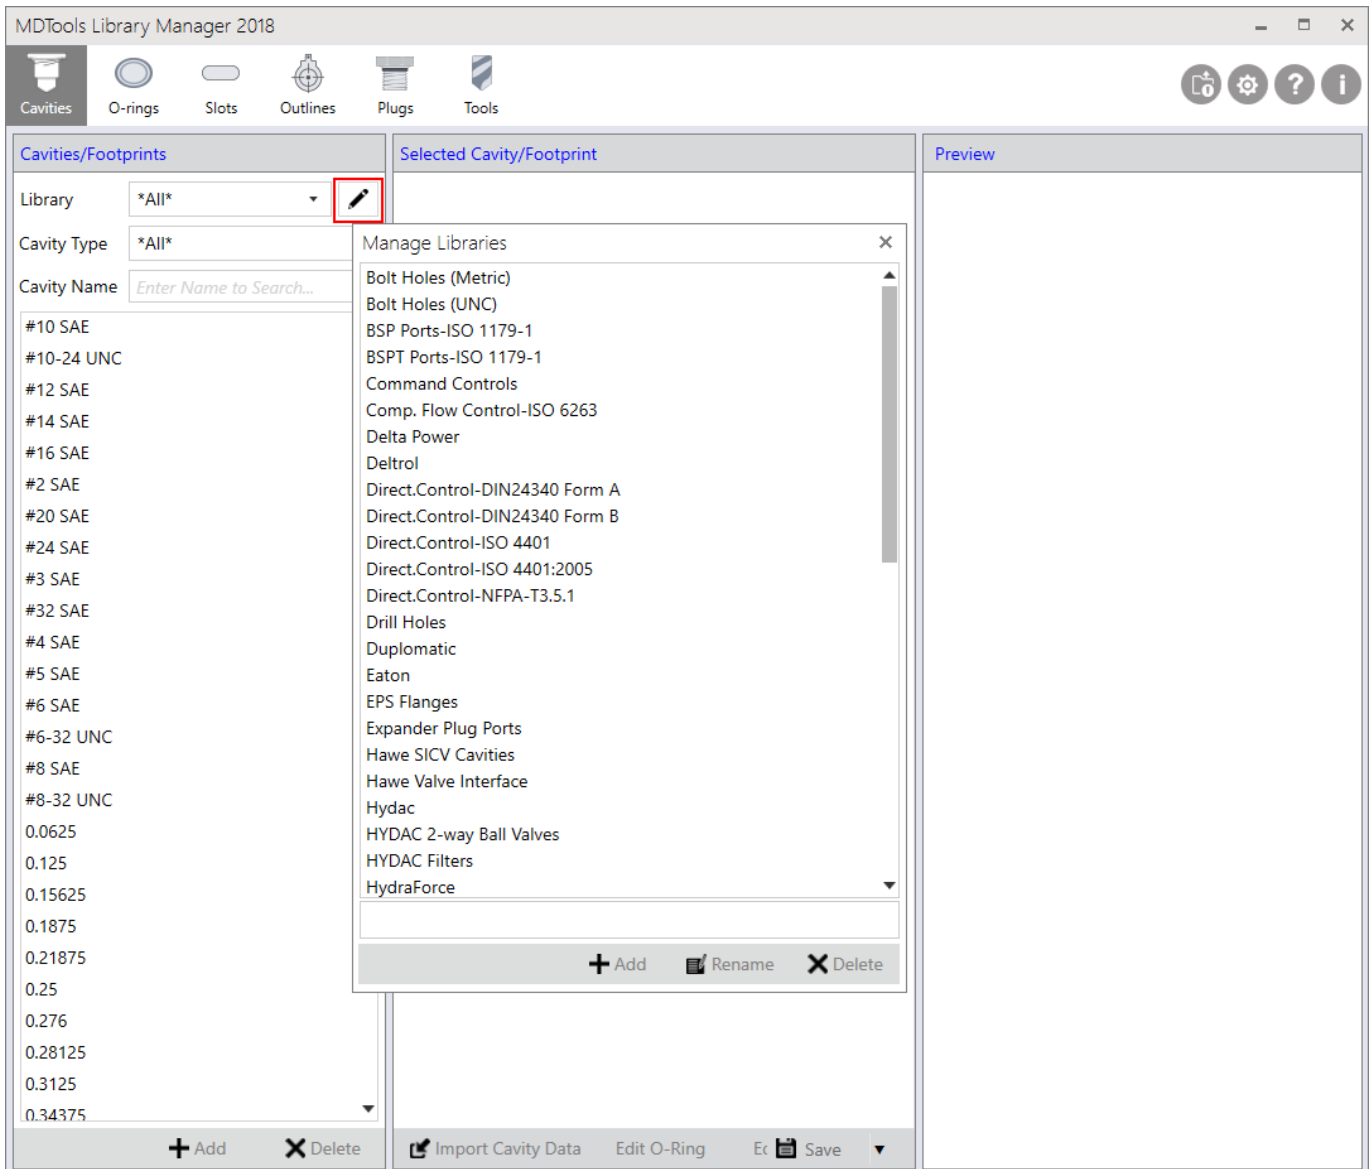

5. Adding a Library

- MDTools Library Manager ribbon
> Cavities
> **Manage Libraries**
The Manage Libraries dialog box displays.
- Enter the new library name in the text box provided below the Libraries List.
- Click **Add** to add a new library.
A new library is added to the existing libraries.

The new library name displays in the Manager Libraries Listing.

Manage Libraries option

Note:

- If the unit setting is Inches in the Options command, then the library is added to the inch libraries (InchVESTMDToolsLibrary.mdb).
- If the unit is set to MM in the Options command, then the library is added to the metric libraries (MMVESTMDToolsLibrary.mdb).
- When the library is added, you can add cavities/footprints into the library using the **Add** option in the Cavity/Footprint section.
- Added library automatically comes in Library dropdown in the Cavity/Footprint section.

Manage Libraries: Add Library


Cavities/Footprints Section

6. Deleting a Library

1. MDTools Library Manager ribbon
> Cavities
> **Manage Libraries**
The Manage Libraries dialog displays.
2. Select the library you want to delete.
3. Click **Delete** to delete the library along with all its contents.
A message box displays.
4. Check the library name mentioned in the message box to make sure that the correct library is selected for deletion.
5. Click **Yes** to delete the library.

CAUTION!


A library, once deleted, cannot be recovered.

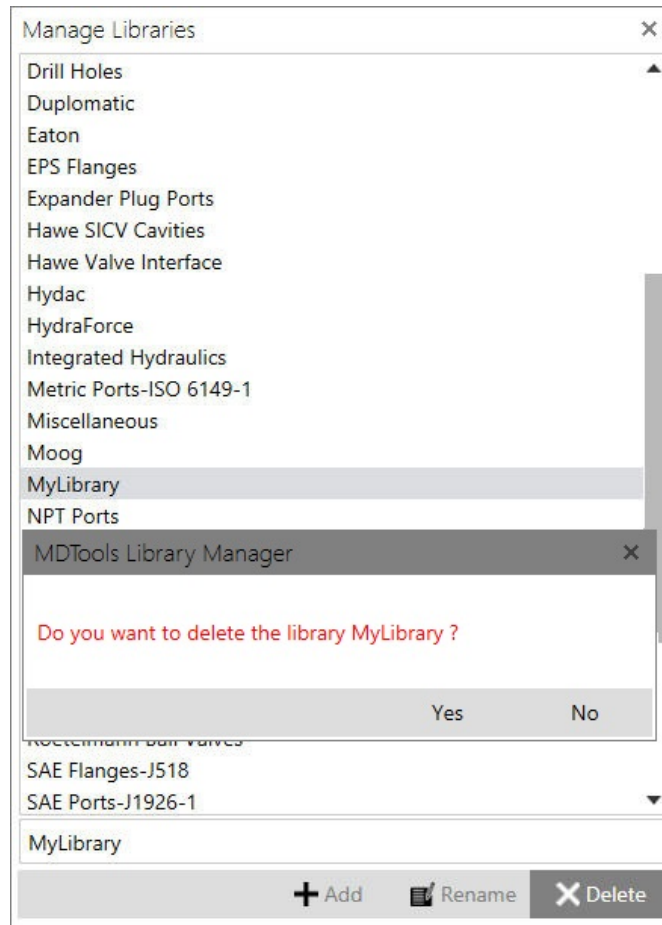

Manage Libraries: Delete library

7. Renaming a Library

1. MDTools Library Manager ribbon
> Cavities
> **Manage Libraries**
The Manage Libraries dialog displays.
2. Select the library you want to rename.
3. Enter the new name in the text box below the list of library names.
4. Click **Rename** to rename the library with the new name entered in the text box.
A message box displays.
5. Check the library name mentioned in the message box to make sure that the correct library is selected for renaming.
6. Click **Yes** to rename the library.
The library is renamed, and the new name displays in the Manage Libraries list.

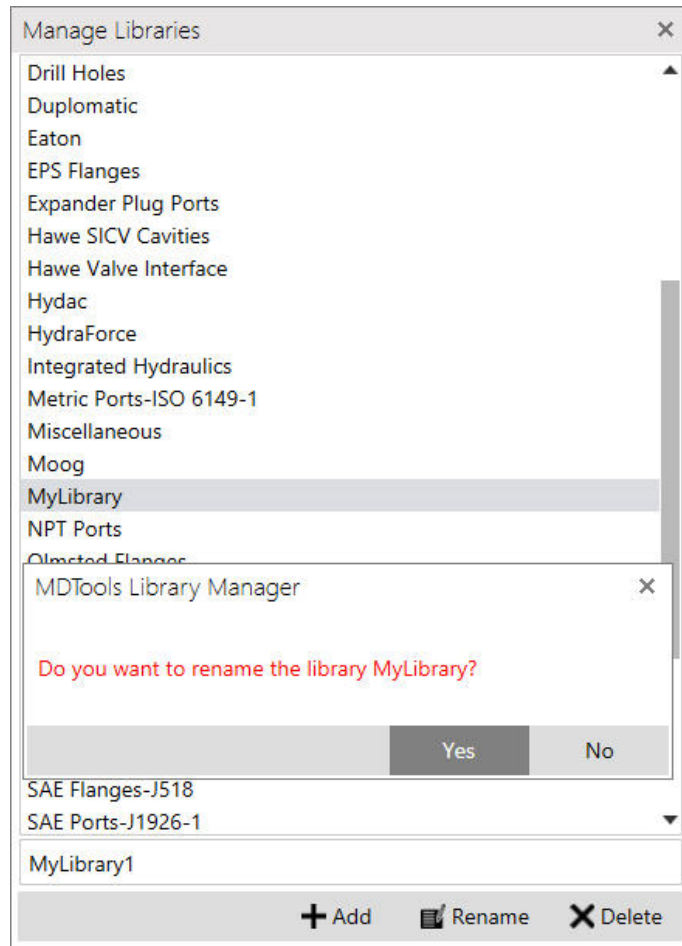

Manage Libraries: Rename library

Create Cavities

Create cavities that are not available in the MDTools® Cavity Library and add these cavities into the library.

Create a cavity inside MDTools, if it is not available in the library; i.e. the cavity you want to use on the manifold must be available in the MDTools Cavity Library.

8 Adding/Modifying a Cavity

MDTools Library Manager 2018

Cavities
 O-rings
 Slots
 Outlines
 Plugs
 Tools

Cavities/Footprints

Library: Rexroth

Cavity Type: *All*

Cavity Name:

- CA-07A-3N
- CA-08A-2N
- CA-08A-3C
- CA-08A-3N
- CA-08A-4N
- CA-10A-2N
- CA-10A-3C
- CA-10A-3N
- CA-10A-4N
- CA-12A-2N
- CA-12A-3C
- CA-12A-3N
- CA-12A-4N
- CA-16A-2N
- CA-16A-3C
- CA-16A-3N
- CA-16A-4N
- CA-20A-2N
- CA-20A-3C
- CA-20A-3N
- CA-20A-4N
- CC063A-01
- CD072A-01
- CD073A-01
- DBD10K
- DBD20K

Selected Cavity/Footprint

Type: Cartridge Valve

Name: CA-08A-4N

OEM Name: Rexroth CA-08A-4N

Note: Rexroth Bosch Group CT.A.004.U, Rev.0508, Page 300

Dimensions

Step	Diameter	Depth	Angle
0	1.024	0.03	90
1	0.811	0	15
2	0.75	0.512	90
3	0.688	0.68	20
4	0.625	1.23	20
5	0.562	1.78	20
6	0.5	2.205	70
7			
8			
9			
10			
11			
12	0.472	2.5	59


Maximum Drill Diameter:

Ports

Number of Ports:

Port	Port Dia	Port Depth	Connecting Cavities
1		2.205	
2	0.236	1.693	#2 SAE
3	0.236	1.142	#2 SAE

Preview

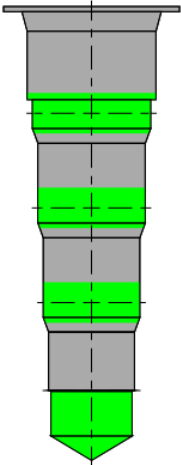

8. Adding/Modifying a Cavity

Add a new cavity/footprint into the library or modify an existing cavity/footprint.

1. MDTools Library Manager ribbon
> **Cavities**

The Cavities/Footprints section displays.

2. Select a Library to add or modify cavity.
[By default, *All* is selected.]

Add button enabled after selecting a library.
Only cavities in the selected library display in the Cavities/Footprints list.

3. Select Cavity Type.

[By default, *All* is selected. In this case, all cavities in the selected library display in cavities/Footprint section.]

Cavities of selected types display in the Cavities/Footprint section.

Note: If there is no cavity of selected type in the library, then *Cavity Type* automatically changes to *All* and MDTools Library Manager displays all cavities in selected library.

4. Click **Add** to add a new cavity.


Or

Select a cavity from the Cavities/Footprint list to modify cavity.

Note: You can search a cavity by entering few letters of the cavity name in the **Cavity Name** text box.

MDTools Library Manager searches only cavities listed in the Cavities/Footprint list.

The Selected Cavity/Footprint section displays.

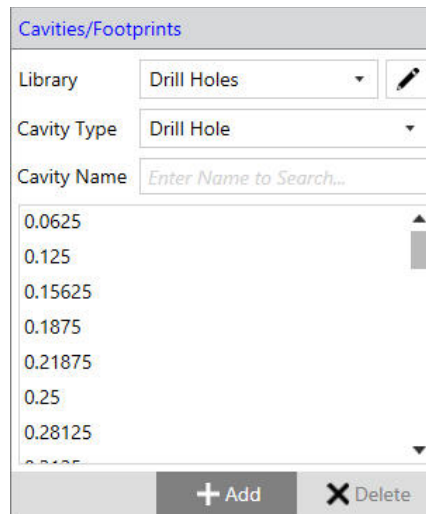

Cavities/Footprints List

Selected Cavity/Footprint Section

Selected Cavity/Footprint
Preview

Type: Cartridge Valve

Name: C10-4

OEM Name: Parker C10-4

Note: Catalog HY 15-3501/US

Step	Diameter	Depth	Angle
0	1.344	0.03	90
1	0.945	0	15
2	0.875	0.625	90
3	0.812	0.875	20
4	0.751	1.5	20
5	0.689	2.125	20
6	0.626	2.5	59
7			
8			
9			
10			
11			
12	0.609	2.75	59

Maximum Drill Diameter: 0.609

Port	Port Dia	Port Depth	Connecting Cavities
1		2.5	
2	0.25	1.968	#2 SAE
3	0.25	1.344	#2 SAE
4	0.25	0.72	#2 SAE

Threads

Step	Size	Pitch	Class
2	0.875	7/8-14 UNF	2B

Locating Shoulder


Sun Cavity

Locating Shoulder Step #:

Min. Locating Shoulder Depth:

Machining Sequence

Operation	Diameter	Depth	Remarks
0	DRILL	\$STEP12	\$STEP12
1	C10-4	\$STEP0	\$STEP0
2			
3			
4			
5			
6			

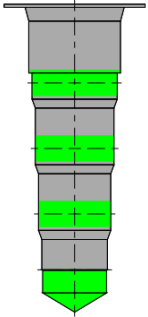

Import Cavity Data
Edit O-Ring
Edit Undercuts
Edit Footprint Data
Save

Selected Cavity/Footprint section for new cavity

The Selected Cavity/Footprint section includes:

1. Type

Select the *Cavity Type*.

The five different types of cavities in MDTools® are:

- Cartridge Valve Cavity
- Port
- Drill Hole
- Bolt Hole
- Flange
- Interface pattern

Type: Cartridge Valve

Name: C10-4

OEM Name: Parker C10-4

Note: Catalog HY 15-3501/US

Selected Cavity/Footprint section

2. Name

Name of the cavity to be displayed in the Cavity/Footprints list and the Insert Cavity dialog box.

3. OEM Name

Name of the OEM and name of the cavity/footprint used by the OEM to identify the cavity.

Note

Enter any notes about the cavity.

4. Dimensions

Step0 through Step12 for entering the cavity geometry dimensions. Pilot drill dimensions should be entered in Step12.

5. Maximum Drill Diameter

Enter the maximum drill diameter allowed for the cavity.

▲ Dimensions			
Step	Diameter	Depth	Angle
0	1.344	0.03	90
1	0.945	0	15
2	0.875	0.625	90
3	0.812	0.875	20
4	0.751	1.5	20
5	0.689	2.125	20
6	0.626	2.5	59
7			
8			
9			
10			
11			
12	0.609	2.75	59
Maximum Drill Diameter <input type="text" value="0.609"/>			

Selected Cavity/Footprint: Dimensions

6. Ports

Enter the cartridge valve port dimensions and locations.

▲ Ports			
Number of Ports <input type="text" value="4"/>			
Port	Port Dia	Port Depth	Connecting Cavities
1		2.5	
2	0.25	1.968	#2 SAE
3	0.25	1.344	#2 SAE
4	0.25	0.72	#2 SAE

Selected Cavity/Footprint: Ports

7. Threads

Enter the thread details for the cavity.

▲ Threads			
Step	Size	Pitch	Class
2	0.875	7/8-14 UNF	2B

Selected Cavity/Footprint: Threads

8. Locating Shoulder

Enter the Locating shoulder details, if applicable.

▲ Locating Shoulder	
<input type="checkbox"/>	Sun Cavity
Locating Shoulder Step #	<input type="text"/>
Min. Locating Shoulder Depth	<input type="text"/>

Selected Cavity/Footprint: Locating Shoulder

9. Machining Sequence

Enter the cavity machining detail.

Maximum number of operations in a cavity is seven.

▲ Machining Sequence			
Operation	Diameter	Depth	Remarks
0	DRILL	\$STEP12	\$STEP12
1	C10-4	\$STEP0	\$STEP0
2			
3			

Selected Cavity/Footprint: Machining Sequence

10. Plug Detail

Enter the plug head height, plug insertion depth, and the plug maximum pressure rating.

11. Import Cavity Data

Imports other cavity data to this cavity.


12. Edit Undercuts

Stores the details of Mandatory and Optional Undercut for the Cartridge Valve cavity.

13. Preview

Shows the preview of the cavity.

▲ Plug	
<input type="checkbox"/> Plug Port	
Head Height	<input type="text" value="0.156"/>
Insertion Depth	<input type="text" value="0.5"/>
Maximum Pressure	<input type="text" value="6000 psi"/>

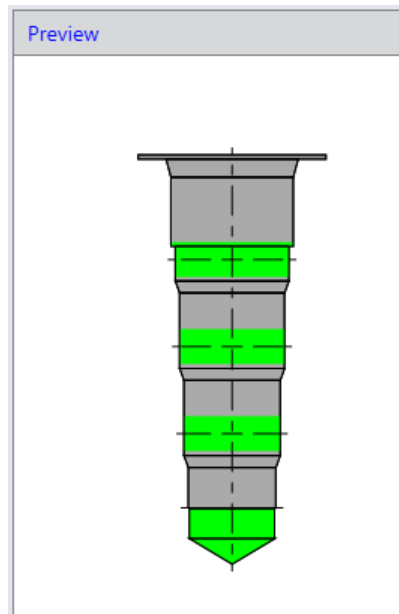

Modifying an existing cavity


1. Select the cavity you want to edit from the Cavity/Footprints list.

Selected Cavity/Footprint section displays the entire cavity data.

2. Make the desired changes.
3. Click **Save** to save the changes into the library.

Create New Cavities

- 9 Cavity Geometry and Machining Details
- 10 Cartridge Valve Port Details
- 11 Undercut Details
- 12 Plug Details
- 13 Importing Cavity Data

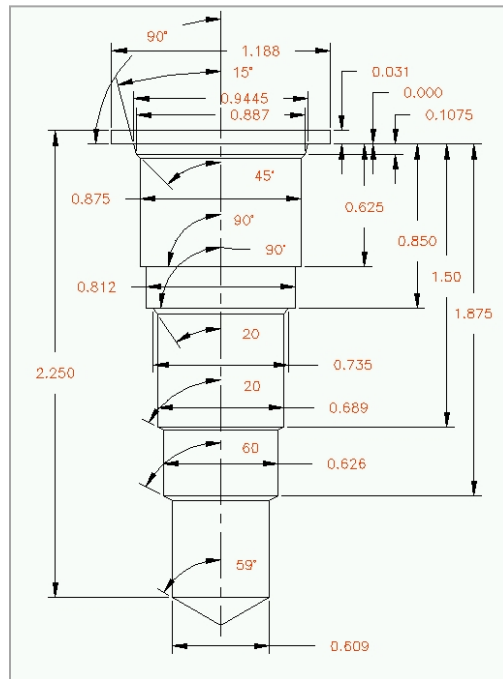

9. Cavity Geometry and Machining Details

1. Select **Library**.
2. Select **Cavity Type** as Cartridge Valve.
3. Click **Add** below the Footprint/Cavity Name list in the Cavity/Footprint section.
The Selected Cavity/Footprint section displays with empty fields.
4. Select the cavity **Type**.
Select cartridge valve cavity from the drop-down list
5. Enter **Name**.
For example, C10-3. This name displays in the Cavity Name list.
6. Enter the **OEM Name**.
For example, Parker C10-3
7. Enter the **Note**.
For example, Catalog HY 15-3501/US
8. Enter the Cavity Dimensions.
Drill (last step in the cavity) dimensions mandatory for Step12.
9. Enter the **Maximum Drill Diameter** for the cavity.
This data is used to ensure that the drill diameter in a design does not exceed maximum allowable value for a cavity.

Type	Cartridge Valve		
Name	C10-3		
OEM Name	Parker C10-3		
Note	Catalog HY 15-3501/US		
▲ Dimensions			
Step	Diameter	Depth	Angle
0	1.187	0.031	90
1	0.945	0	15
2	0.875	0.625	90
3	0.812	0.85	90
4	0.735	0.85	20
5	0.689	1.5	20
6	0.626	1.875	60
7			
8			
9			
10			
11			
12	0.609	2.2	59
Maximum Drill Diameter		0.609	

10. Enter the **Thread detail**.
Step number for thread in cavity, size, pitch, and class of thread.
11. Enter the **Machining sequence**.
12. Enter all the machining details required to machine the cavity. These details appear in the machining chart.

Notice that the diameter and depth are specified as '\$Step#'. For example, '\$Step12' is used for drill diameter and depth.

The machining information section picks up the drill diameter and depth from the diameter and depth of Step12 in the Geometry section.

During the design you can change the diameter and depth. When the machining chart is created, the tooling information is automatically extracted from the current definition of geometry in the drawing.

Note:

- MDTools displays a preview of the cavity in the preview section as you create the cavity.

▲ Ports			
Number of Ports		3	
Port	Port Dia	Port Depth	Connecting Cavities
1		1.875	
2	0.25	1.344	#2 SAE
3	0.25	0.72	#2 SAE

▲ Threads			
Step	Size	Pitch	Class
2	0.875	7/8-14 UNF	2B

▲ Machining Sequence			
Operation	Diameter	Depth	Remarks
0 DRILL	\$STEP12	\$STEP12	
1 C10-3	\$STEPO	\$STEPO	
2			
3			
4			
5			
6			


Selected Cavity Section: Cavity details

10. Cartridge Valve Port Details

1. Enter the port details for all the cartridge valve cavities.
2. Enter the number of ports.
Enter 3, as there are three ports in this cavity.
When you enter the number of ports, all the required port dimensions are enabled automatically.
3. Enter the port details.
Enter the port number, port diameter, port depth, and connecting cavity name.

Connecting cavity name is used as a design reference to determine the size of the construction port to be used to make connection with the cartridge valve ports.

This is very useful, if you are a new manifold designer.

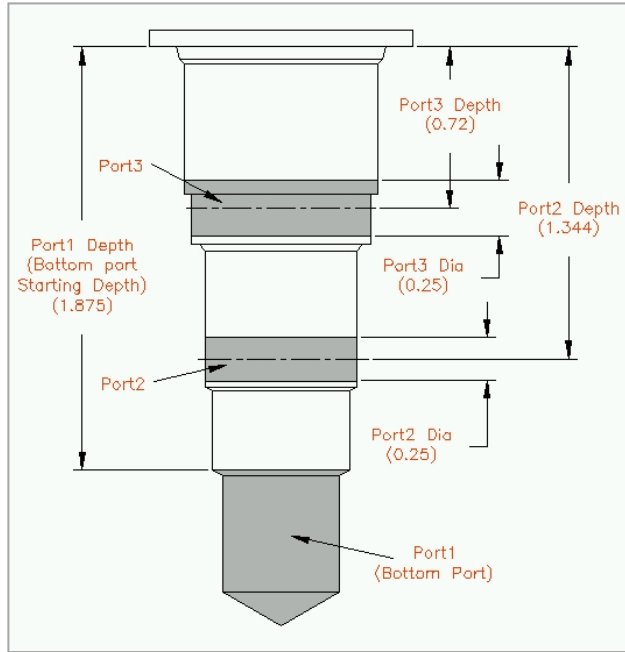

C-10-3 Port Dimensions

Note:

- Enter the bottom port detail in the first row.
 - Do not enter the bottom port diameter in the cavity.
 - The bottom port depth is the starting depth of the bottom port from the spot face of the cavity. For all the other ports, the port depth is the depth from the spot face to the center of port.
4. Click **Save** to save the cavity into the library.

Ports			
Number of Ports		3	
Port	Port Dia	Port Depth	Connecting Cavities
1		1.875	
2	0.25	1.344	#2 SAE
3	0.25	0.72	#2 SAE


Selected Cavity/Footprint Section: Ports details

11. Undercut Details

Add, modify and delete undercuts from cavity.

1. Click **Edit Undercuts** at the bottom of the Selected Cavity/Footprints section.

The *Edit Undercuts* dialog box displays.



Edit Undercuts

2. Click **Add** to add new undercut.
3. Enter undercut **ID**.
4. Select **Cavity Port**.


The *Undercut depth and width automatically displays*. Alternatively, you can also enter the depth and width of the undercut directly in the textbox.

5. Select **Optional** for Optional Undercut

Optional Undercuts are stored along with the cavity and will be available during the insertion of underCut in MDTools.

Default Undercut type is Mandatory Undercut

Mandatory Undercut is an integral part of the cavity profile and will appear during insertion of cavity in MDTools®.

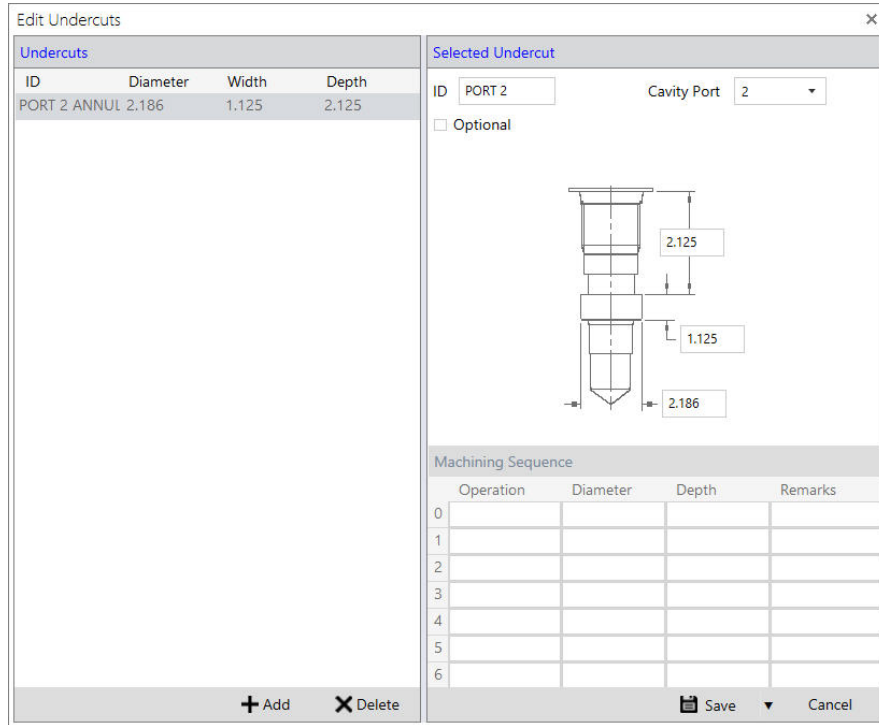

Add/Modify Optional Undercut

6. If **Optional** option is selected, enter offset and Machining Sequence value for undercut.

7. Click **Save** to save a new undercut.

8. Select the existing Undercut; modify the values and click **Save** or **Save As** to save as new undercut.


Added undercut displays in the Undercuts list.

9. Select the existing undercut; click **Delete** to delete the selected Undercut.

10. Click **Cancel** to close the dialog box.

Note:

The Mandatory Undercut will not appear on the Cavity Preview in the MDTools Library.

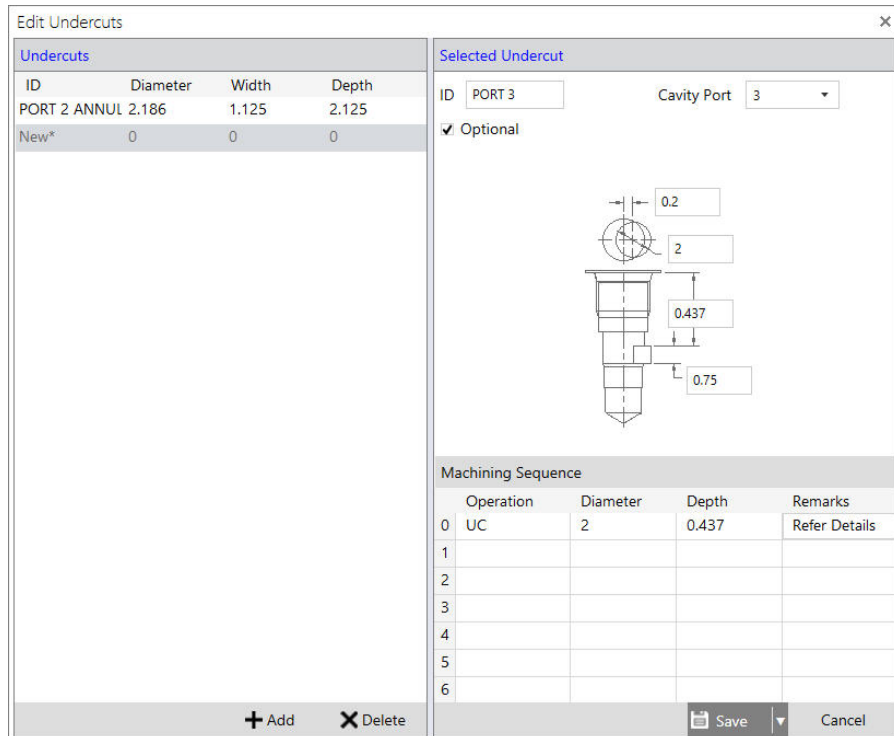

Add/Modify Mandatory Undercut

12. Plug Details

For all type of ports, (SAE, BSP and Metric) enter the following plug details in the **Plug** section of the selected Cavity/Footprint section.

Head Height

1. Enter the plug head height.

This information is used to flush the plug below the manifold surface using MDTools®.

Insertion Depth

2. Enter the insertion depth of plug/fitting.

Insertion depth is the depth from the spot face; this is used to determine the dead area in ports.

Maximum Pressure

3. Enter the pressure rating of the port.

Note:

- If the plug insertion depth is not entered in a port, then the complete area below the spot face is considered as Working Area.
- Maximum pressure is the design reference that enables you to select the correct construction ports for making connections in the manifold.
- Enter the pressure rating in any of the units as required.
- Pressure rating is entered for all the ports in the MDTools Cavity Library.
- Change the data if required, by modifying the cavity.

Selected Cavity/Footprint

Type: Port
 Name: #4 SAE
 OEM Name: #4 SAE
 Note:

Dimensions			
Step	Diameter	Depth	Angle
0	0.828	0.031	90
1	0.487	0	12
2	0.447	0.093	45
3	0.4375	0.454	60
4	0.383	0.547	60
5			
6			
7			
8			
9			
10			
11			
12	0.375	1	60

Maximum Drill Diameter: 0.375

Plug


Plug Port

Head Height: 0.125
 Insertion Depth: 0.361
 Maximum Pressure: 6000 psi

Threads			
Step	Size	Pitch	Class
3	7/16	7/16-20UNF	2B

Machining Sequence			
Operation	Diameter	Depth	Remarks
0	DRILL	\$STEP12	\$STEP12
1	FORM PORT	#4 SAE	\$STEP0
2	TAP	7/16-20	\$STEP3 UNF-2B
3			
4			
5			
6			

Sample Selected Cavity/Footprint: Plug details of #4 SAE port

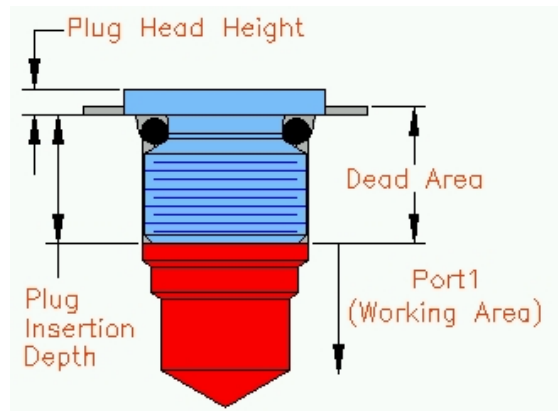


Plug Details


13. Importing Cavity Data

Import cavity data from an existing cavity while creating a new cavity or updating an existing cavity.


1. Select **Library** in which you want to add a cavity/footprint.
2. Click **Add**.
The Selected Cavity/Footprint section displays with empty fields.
3. Click **Import Cavity Data** option at the bottom of Selected Cavity/Footprints section.
The Import Cavity/Footprint Data dialog box displays.
4. Select **Library Name** from the Library Name list.
5. Select a **Cavity** from the Cavity list.
6. Click **OK**.
The Import Cavity/Footprint Data dialog box closes. Selected cavity data gets populated in the Selected Cavity/Footprint section.
7. Modify cavity data, if required.
8. Click **Save**.



Import Cavity Data

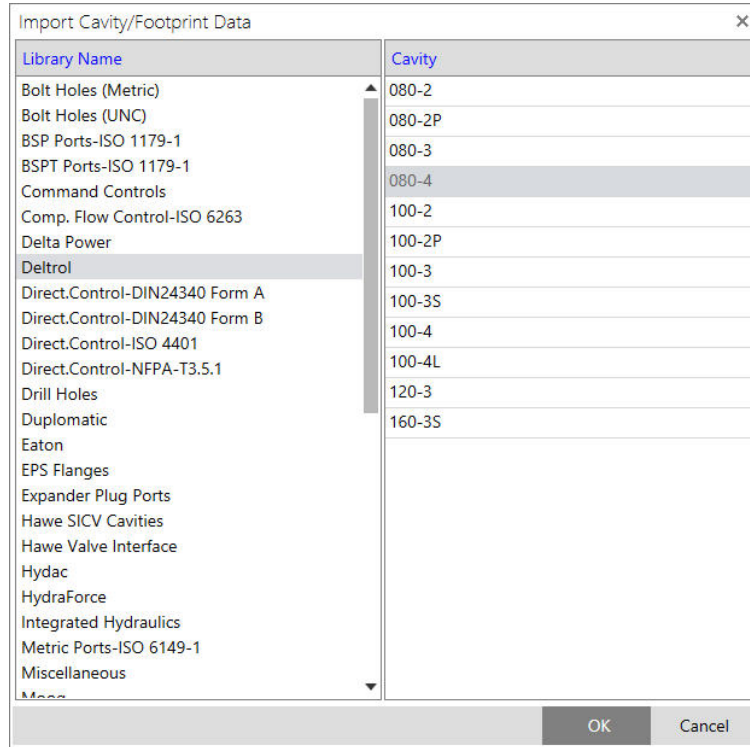


Import Cavity/Footprint Data dialog box

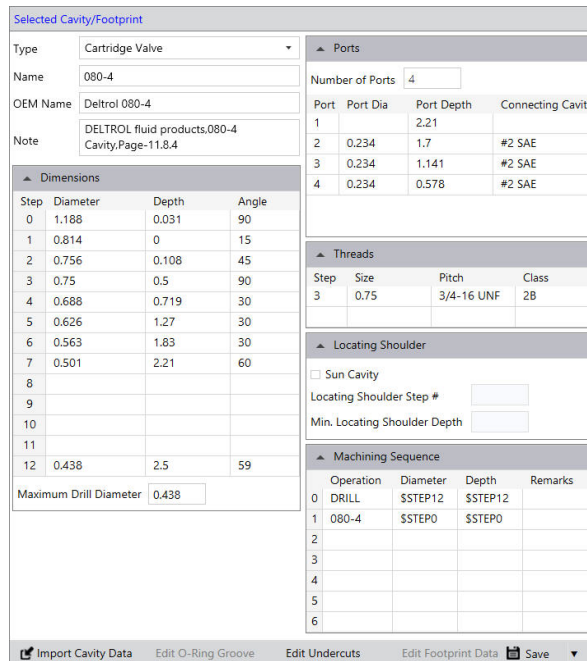

Cavity Data populated from Import Cavity Data

Create Footprints


- 14 Creating/Modifying Footprints
- 15 Editing Footprint Child Cavities
- 16 Creating/Modifying Footprint Outlines

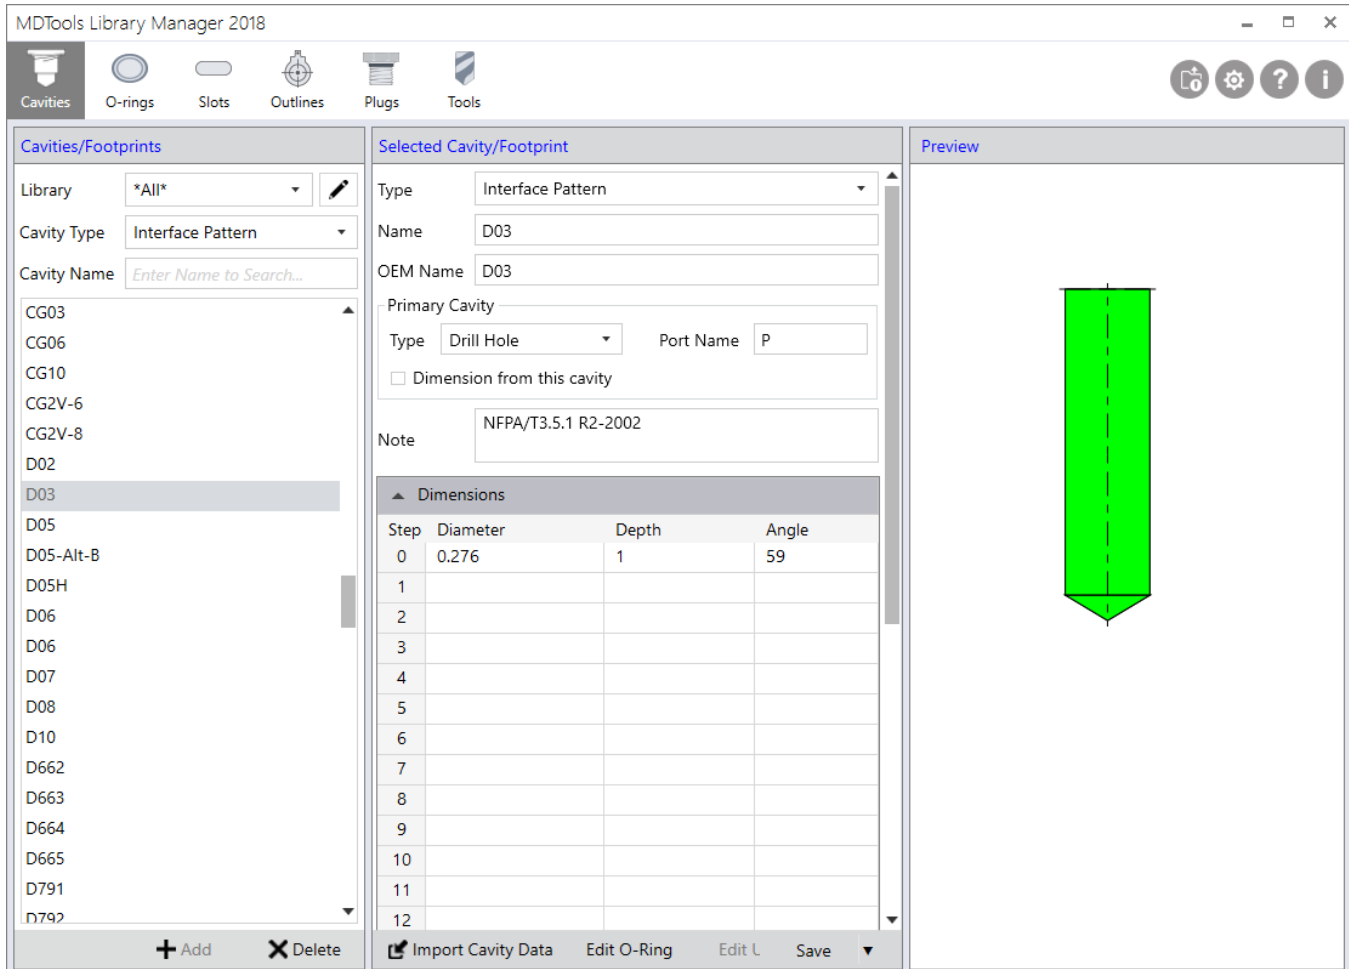

If a component in a circuit has more than one cavity, such cavities are grouped together to form footprints.

Footprints generally contain different type of cavities; bolt holes for mounting the component, locating pinholes for locating the component in the correct orientation, and drill holes for different ports on the component.

Creating footprints is the same as creating cavities; the only difference is that you need to create multiple cavities in the footprint.

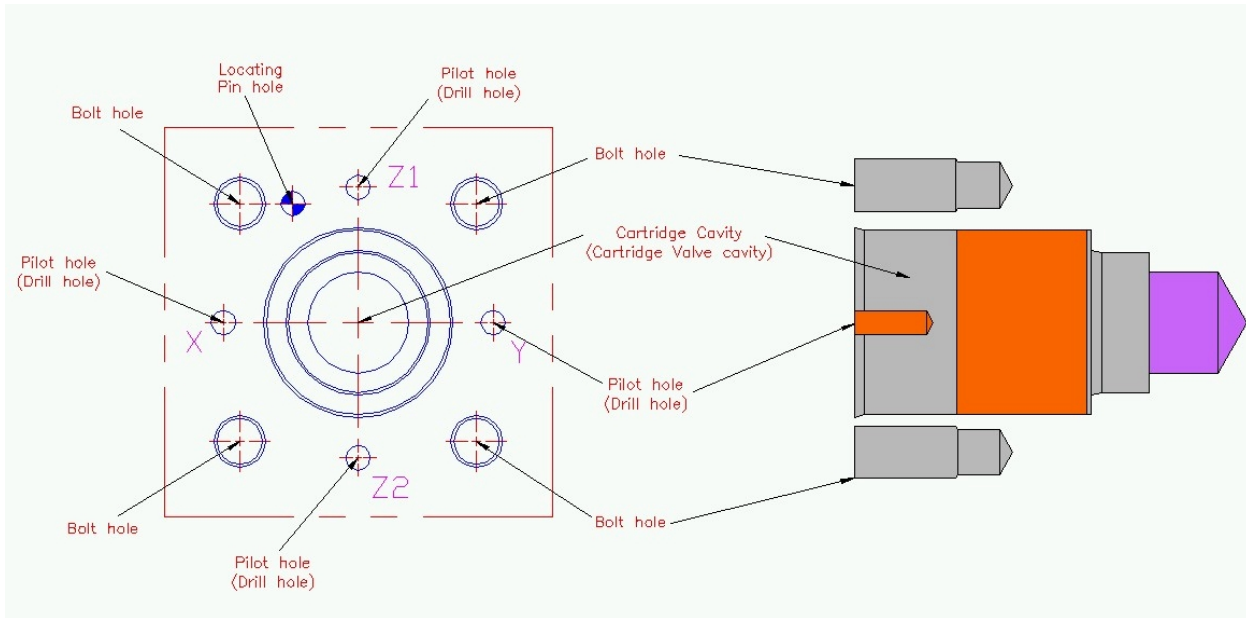

Typical slip-in cartridge valve footprint

14. Creating/Modifying Footprints

1. Select a Library to add or modify Footprints.

By default, *All* is selected.

Add option is enabled after selecting a library. Only cavities in the selected library display in the Cavities/Footprints list.

2. Select Cavity Type as **Flange** or **Interface**.

By default, *All* is selected. All type of cavities in the selected Library display in the Cavities/Footprint section.

3. Click the **Add** option, which is below the Cavities/Footprints list, to add new footprint.

or

Select a footprint from the Cavity/Footprint list to modify a footprint.

You can also search a footprint by entering the name of a footprint in the Cavity Name field.

The Selected Cavity/Footprint section displays.

4. Enter/modify the main cavity details.
5. Select Footprint type Interface Pattern or Flange.
6. Enter **Name** and **OEM Name** of a footprint.

Selected Cavity/Footprint

Type: Interface Pattern

Name: D03

OEM Name: D03

Primary Cavity Type: Drill Hole Port Name: DH

Dimension from this cavity

Note: NFPA/T3.5.1 R2-2002

Step	Diameter	Depth	Angle
0	0.276	1	59
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Maximum Drill Diameter: 0.276

Import Cavity Data Edit O-Ring Groove Edit Undercuts Edit Footprint Data Save

Threads			
Step	Size	Pitch	Class

Machining Sequence			
Operation	Diameter	Depth	Remarks
0	DRILL	\$STEPO	\$STEPO
1			
2			
3			
4			
5			
6			

Selected Cavity/Footprint section: D03 footprint data

Selected Cavity/Footprint

Type: Flange

Name: 1/2" Code 61

OEM Name: 1/2" Code 61 SAE Flange

Primary Cavity Type: Drill Hole

Dimension from this cavity

Note:

Step	Diameter	Depth	Angle
0	0.5	2	59
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

Maximum Drill Diameter: 0.5

Import Cavity Data Edit O-Ring Groove Edit Undercuts Edit Footprint Data Save

Threads			
Step	Size	Pitch	Class

Machining Sequence			
Operation	Diameter	Depth	Remarks
0	DRILL	\$STEPO	\$STEPO
1			
2			
3			
4			
5			
6			

Selected Cavity/Footprint section: 1/2" code 61 SAE Flange data

7. Enter **Primary Cavity** details.
The Primary cavity is created at the insertion point when the footprint is inserted on the manifold.

8. Select Primary Cavity **Type**.
For Interface Pattern, Primary cavity is one of the following type:

- Bolt Hole
- Drill Hole
- Cartridge Valve
- Locating Pin Hole

Primary Cavity Type for interface Pattern

For Flange, Primary cavity is one of the following type:

- Bolt Hole
- Drill Hole
- Port

9. Enter the **Port Application Name** of the cavity in the Port Application Name field.

The port application name is automatically entered, depending on the type of the cavity.

You can edit the port application name, if the cavity is a drill hole.

Port application name is the application name of the hole on the footprint.

For example A, B, T, and P are the application names of four working ports on a D03 footprint.

Primary Cavity Type for Flange

10. The **Dimension from this Cavity** option enables you to specify which cavity will be dimensioned in the block machining drawing, when you want to dimension only the reference cavity in a footprint.

*Only one cavity in an interface pattern or flange is selected as **Dimension from this Cavity**.*

Other cavities get automatically deselected, if Dimension from this Cavity is selected for the Primary cavity option.

*If other than primary cavity, the **Dimension from this Cavity** option is not selected. Then, Primary cavity is automatically selected.*

11. Enter **Cavity Geometry** details.

11. You can Attach/Delete O-ring groove to a Drill Hole (DH).

- Click **Edit O-ring Groove**.

The Select O-ring dialog box displays.

- Select the O-ring.
- Click **OK** to attach the selected O-ring groove corresponding to the O-ring.
- If O-ring is already attached to a cavity, then it displays as a selected O-ring.
- You can delete attached O-ring using the **Clear** option.

12. Click **Save** to save the cavity data into the library.

Note:


- Save the main cavity into the library to create other cavities in the footprint.
- The O-ring Groove will not appear on the Cavity Preview in the MDTools Library Manager.
- The O-ring Groove is available only for Drill Holes (DH).

Dash#	ID	OD	Width	Is C' Bore
-022	1	1-1/8	1/16	<input checked="" type="checkbox"/>
-023	1-1/16	1-3/16	1/16	<input type="checkbox"/>
-023	1-1/16	1-3/16	1/16	<input checked="" type="checkbox"/>
-024	1-1/8	1-1/4	1/16	<input type="checkbox"/>
-024	1-1/8	1-1/4	1/16	<input checked="" type="checkbox"/>
-025	1-3/16	1-5/16	1/16	<input type="checkbox"/>
-025	1-3/16	1-5/16	1/16	<input checked="" type="checkbox"/>
-026	1-1/4	1-3/8	1/16	<input type="checkbox"/>
-026	1-1/4	1-3/8	1/16	<input checked="" type="checkbox"/>
-027	1-5/16	1-7/16	1/16	<input checked="" type="checkbox"/>
-027	1-5/16	1-7/16	1/16	<input type="checkbox"/>
-028	1-3/8	1-1/2	1/16	<input type="checkbox"/>
-028	1-3/8	1-1/2	1/16	<input checked="" type="checkbox"/>
-029	1-1/2	1-5/8	1/16	<input type="checkbox"/>
-029	1-1/2	1-5/8	1/16	<input checked="" type="checkbox"/>
-030	1-5/8	1-3/4	1/16	<input type="checkbox"/>
-030	1-5/8	1-3/4	1/16	<input checked="" type="checkbox"/>
-031	1-3/4	1-7/8	1/16	<input type="checkbox"/>
-031	1-3/4	1-7/8	1/16	<input checked="" type="checkbox"/>
-032	1-7/8	2	1/16	<input checked="" type="checkbox"/>
-032	1-7/8	2	1/16	<input type="checkbox"/>

Clear OK Cancel

Select O-ring

15. Editing Footprint Child Cavities

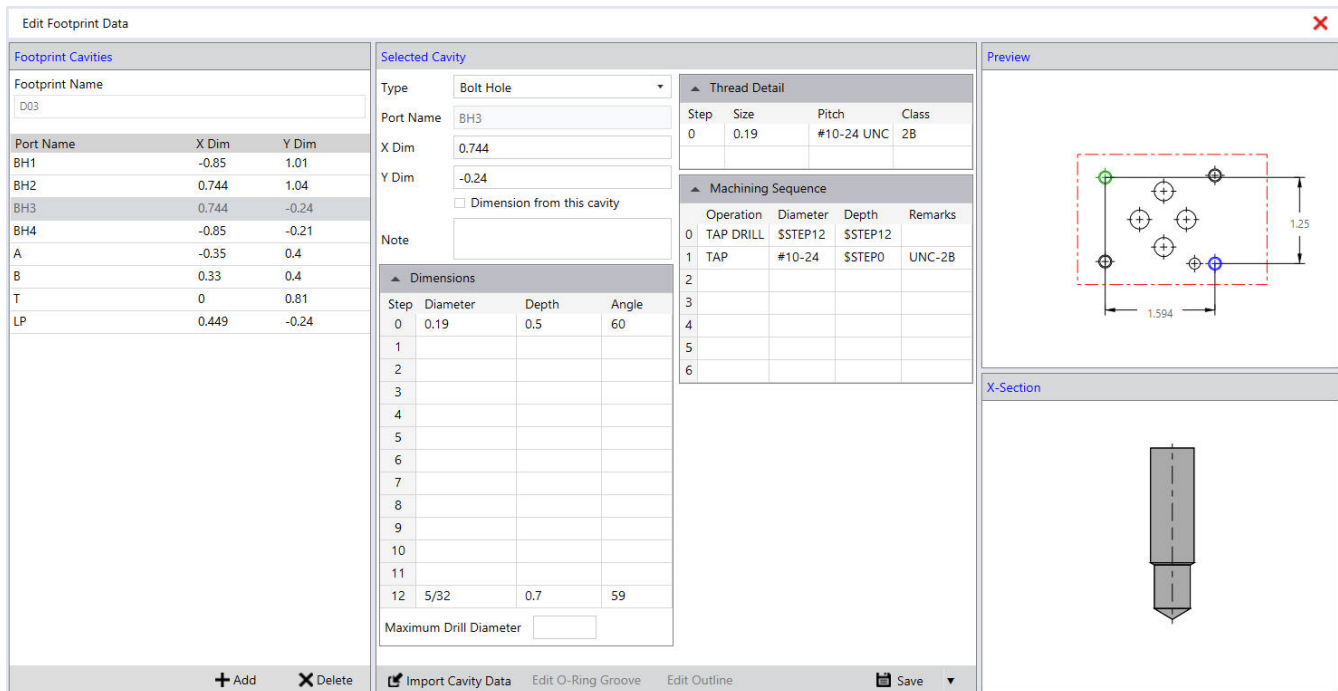


Edit Footprint Data section: D03 footprint data

- Click Edit Footprint Data to create other cavities in the footprint.
The Edit Footprint Data section displays.
- Click **Add** option to add new cavity.
- Select **Type** for Child Cavity
If Interface pattern, child cavity is one of the following type:
 - Bolt Hole
 - Drill Hole
 - Locating Pin Hole
 If flange, child cavity is one of the following type
 - Bolt Hole
 - Drill Hole
- Enter the following details:
 - Cavity Dimensions
 - Thread Details, if any
 - Port Application Name
 - Cavity X Dim and Cavity Y Dim
 - Cavity Machining Sequence
- Click **Edit O-ring Groove** and select the O-ring, if required.

Note:

- The O-ring Groove will not appear on the Cavity Preview in the MDTools Library.
- The O-ring Groove is available only for Drill Holes (DH).

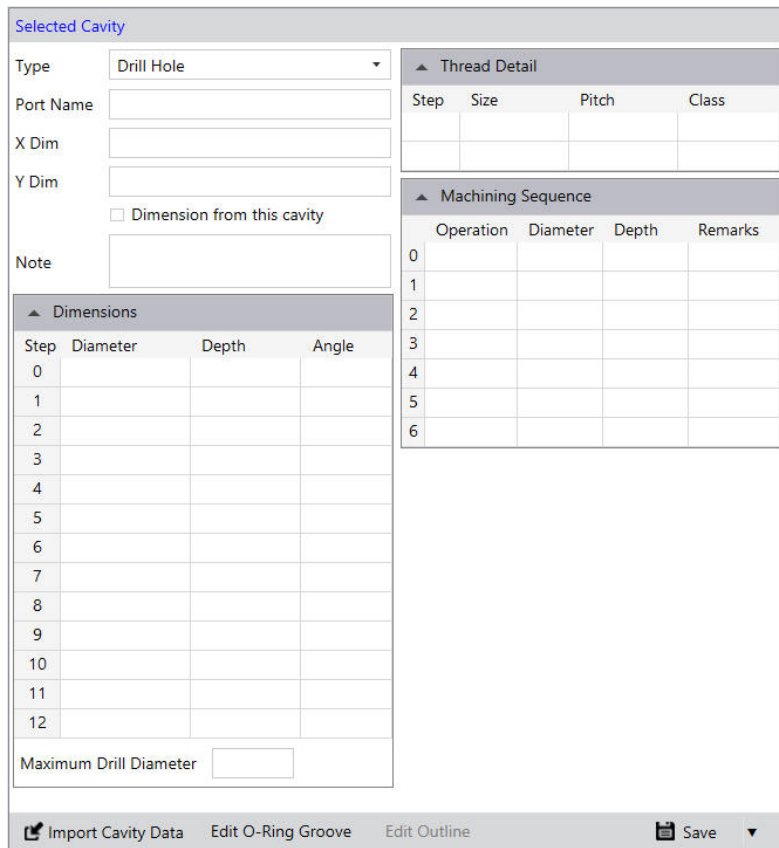

Edit Footprint Data section: Add Cavity

- Click **Save** or **Save As** to add the cavity to the footprint data.


When you add a cavity to the footprint, the cavity displays in the list of cavities in the footprint.

This list contains the following details:

- Port Application Name
- Cavity X Dim
- Cavity Y Dim

Note:

- You can modify the cavity after selecting the cavity from the Cavity list.
- When you select the cavity, the cavity details are displayed in the Add/Modify Footprint dialog box.
- After modifying the cavity, click Add/Modify to save the changes to the library.
- To delete a cavity from the footprint, select the cavity from the list and click Delete.

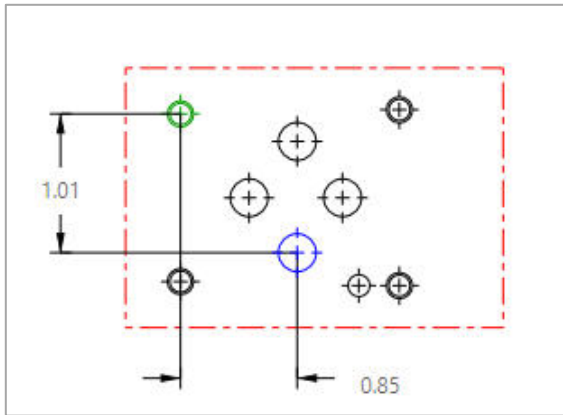

D03 footprint preview

Port Application Name

The default port application name for different type of cavities are:

Cavity Type	Port Application Name
Cartridge Valve	CV
Port	Port
Drill Hole	DH
Bolt Hole	BH
Locating Pin Hole	LP


You can only change the port application name of drill holes.

Cavity X and Y Dim

Cavity X and Y dim are the X and Y dimensions of cavities in the footprint from the main cavity entered on the selected cavity section.

Note:

When you create a footprint you need to enter the X and Y dimensions for all the cavities created on the Edit Footprint Data dialog box.

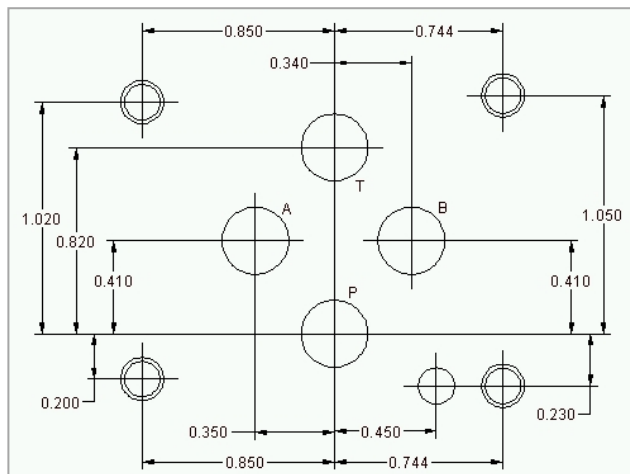

D03 footprint showing X and Y Dim from 'P' port

16. Creating/Modifying Footprint Outline

Footprint outline dimensions are stored with the First Bolt Hole in a footprint.

1. Select the first bolt hole (BH1) from the cavity list on the *Edit Footprint Data* dialog box.

2. Click **Edit Outline**.


The Edit Outline option is enabled automatically on selecting the First Bolt hole.

The Add/Modify Envelope dialog box displays.


3. Select the **Type** of envelope.
4. Enter the respective envelope value.
5. Click **Save** to save the data.

Note:

- The Footprint envelope can only contain two types of entities, Line and Arc.
- The Footprint envelope data is stored with the First Bolt Hole in the footprint.



Edit Outline option

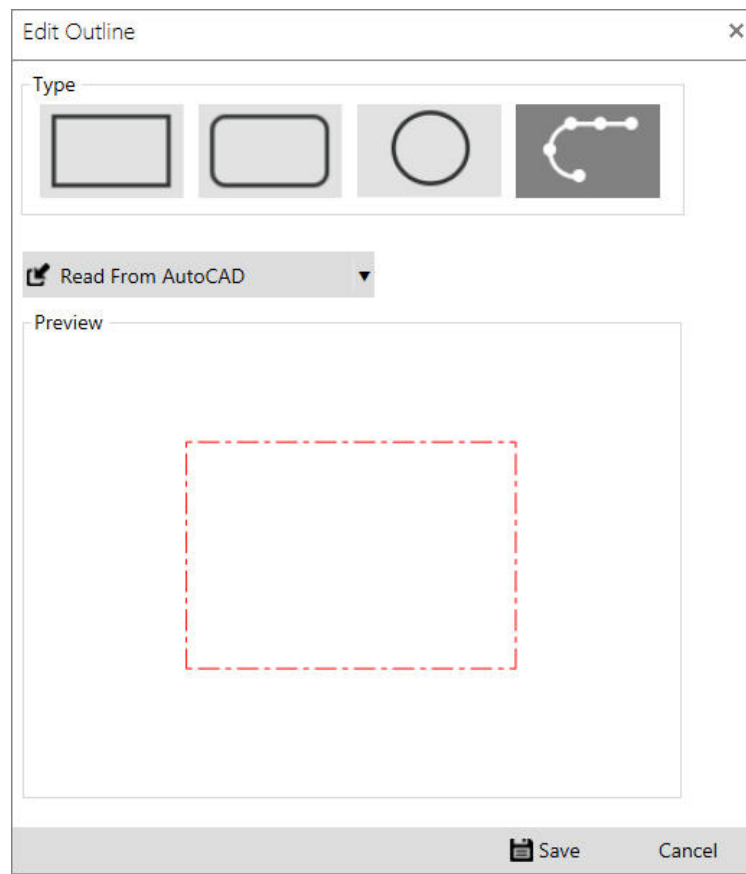

Edit Outline dialog


Special Cavities

- 17 Creating O-ring Grooves
- 18 Creating Slots

17. Creating O-ring Grooves


Store the O-ring grooves with and without counterbore data in the MDTools Library.
O-ring is available for only Drill Hole (DH) type cavities.

- MDTools Library Manager ribbon > **O-rings**
The O-ring Grooves & Counter bore list displays as per Units and Library path selected in options command.
- Click **Add** to create a new O-ring groove.
- Enter the O-ring Size details,
 - Dash #
 - ID
 - Width*The OD is automatically displayed based on the ID and the width.*
- Select the type, Groove/Counter Bore.
- Enter the O-ring groove details,
 - OD
 - Width
 - Depth
 - Corner Radius

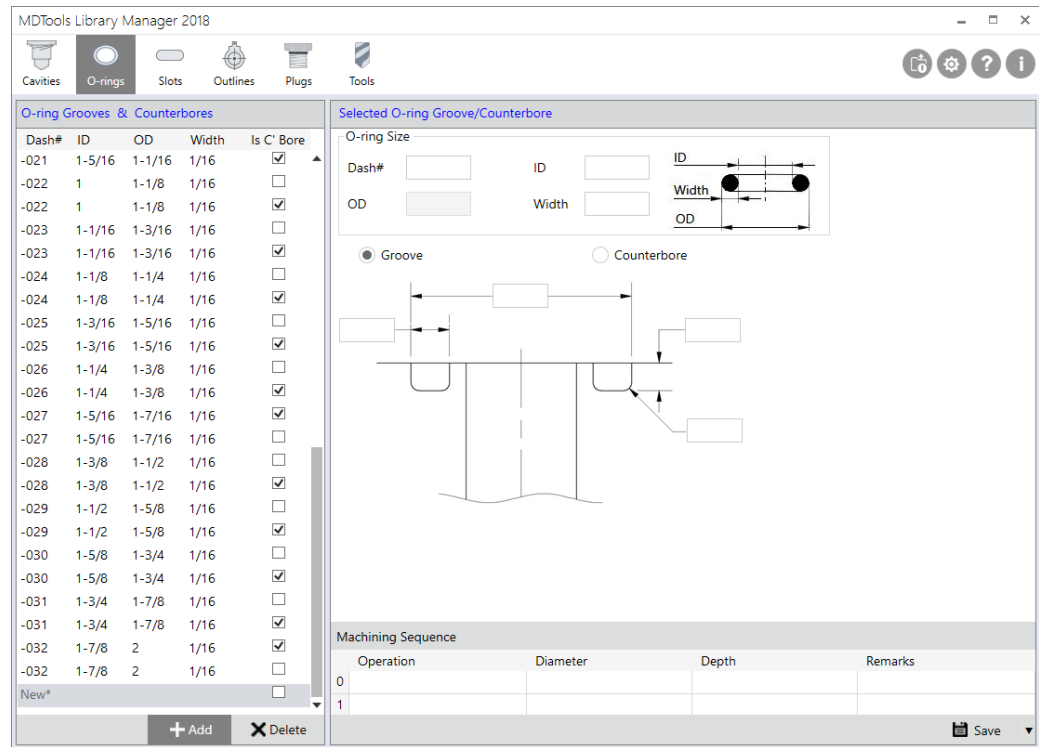

Add O-ring Grooves

- Enter **Machining Sequence**.
- Click **Save** to save O-ring groove.
- Added O-ring displays in O-ring Grooves and Counter Bore list.
- Select the existing O-ring groove; modify the values and click **Save** to save and **Save As** to save as new O-ring.
- Select the existing O-ring groove; click **Delete** to delete the selected O-ring groove.

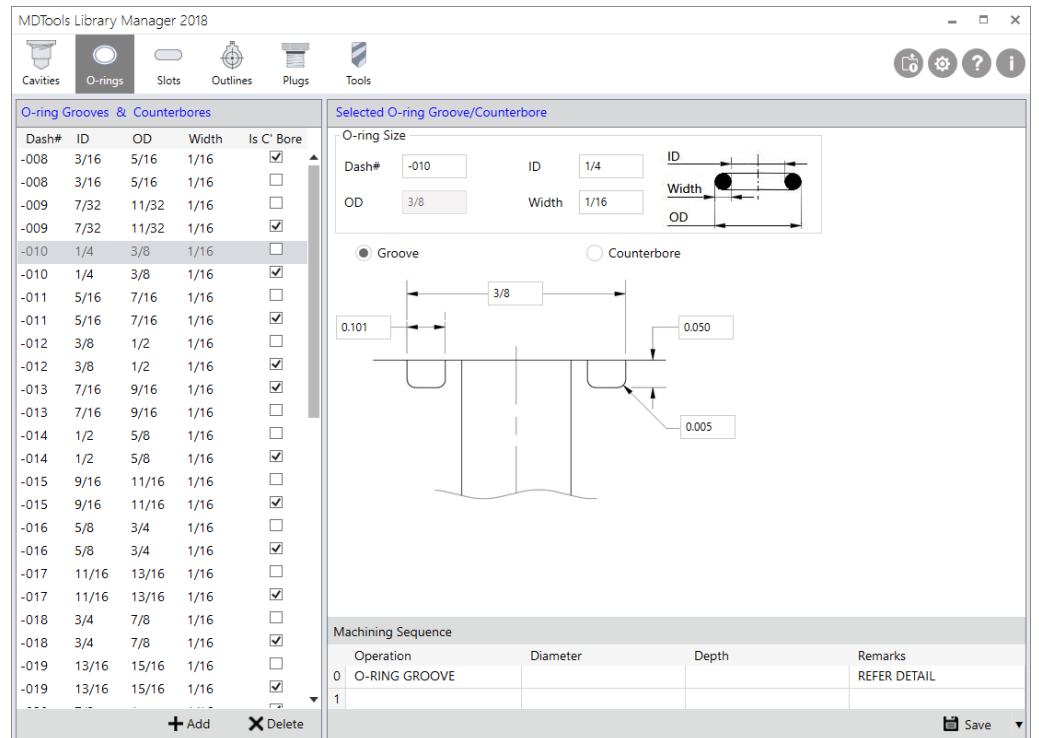

Modify O-ring Grooves

18. Creating Slots


Store Slot details in the MDTools Library.

1. MDTools Library Manager ribbon >**Slots**


List of existing slots displays as per Unit and Library path selected in Options.

2. Click **Add** to add new slots.
3. Enter **Slot ID**.
4. Enter **Slot Depth**.
5. Enter the slot **Diameter** and **Width**.
6. Enter **Machining Sequence**.
7. Click **Save** to save a new slot.
Added slot displays in the Slots list.
8. Select the existing slot; modify the values and click **Save** to save or **Save As** to save as new slots.
9. Select the existing slot; Click **Delete** to delete the selected slot.

Slot deleted from the library.

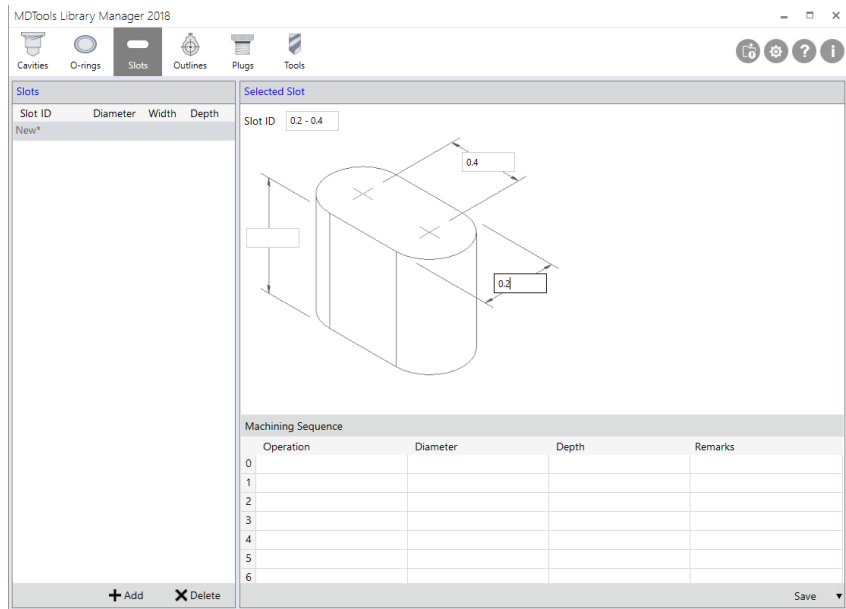


Add Slot

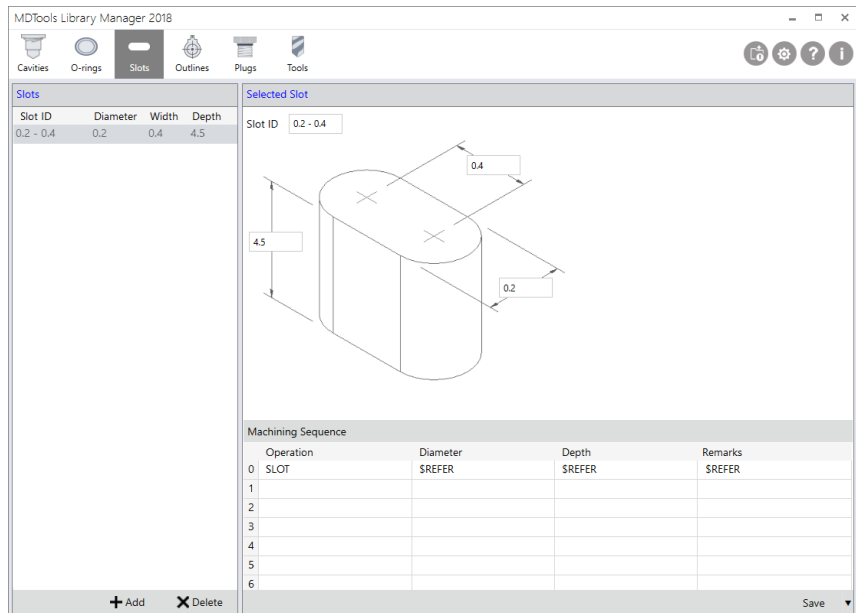

Modify Slot

Outlines

- 19 Creating Outlines
- 20 Reading Envelope Data from AutoCAD
- 21 Reading Envelope Data from Inventor
- 22 Reading Envelope Data from SolidWorks

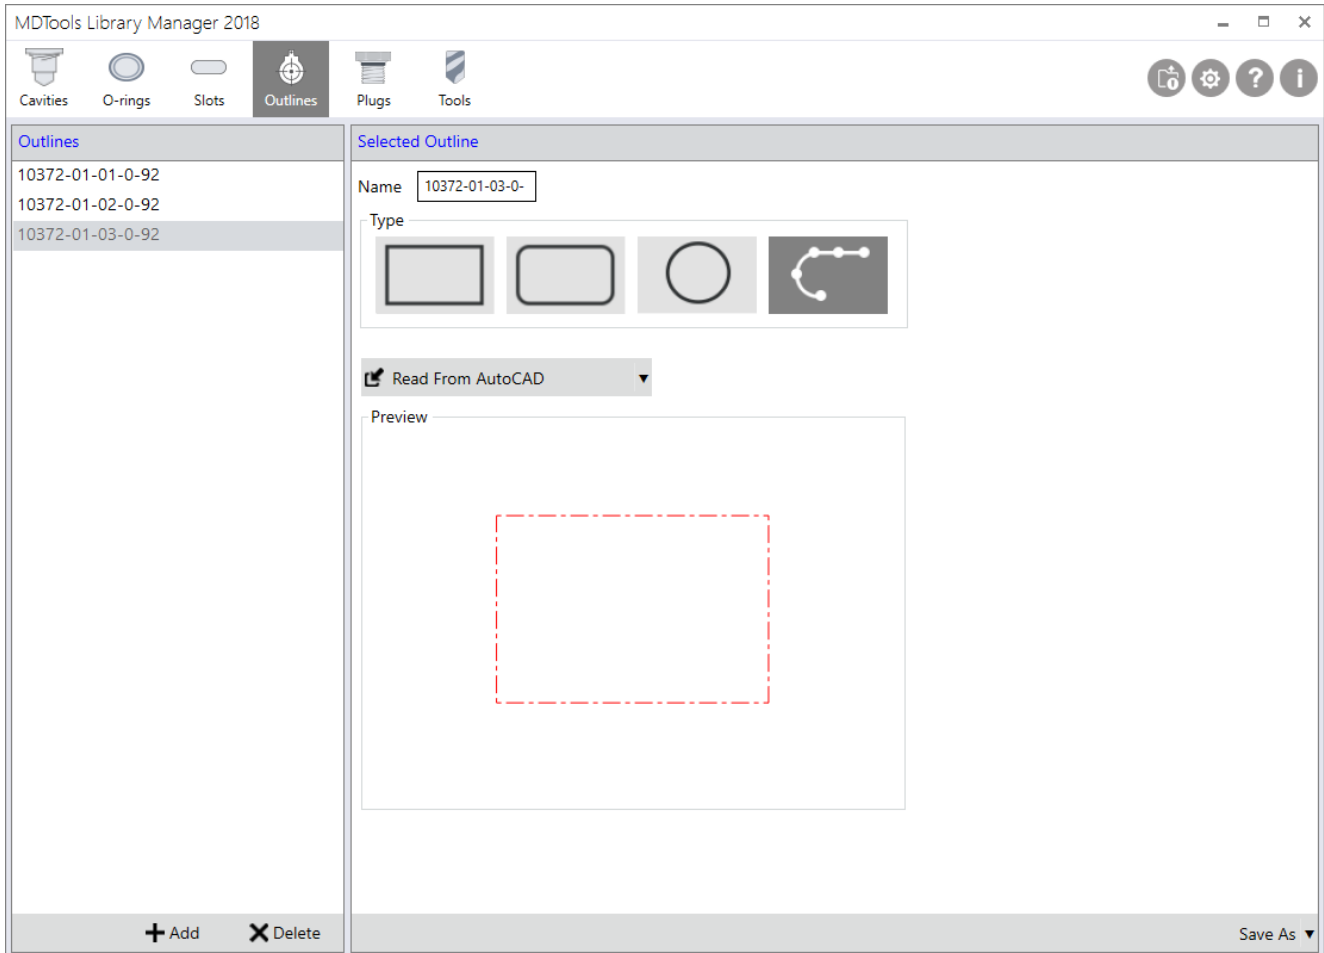

19. Creating Outlines

Create outlines (assembly envelopes) for the MDTools® valves

1. MDTools Library Manager ribbon
> **Outlines**

The Outlines and Selected Outline sections display.


2. Click Add to add new outline
3. Enter the Outline Name.
4. Select the Type of Outline.

Rectangle type gets selected by default for new outlines.

5. Enter Width and Height of outline.
6. Enter X and Y coordinate for the center.

The X and Y coordinates must be entered with respect to the cavity center or the center of the main cavity in the footprint.

7. Click **Save** to save an outline.

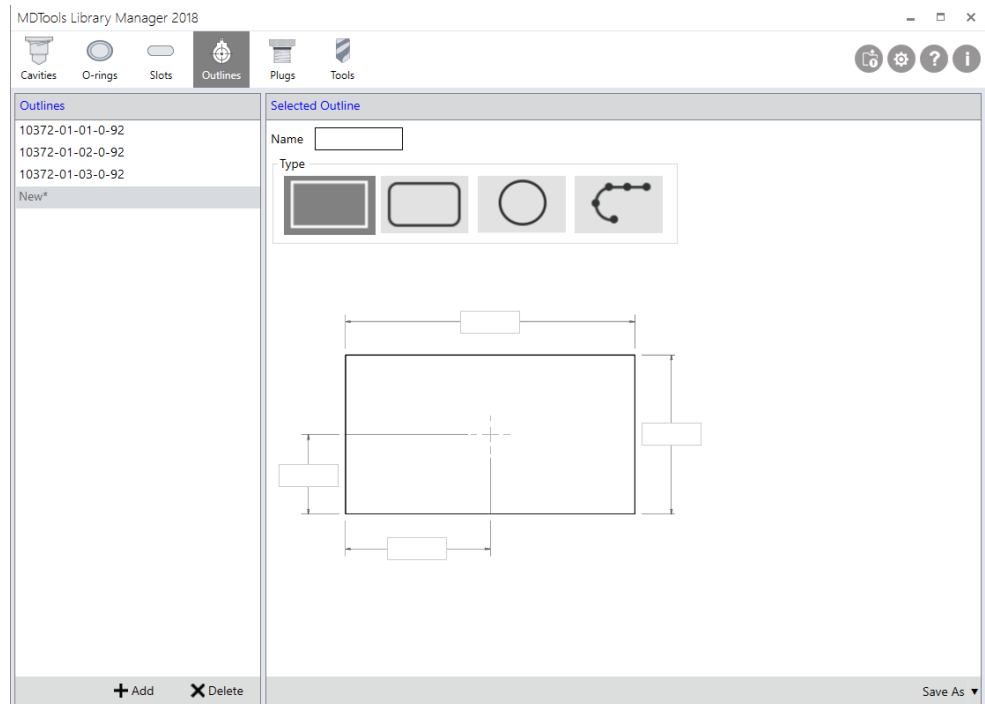

Add Outline

Note:


- Two separate databases are used to store the outline library in Inch and Metric units.
- MDTools® does not provide an Outline Library. Use MDTools Library Manager to create your own library.
- All existing outline created using lower version than MDTools Library Manger 2018 treated as custom type outlines.
- You can change the outline type by selecting appropriate outline Type.

1. Adding Rectangular Outlines

1. Click **Add** to add new outline.
2. Enter the **Name**.
3. Select the **Type** as rectangle.
4. Enter outline Width and height.
5. Enter X and Y coordinate for the center.

The X and Y coordinates must be entered with respect to the cavity center or the center of the main cavity in the footprint.


6. Click **Save** to save the outline data.

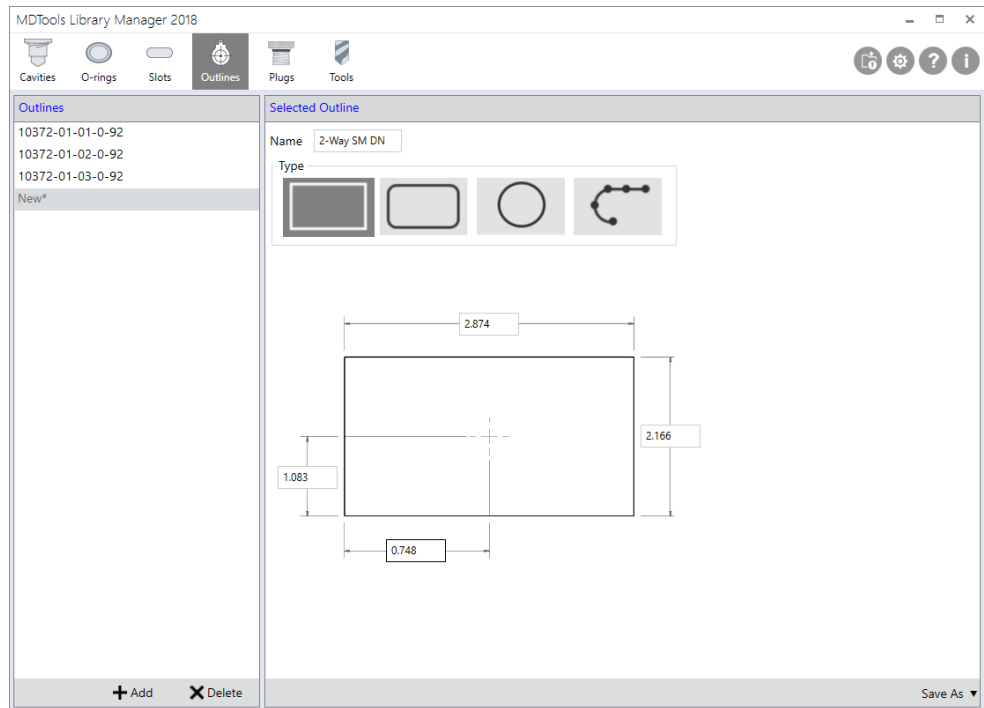

MDTools Library Manager 2018: Outlines

2. Modifying Rectangular Outline

1. Select an outline from outlines list.
2. Make the desired changes.
3. Click **Save** to save or **Save As** to save as new outline.

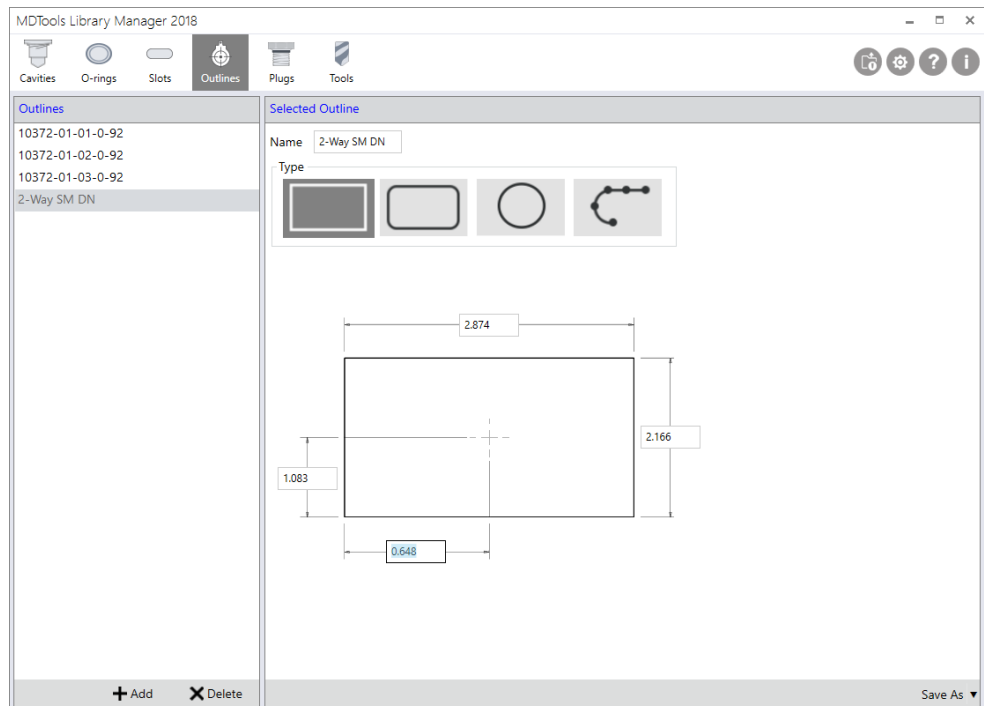

Modifying a rectangular outline


3. Adding Rounded Rectangular Outline

1. Click **Add** to add new outline.
2. Enter the outline **Name**.
3. Select the **Type** as Rounded Rectangle.
4. Enter outline Width and height.
5. Enter Corner radius
6. Enter X and Y coordinate for the center.

The X and Y coordinates must be entered with respect to the cavity center or the center of the main cavity in the footprint.

7. Click **Save** to save the outline data.

Added Outline displays in Outlines' list.

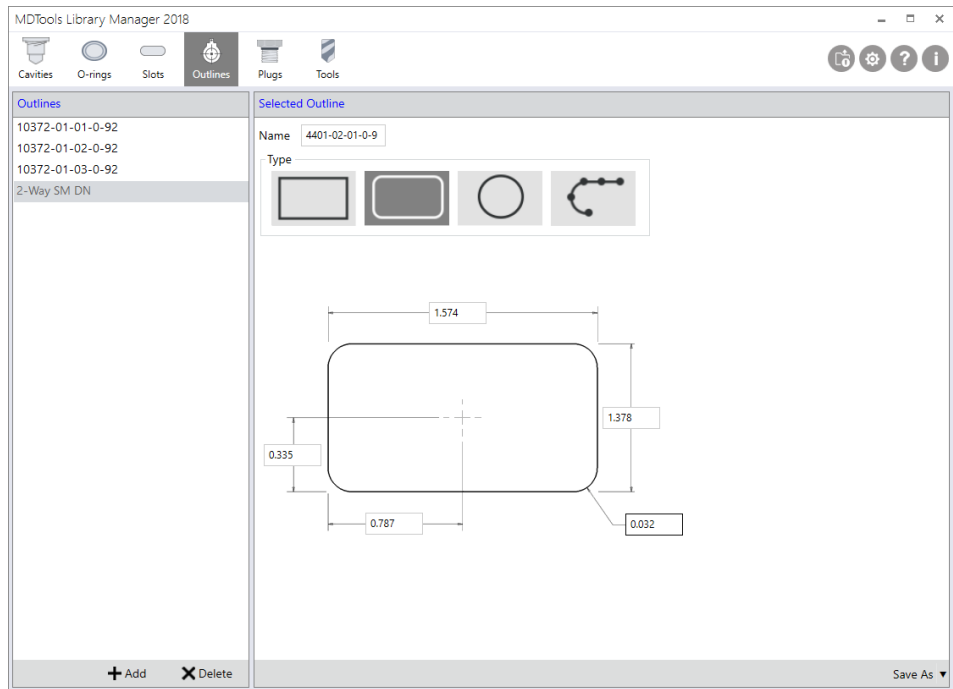


Adding a rounded rectangular outline

4. Modifying Rounded Rectangular Outline

1. Select an outline from outlines list.
2. Make the desired changes.
3. Click **Save** to save or **Save As** to save as new outline.


Saved outline displays in Outlines list.

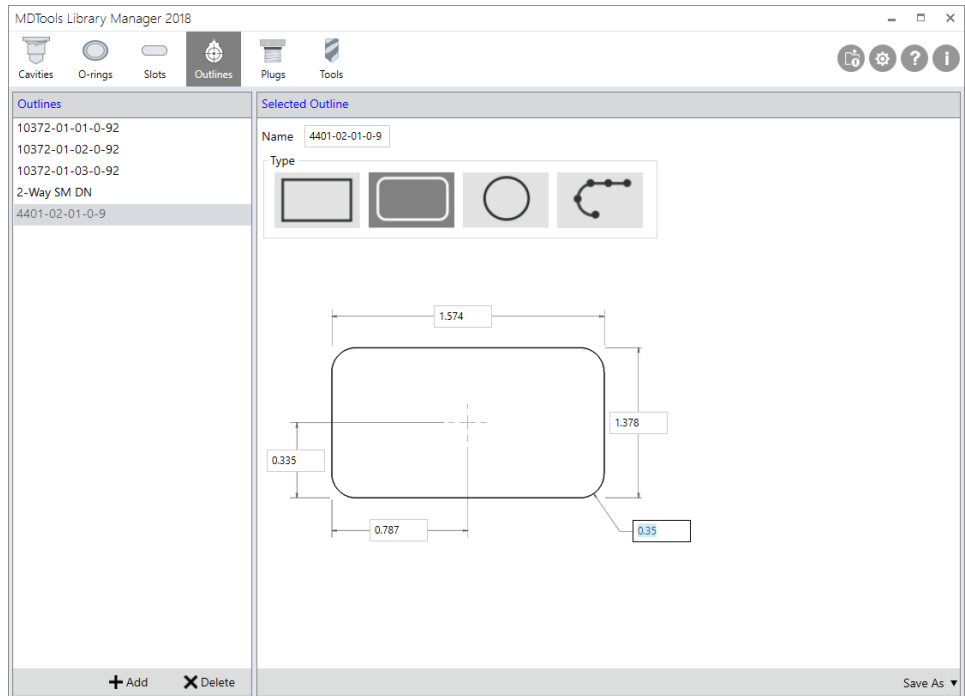

Modifying a rounded rectangular outline

5. Adding Circular Outlines


1. Click **Add** to add new outline.
2. Enter the outline **Name**.
3. Select the **Type** as Circle.
4. Enter outline **Radius**
5. Click **Save** to save the outline data.

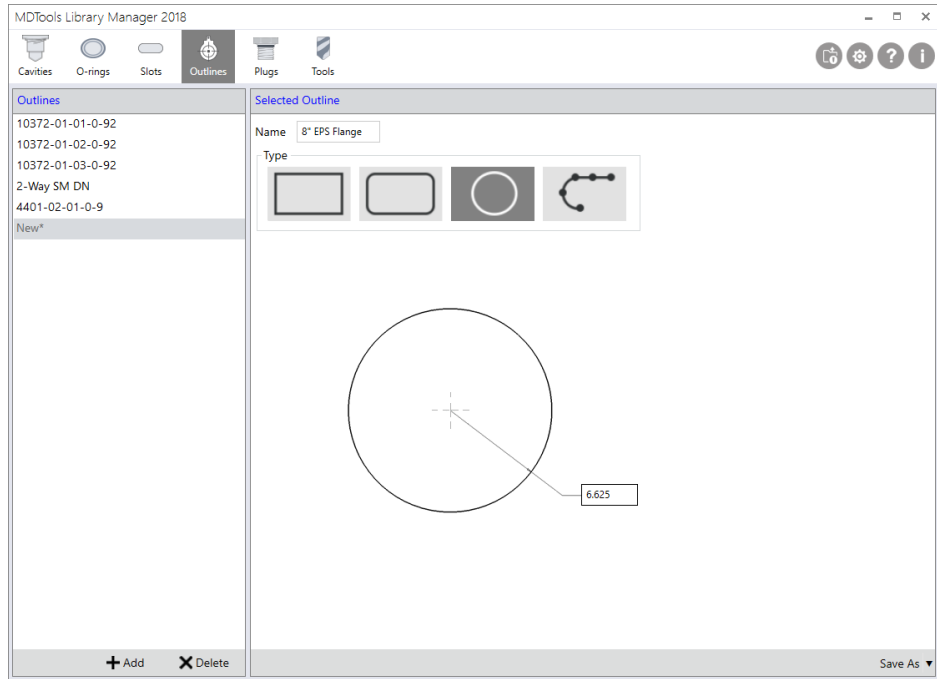

Adding a circular outline

6. Modifying Circular Outlines


1. Select an outline from outlines list.
2. Make the desired changes.
3. Click **Save** to save or **Save As** to save as new outline.

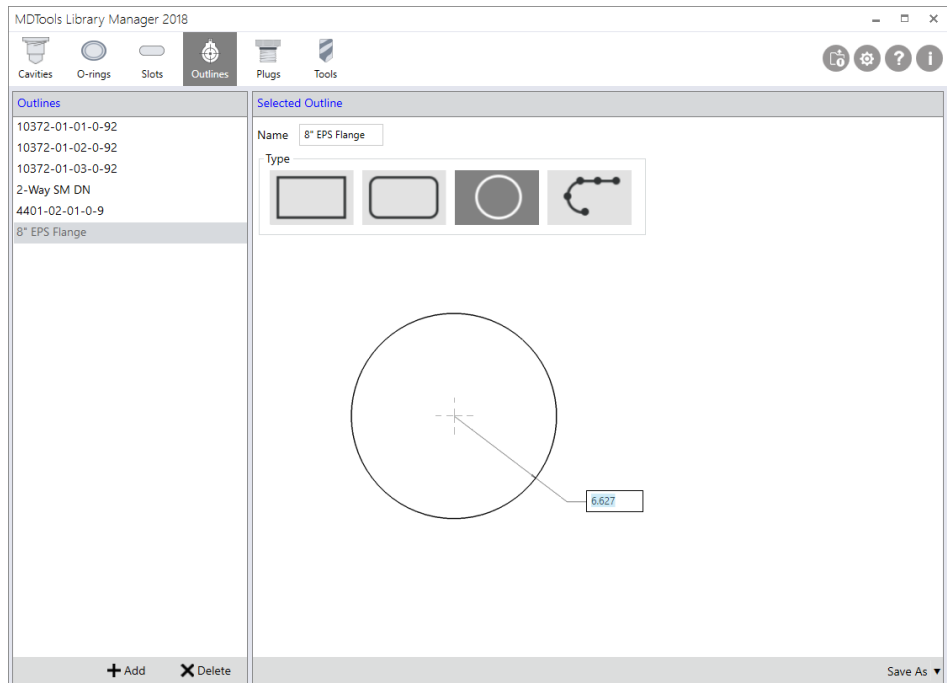

Modifying a circular outline

7. Adding Custom Outlines


1. Click **Add** to add new outline.
2. Enter the outline **Name**.
3. Select the **Type** as Custom.
 You can import outline data from AutoCAD, Inventor and SolidWorks drawing.
Open the AutoCAD/Inventor/SolidWorks drawing, which has the envelope design and has to be imported into MDTools.
4. Click the **Read from AutoCAD/ Inventor/ SolidWorks** option.
5. Select the **Reference Point** and **Entities**.
Preview of imported outline displays in preview section.
6. Click **Save** to save the outline data.

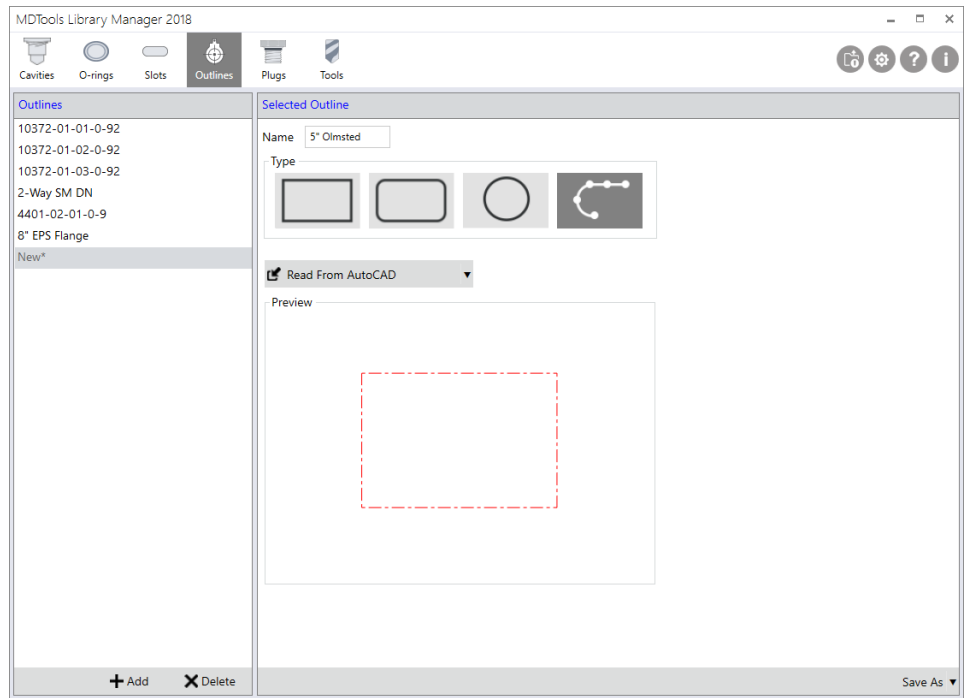

Adding a custom outline

8. Modifying Custom Outlines


1. Select an outline from outlines' list.
2. If selected outline type is *Custom*, you must import outline data from AutoCAD, Inventor or SolidWorks drawing again.
3. Click **Save** to update the selected outline or **Save As** to save as new outline.

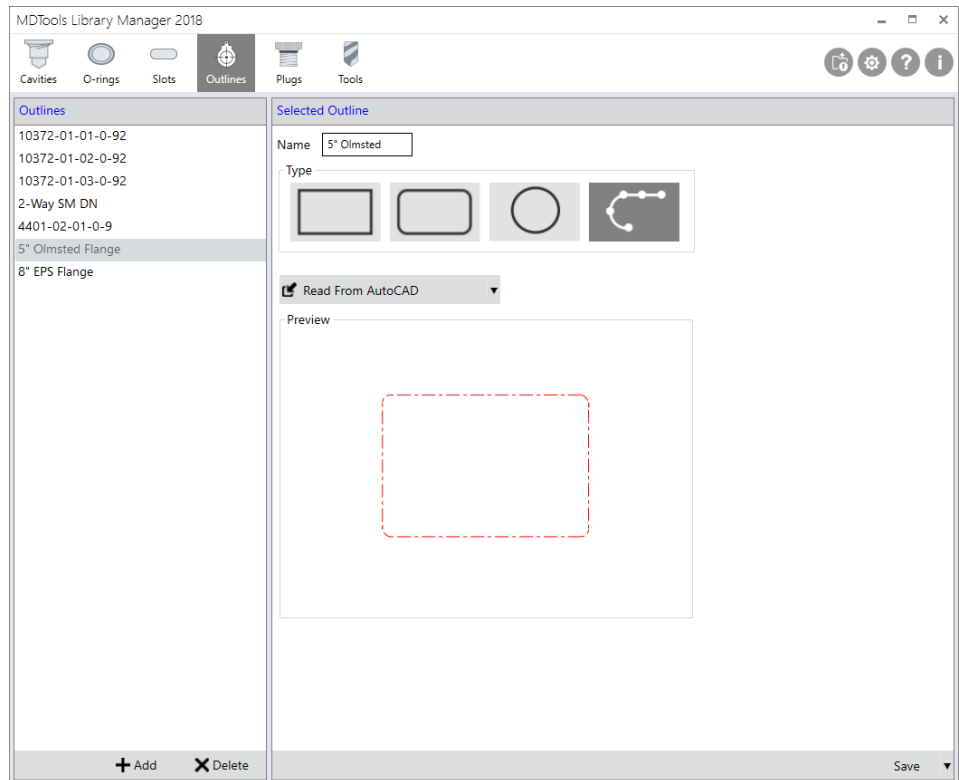

Modifying a custom outline

20. Reading Outline Data from AutoCAD

1. Click **Add** to add new outline.
2. Enter **Outline Name**.
3. Select the Outline **Type** as **Custom**.
4. Open the AutoCAD drawing that has the envelope design that is to be imported into MDTools.
5. Click the **Read from AutoCAD** option.

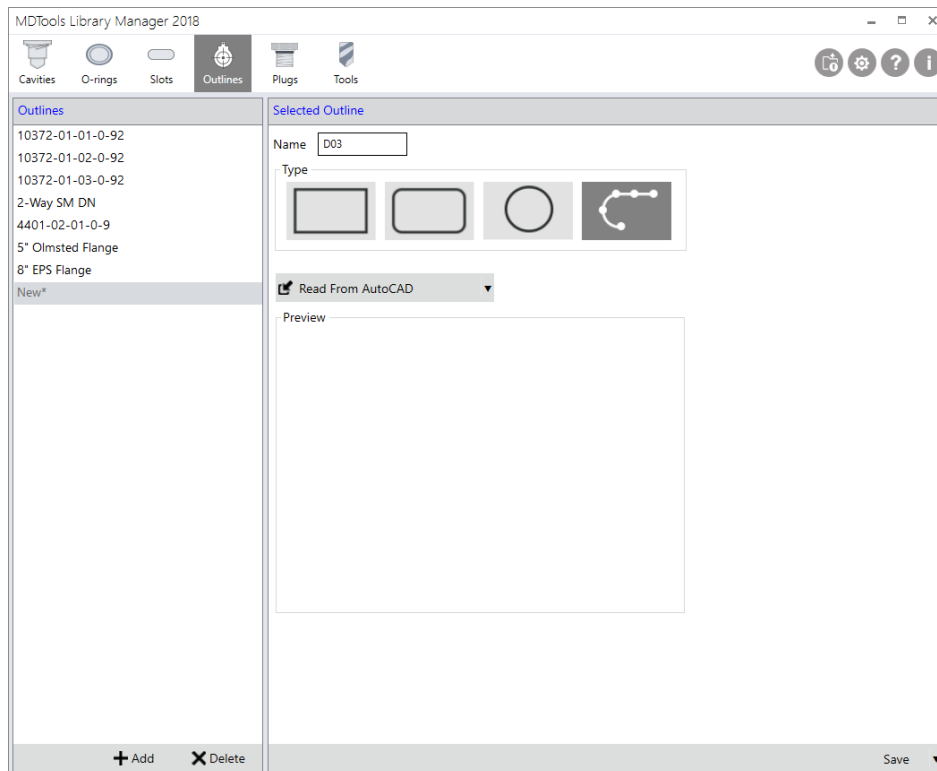


Create Custom Assembly Outline

The **Read Outline** dialog box displays in the AutoCAD drawing window.


6. **Reference Point** option gets selected and click on the AutoCAD drawing window.

This ensures that the focus is changed.

7. Select a **Reference Point**.

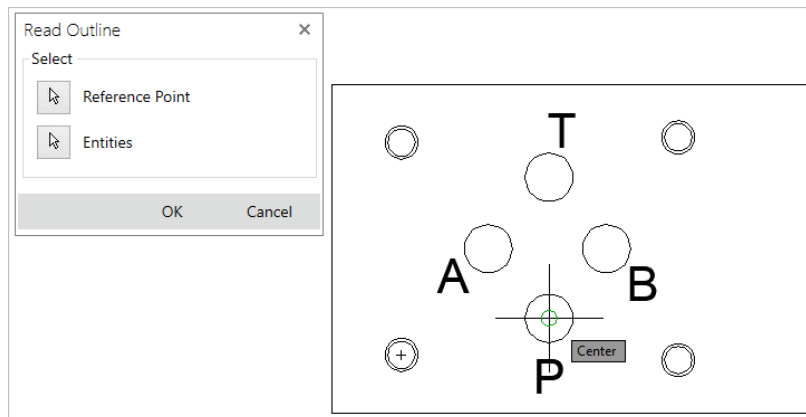

Read Outline - Reference Point Selection

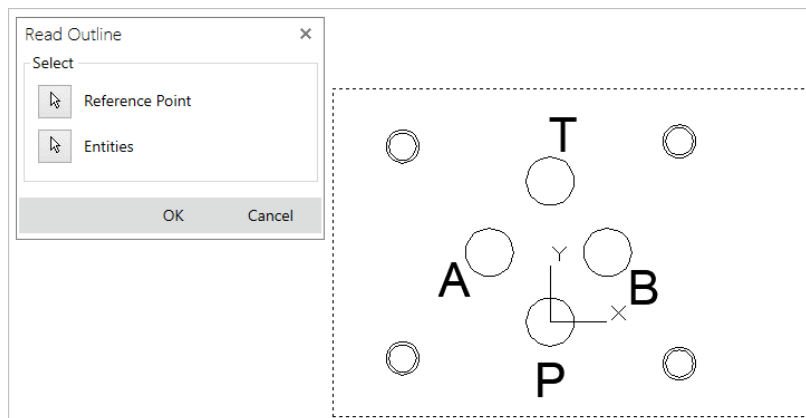


Read Outline - Entities Selection

8. Select the envelope entities in the AutoCAD drawing.
9. Press **Enter** or the **Spacebar** to complete the selection.
10. Click the **OK** button.
The outline data imported and assigned to the selected envelope name.
11. Click **Save** to update the existing or **Save As** to save as new outline.

Note:

MDTools Library Manager 2018 supports AutoCAD 2010 and higher.

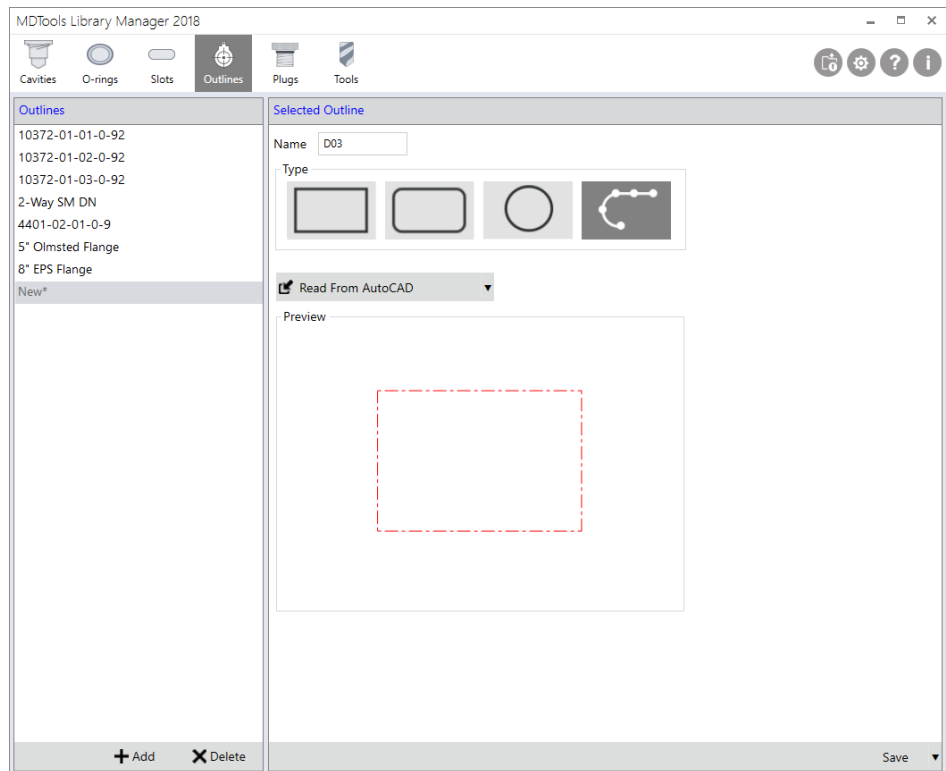


Outline Library with Imported Envelope

21. Reading Outline Data from Inventor


1. Click **Add** to add new outline.
2. Enter **Outline Name**.
3. Select the Outline **Type** as **Custom**.
4. Open the Inventor drawing that has the envelope design to be imported into MDTools.
5. Click the **Read from Inventor Drawing** option from dropdown.

*The **Read Outline** dialog box displays in the Inventor drawing window.*

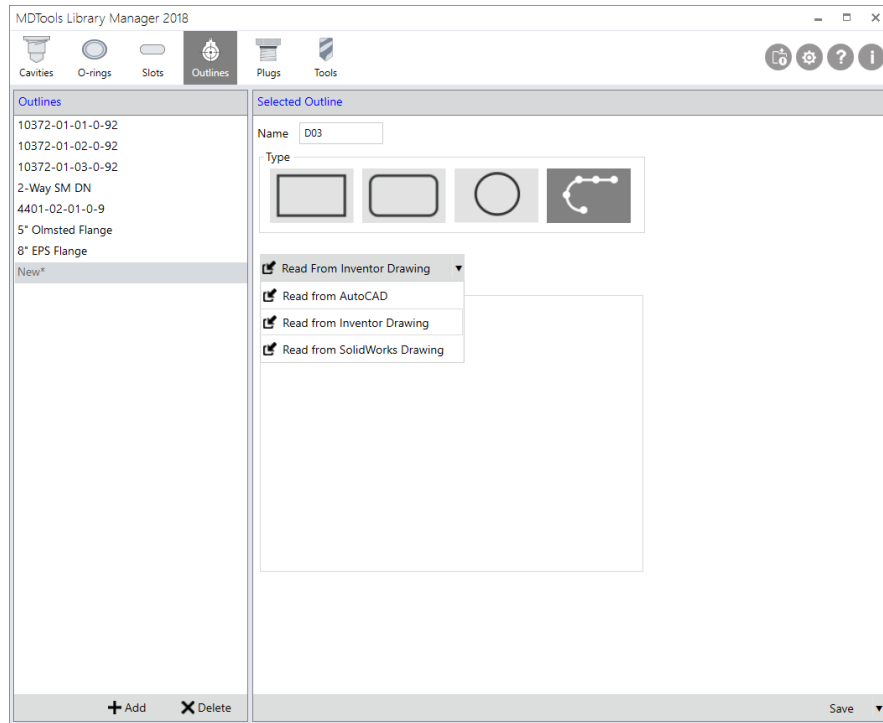


Create Custom Assembly Outline

6. Select the **Reference Point**.

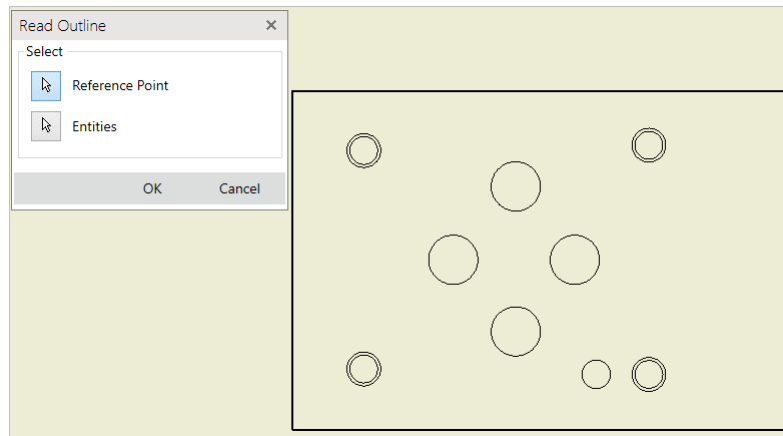


Read Outline- Reference Point Selection

7. Select the **Entities** in the Inventor drawing.

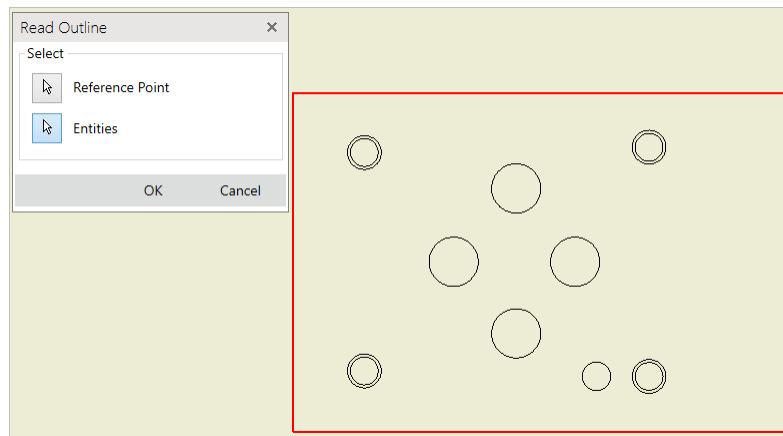

Read Outline- Entities Selection

8. Click **OK** button.
The outline data imported and assigned to the selected envelope name.
9. Click **Save** to save or **Save As** to save as new outline.
Saved outline displays in outlines' list.

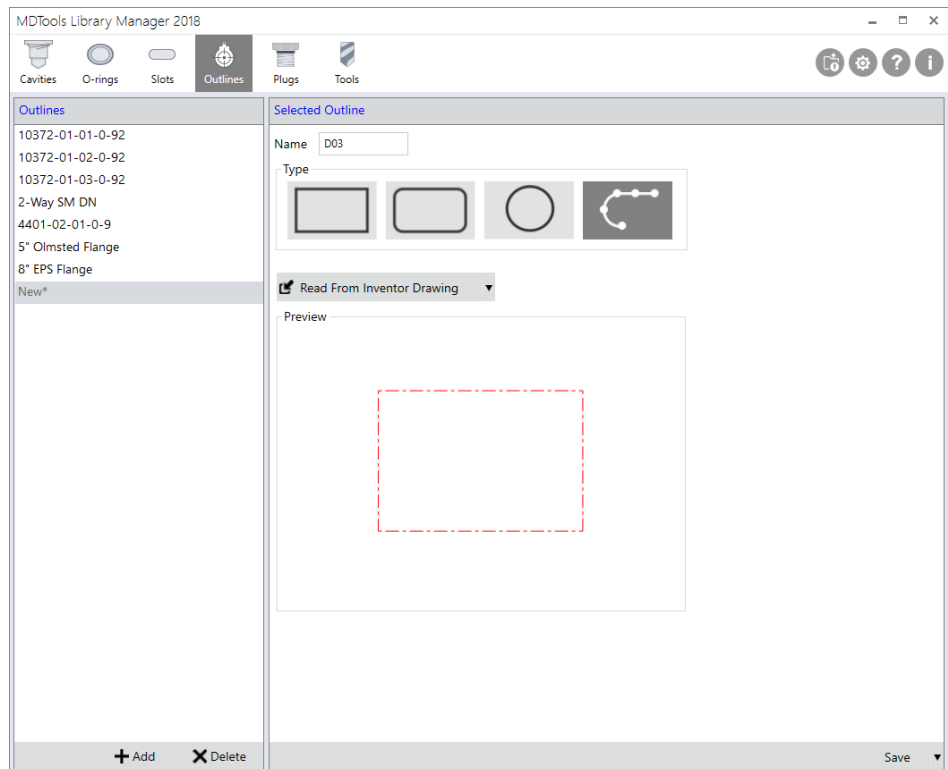


Outline Imported

22. Reading Outline Data from SolidWorks

1. Click **Add** to add new outline.
2. Enter **Outline Name**.
3. Select the Outline **Type** as **Custom**.
4. Open the SolidWorks drawing that has the envelope design that to be imported into MDTTools.
5. Click the **Read from SolidWorks Drawing** option from dropdown.

The Read Outline dialog box displays in the SolidWorks drawing window.

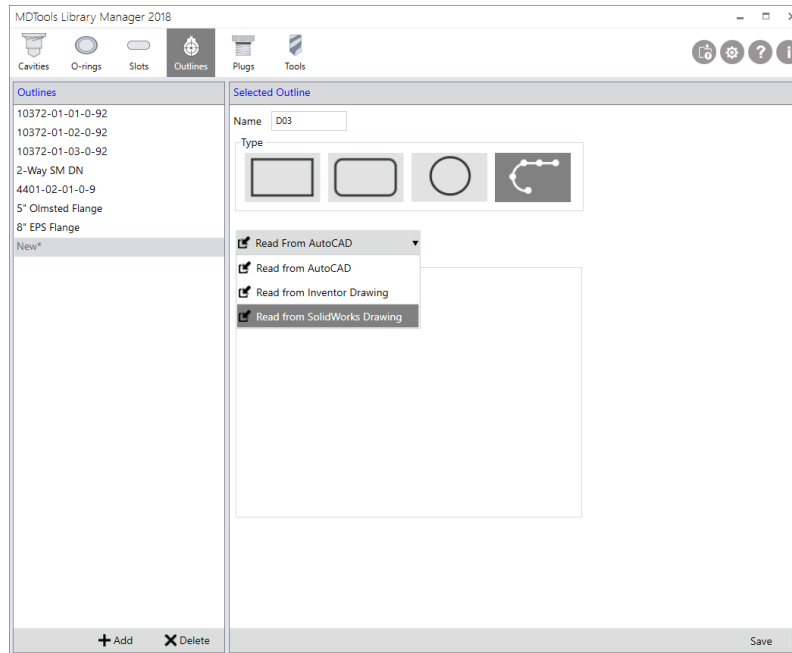


Create Custom Assembly Outline

6. Select the **Reference Point**.
7. Select the **Entities** in the SolidWorks drawing.
8. Click the **OK** button.


The envelope data imported and assigned to the selected envelope name.

9. Click **Save** to save or **Save As** to save as new outline.

Saved outline displays in outlines list.

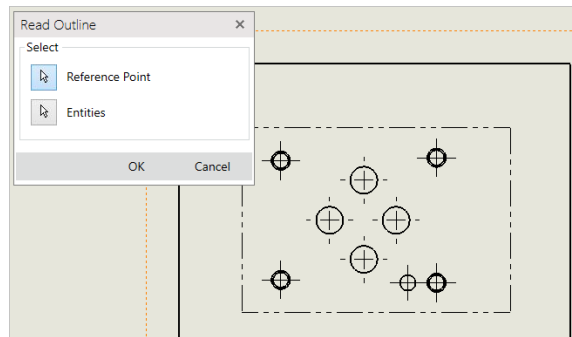

Read Outline dialog box

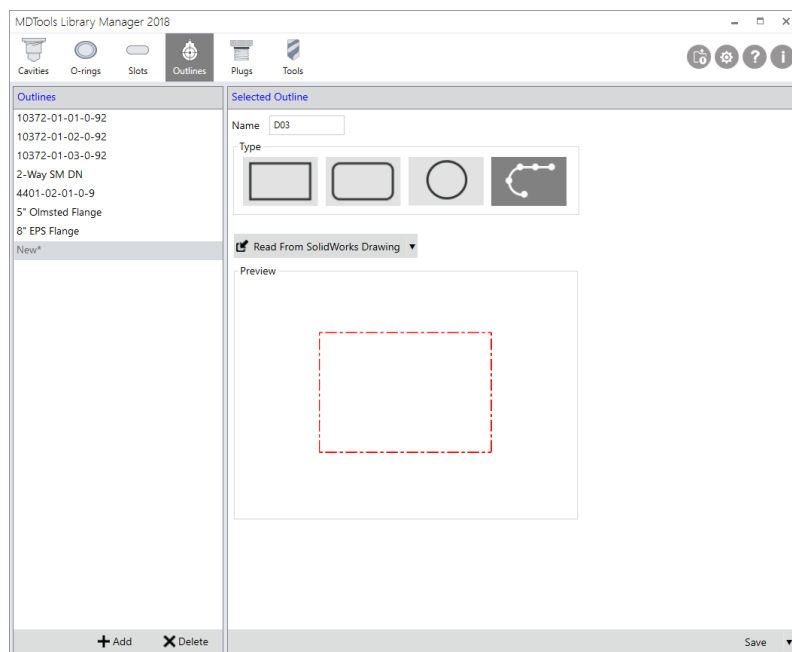

Outline imported


Plugs

- 23 Assigning Plug Models for Construction Ports
- 24 Linking a Plug File with a Construction Port
- 25 De-Linking a Plug File with a Construction Port

23. Assigning Plug Models for Construction Ports


Assign Plug Models for Construction Ports to enable auto assembly of the plugs.

1. MDTools Library Manager ribbon
> **Plugs**
2. Select **Show Plug Ports Only** to list only Ports defined as **Plug Ports**.
*By default, *Show Plug Ports Only* is not selected.*
3. Select a library to list the construction ports in the selected library.
*By default, *All* is selected.*
4. Perform the following operations from the Plugs Command:
 - Assign Plug file with cavity
 - Modify Plug file assigned with cavity

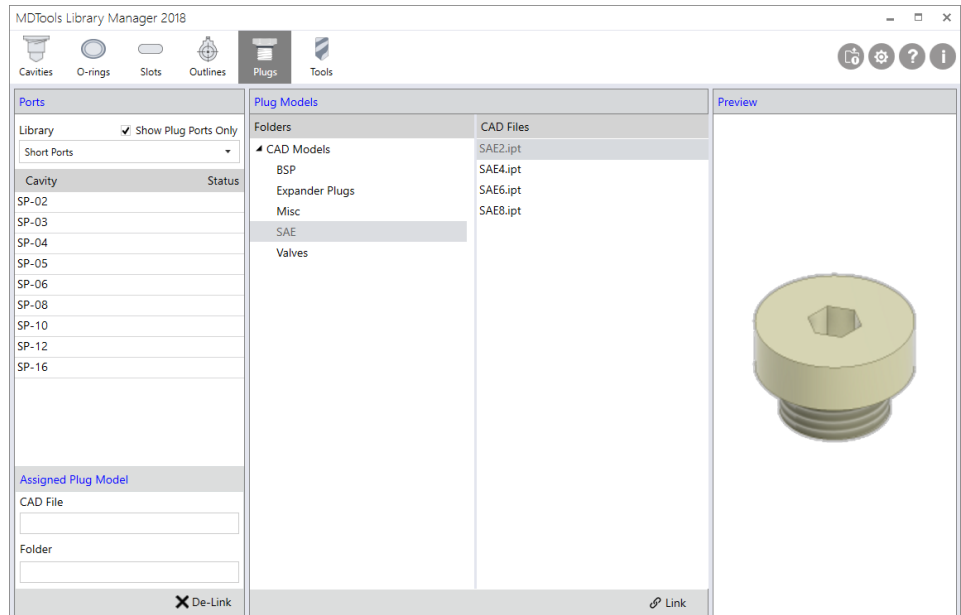

Plugs

Note:

- When **Show Plug Ports Only** is selected, libraries which have construction plug cavities, appear in library dropdown.
- When **Show Plug Ports Only** is unselected, Libraries with Port Type cavities and Flange Cavities, appear in library dropdown.
- If plug model is linked to cavity, then status changed to .
- Assigned Plug Model section displays the linked Plug model information.
- You can see the preview of Plug Models by selecting the CAD Files.
- Do not edit the plug library files manually using Microsoft Access; always use the MDTools Library Manager to edit.
- Microsoft Access is not required to edit the library.
- Whichever construction ports you use in the manifold, should be assigned with the particular plug/part file in this Plug section. Also, the plug file should exist at that specified location.
- Two separate databases, one for Inch and one for Metric units are used to store the library.
- The inch library is stored in the MS Access database file named, INCHVESTMDToolsPLUGLibrary.mdb and the metric library is stored in MMVESTMDToolsPLUGLibrary.mdb.
- These files are located in the root (installation) directory of the MDTools library.
- You can share the Plug library over a network in your group by specifying the location of the library in the *Options*.

24. Linking a Plug File with a Construction Port


1. MDTools Library Manager ribbon > **Plugs**
2. Select the library using library dropdown.

All constructs ports in selected library display in the Construction Ports section.

3. Select the cavity from the *Construction Ports* list.
4. Select the CAD file, which displays in the **Plug Models** section.

Plug file preview displays in the Preview section.


5. Click **Link**.
6. Selected Port status

changes to .

The selected CAD files are linked with construction port.

The linked port is identified by  status.

When you select a linked port, linked plug model information displays the linked plug file information.

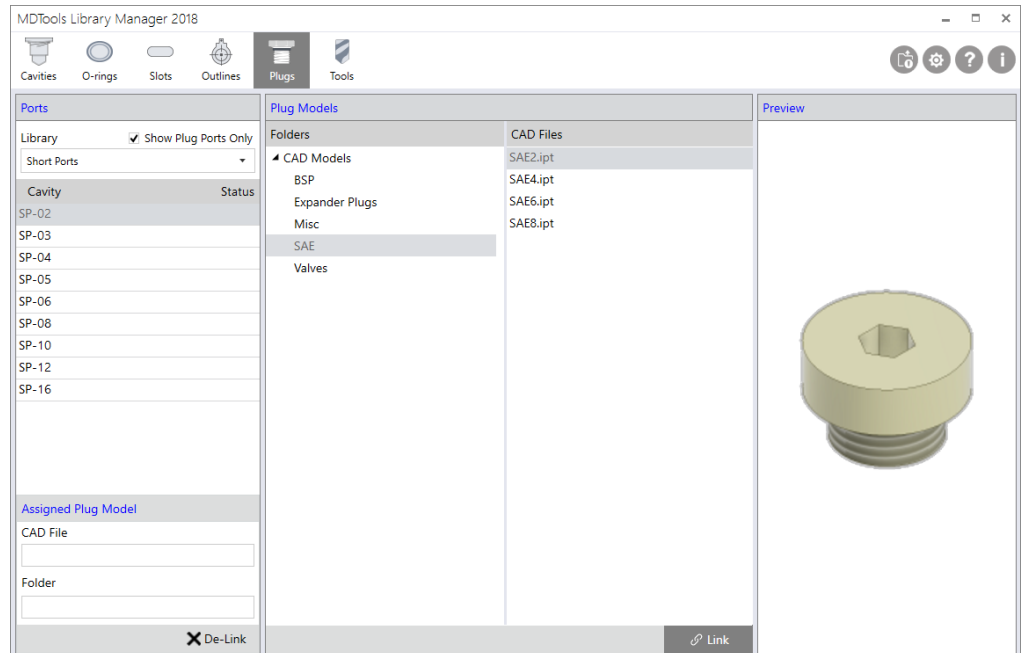

Linking Plug for a construction port

Note:

- Prior to assigning the plug file to the cavity, assembly constraints must be set for the plug part file using the MDTools Set Assembly Constraints feature.
- If you want to modify the assigned plug file path, select the plug file and click the **Link** button. It removes the previous linked file and assigns the new file.

25. De-Linking a Plug File from a Construction Port

1. MDTools Library Manager ribbon
> **Plugs**


All Construction plugs in the selected library displays in the Construction Ports section.

2. Select a construction port.

Assigned plug model section displays the linked plug file information.

3. Click **De-Link**.

The program removes the linked plug file for the selected cavity.

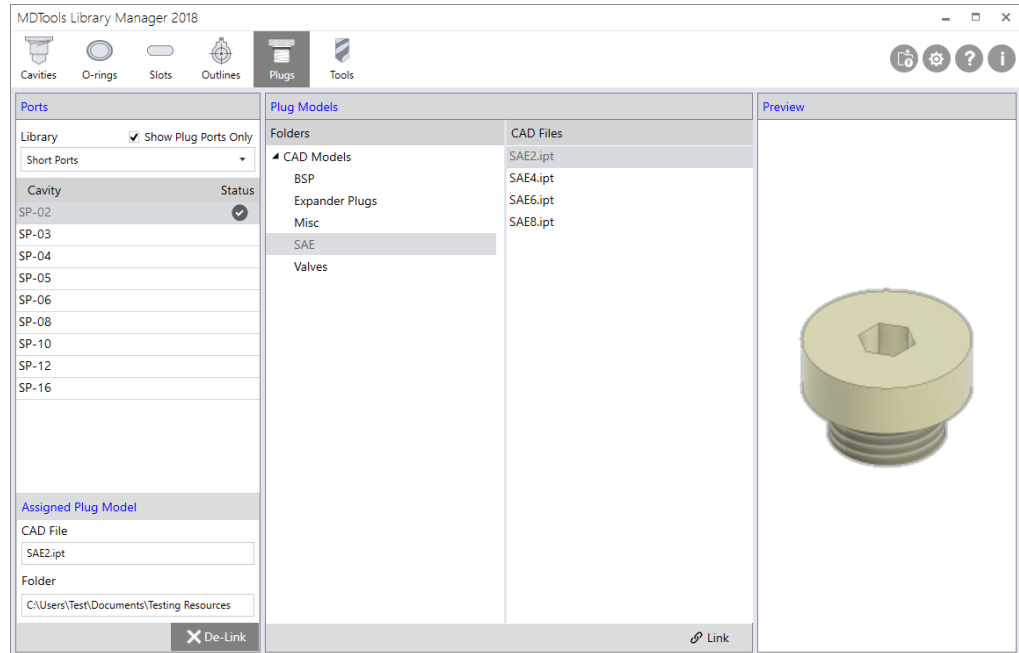

De-Linking plug model from a construction port

Tools

Create the list of drill, flat bottom drill and spot face tools This information is used by MDTools® to choose the correct diameter while connecting cavities automatically and to check manufacturability to cavities in the manifold.

- 26 Adding a Tool
- 27 Updating a Tool
- 28 Deleting a Tool

26. Adding a Tool

1. MDTools Library Manager ribbon
> **Tools**

Drills and Selected Drill sections display.

2. Select **Tool Type** in the *Drills* section. i.e. Drill/Flat Bottom Drill/Drill/Spot Face.

All tools in the selected tool type library lists in the section.

3. Click **Add**.


4. Enter values for the tool **Diameter** and the tool **Max Length**.

5. Click **Save** to save the tool values.

The selected tool is added to the selected library.

Note:


The Tooling data is saved in ToolingAndManufacturing.mdb.

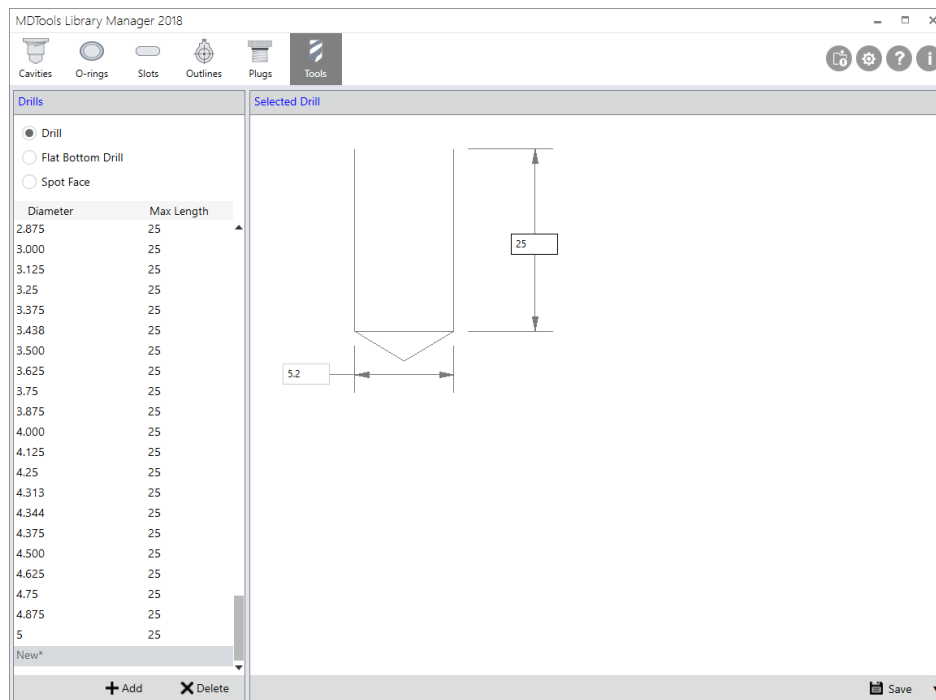

Tools: Adding a tool

27. Updating a Tool


1. MDTools Library Manager ribbon > **Tools**
Drills and Selected Drill sections display.
2. Select **Tool Type** in *Drills* section. i.e. Drill / Flat Bottom Drill / Spot Face.
All tools in the selected tool type lists in the section.
3. Select a tool from the list.
4. Enter new values for the tool **Diameter** and the tool **Max Length**.
5. Click **Save** to update selected tool or **Save As** to save as new tool.

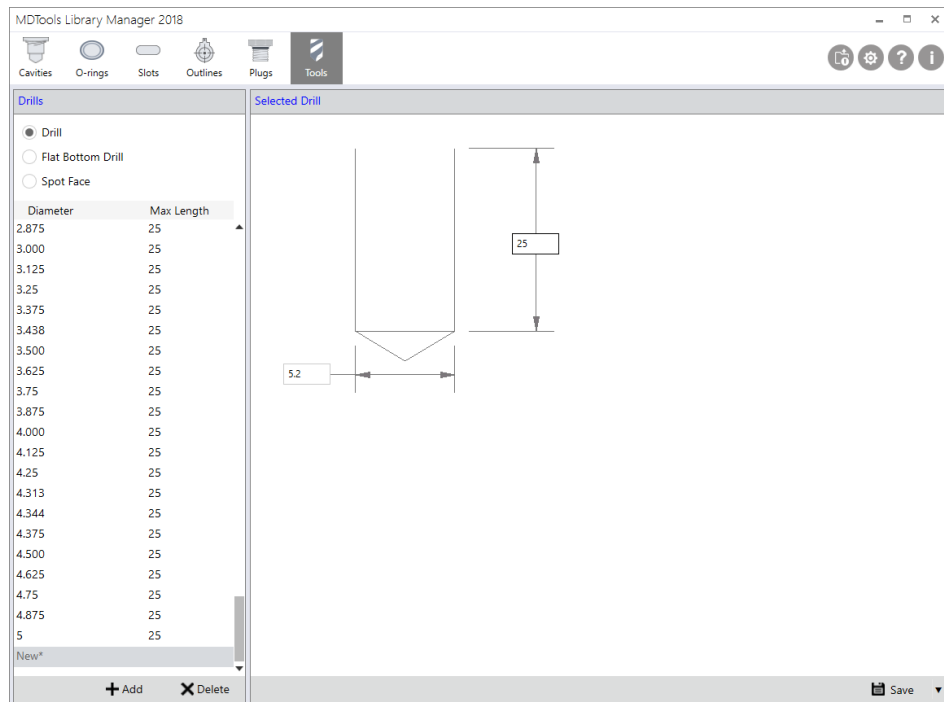

Tools: Updating a tool

28. Deleting a Tool

1. MDTools Library Manager ribbon > **Tools**
Drills and Selected Drill sections displays.
2. Select **Tool Type** in *Drills* section. i.e. Drill/Flat Bottom Drill/Spot Face.
All tools in the selected tool type lists in the section.
3. Select a tool from the list.
4. Click **Delete**.
The selected tool is deleted from the library and tools list.

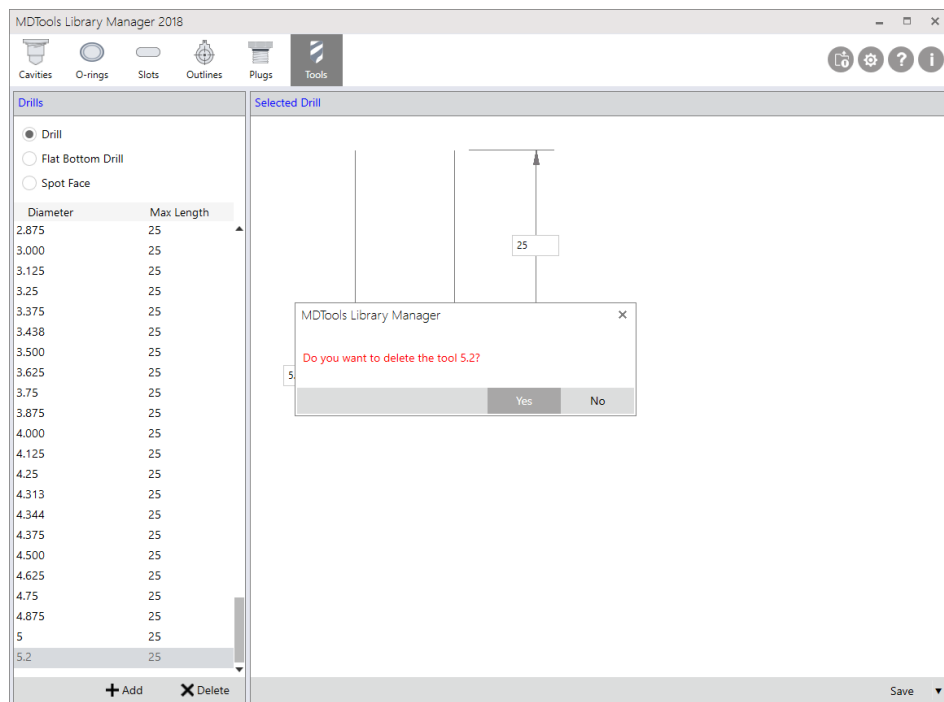

Tools: Deleting a tool

Setup


- 29 Import Cavity
- 30 Options
- 31 Help
- 32 About MDTools Library Manager

29. Import Cavity

Import new cavities/footprints from a different MDTools Cavity library file into your library. Update your existing Cavity data.

1. MDTools Library Manager ribbon > **Import Cavity**

The Import Cavities/Footprints dialog box displays.

2. Click  to browse and select the source Library Path.
3. Select the cavity library you want to import from the Library dropdown.

Cavities in the selected library display in the Cavity list.

4. Select the cavities you want to import.

Select the Delete cavity after importing option, if you want to delete a cavity from the source library after importing.

5. Select following **Options** in the **Destination** section, if required.


Create Library, if not present.

Overwrite cavity, if present.


6. Click **Import**.

The program lists all the cavities imported into the destination library with the status of transfer.

7. Click **Close**.

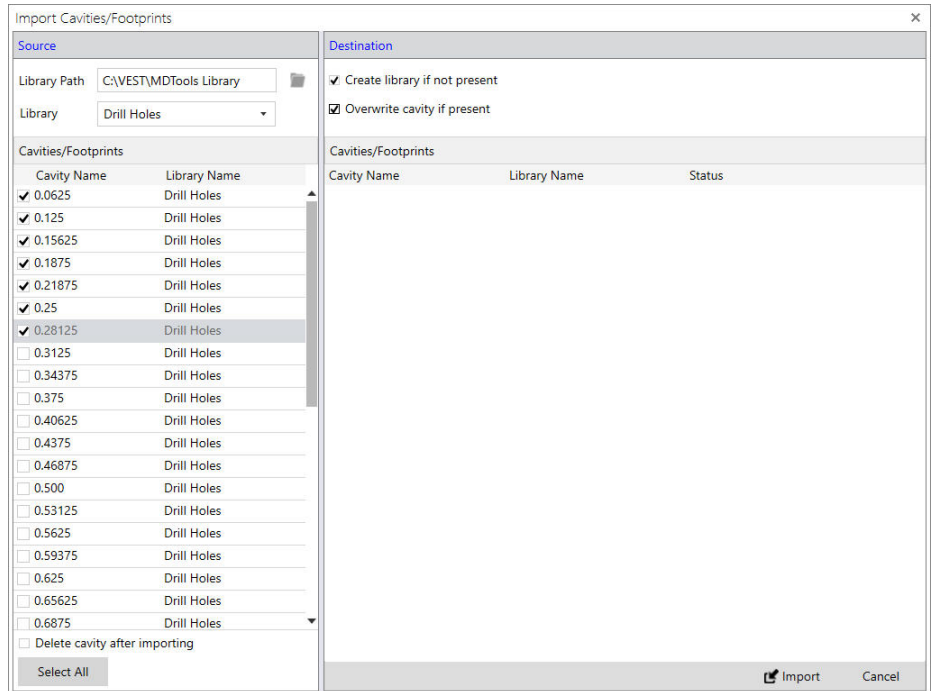

Import Cavities/Footprints dialog box

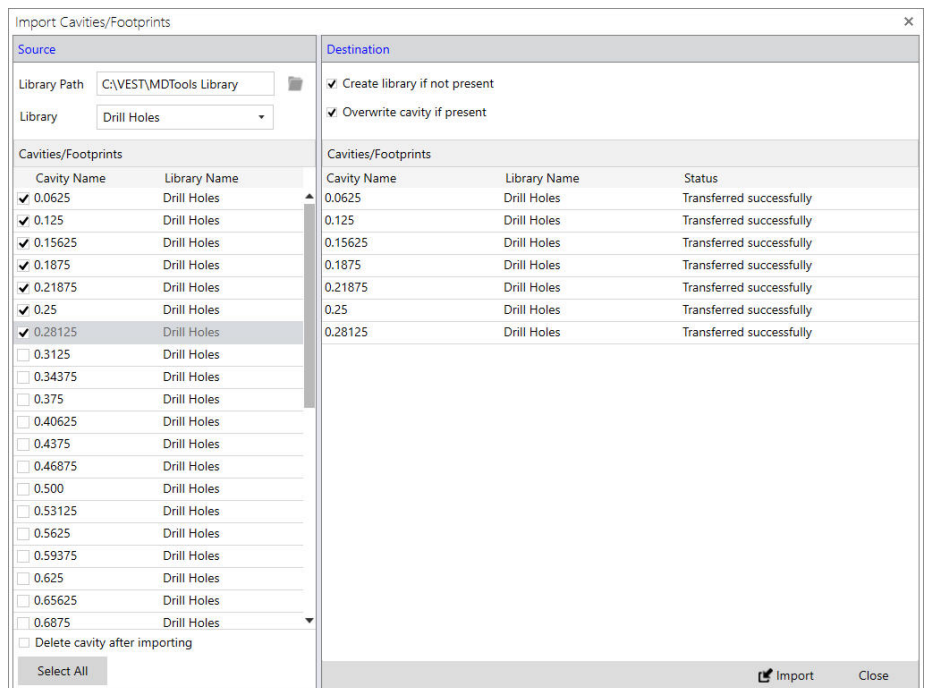

Import Cavity/Footprints: Selected cavities imported

30. Options

Configure Unit, Path and Plug Model Library path in Options.


1. MDTools Library Manager ribbon
> **Options**

The Options dialog box displays.

2. Select **Units**: Inch or Millimeter.

If **Inch** is selected, all MDTools Library Manager commands use inch libraries. (i.e. InchVESTMDToolsLibrary.mdb is used for cavity command)

If **MM** is selected, all MDTools Library Manager commands use metric libraries. (i.e. MMVESTMDToolsLibrary.mdb used for Cavity command)

3. Click  button to browse and select the library location.
4. Select Location of Plug Model Library.

- **Local System**

If you want to use CAD files from local system.

- **Vault Server**


If you want to use CAD files from Vault Server. You need to select the Vault Server version and fill log in details in the Vault Log In Details section.

Vault Server Details:

5. Select Vault Server Version.
 - Use the Vault 2017 and Lower option for older versions of Vault Server.
 - Use the Vault 2018 and Higher option for latest Vault Server.
 - Select **Authentication** type.
 - Enter **User Name**, **Password**, **Server** and **Vault** details.


Program will remember this log in details for current and future sessions.

You can change vault login details later at any stage.


4. Click  button to browse and select the Plug Model Library location.

Browse option will list the folders on local machine or on a vault server based on the selected option as Local System or Vault Server.
5. Select CAD Models folder in Browse for Folder dialog.
6. Click **Apply** to save the settings.

Apply option reloads all the data in MDTools Library Manager.

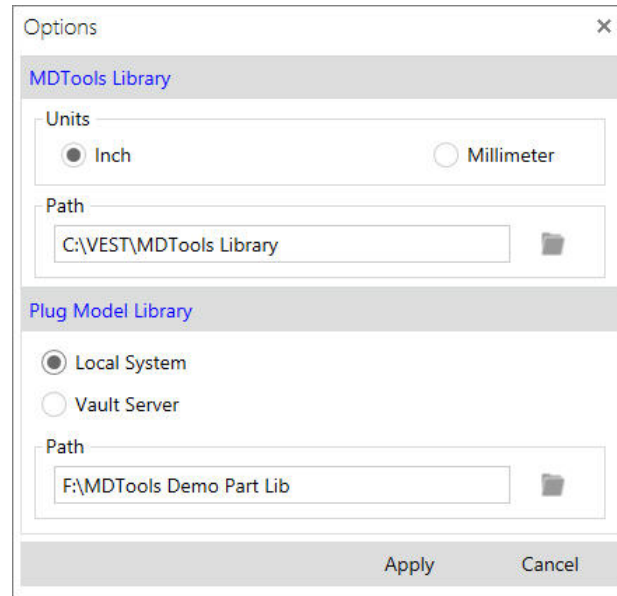

Options dialog box

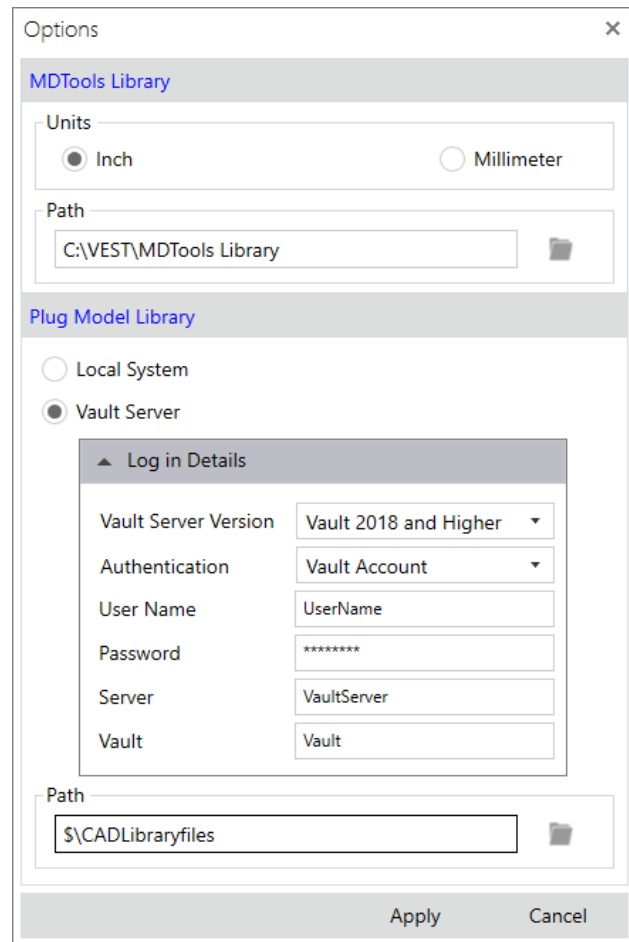

Options: Plug Model Library

Note:

- The default unit setting is Inch.
- Do not edit the cavity library manually using the Microsoft Access; always use the MDTools Library Manager program to edit the library.
- Microsoft Access is not required to edit the cavity library. You can edit the cavity library using the MDTools Cavity Library program even if Microsoft Access is not installed on your machine.
- Two separate databases, one for inch and one for metric units are used to store the data.
- The Inch library is stored in the Microsoft Access database file named, InchVESTMDToolsLibrary.mdb and the Metric library is stored in MMVESTMDToolsLibrary.mdb.

These files are in the root (installation) directory of MDTools Library.

- Share the cavity library over a network in your group by specifying the location of the library in the Options dialog box.

31. Help


Open the MDTools Library Manager 2018 user manual in .pdf format.

1. MDTools Library Manager ribbon
> **Help**

MDTools Library Manager 2018 user manual open in .PDF format.



MDTools Library Manager ribbon: Help

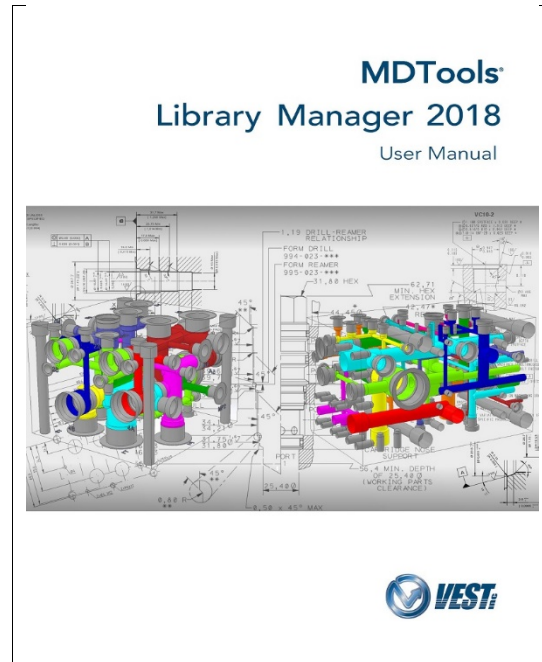

MDTools Library Manager 2018 User Manual

32. About MDTools Library Manager

View the current MDTools Library Manager's release and build number.

1. MDTools Library Manager ribbon
> **About Library Manager**




MDTools Library Manager ribbon: About Library Manager


The About MDTools Library Manger dialog box displays and shows the current release and build number.

Click the **License Agreement...** option to display the license Agreement dialog box.

2. Click **OK** to close.

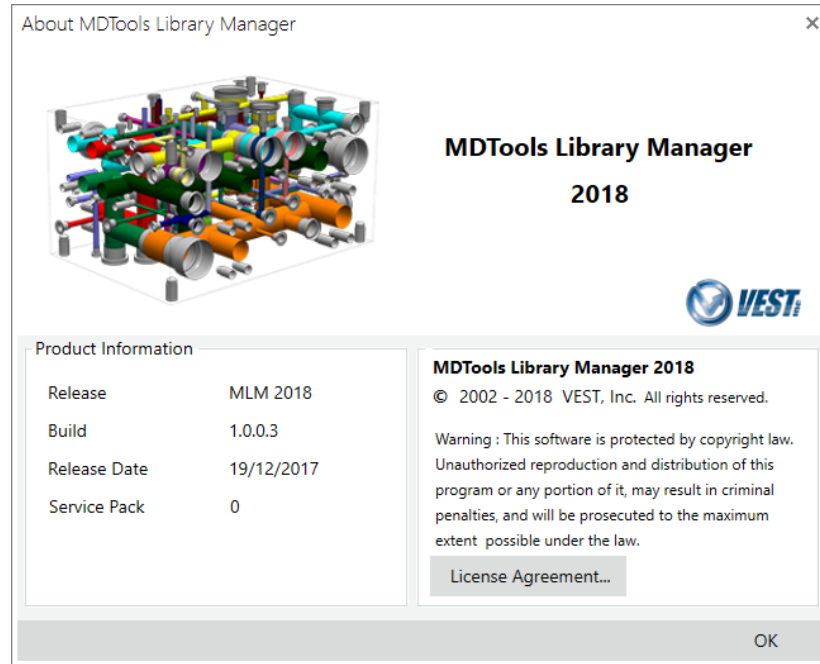

About MDTools Library Manager dialog box

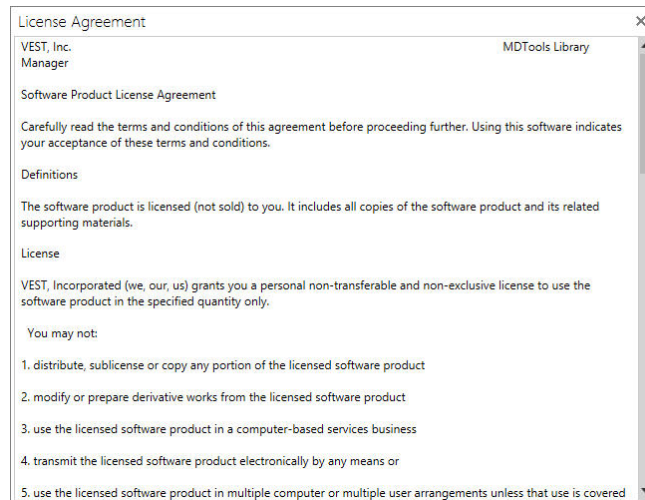

License Agreement dialog box

Appendix

33. List of Cavities - MDTools Library Manager 2018

<u>Inch & MM</u>	
Library Name	Cavity Name
Bolt Holes (Metric)	M10x1.5-6H
Bolt Holes (Metric)	M12x1.75-6H
Bolt Holes (Metric)	M14x2.0-6H
Bolt Holes (Metric)	M16x2.0-6H
Bolt Holes (Metric)	M18x2.5-6H
Bolt Holes (Metric)	M20x2.5-6H
Bolt Holes (Metric)	M24x3.0-6H
Bolt Holes (Metric)	M30x3.5-6H
Bolt Holes (Metric)	M36x4.0-6H
Bolt Holes (Metric)	M4x0.7-6H
Bolt Holes (Metric)	M5x0.8-6H
Bolt Holes (Metric)	M6x1.0-6H
Bolt Holes (Metric)	M8x1.25-6H
Bolt Holes (UNC)	#10-24 UNC
Bolt Holes (UNC)	#6-32 UNC
Bolt Holes (UNC)	#8-32 UNC
Bolt Holes (UNC)	1"-8 UNC
Bolt Holes (UNC)	1/2"-13 UNC
Bolt Holes (UNC)	1/4"-20 UNC
Bolt Holes (UNC)	1-1/2"-6 UNC
Bolt Holes (UNC)	1-1/4"-7 UNC
Bolt Holes (UNC)	1-1/8"-7 UNC
Bolt Holes (UNC)	1-3/4"-5 UNC
Bolt Holes (UNC)	1-3/8"-6 UNC
Bolt Holes (UNC)	2"-4.5 UNC
Bolt Holes (UNC)	2-1/2"-4 UNC
Bolt Holes (UNC)	2-1/4"-4.5 UNC
Bolt Holes (UNC)	3"-4 UNC
Bolt Holes (UNC)	3/4"-10 UNC
Bolt Holes (UNC)	3/8"-16 UNC
Bolt Holes (UNC)	5/16"-18 UNC
Bolt Holes (UNC)	5/8"-11 UNC
Bolt Holes (UNC)	7/16"-14 UNC
Bolt Holes (UNC)	7/8"-9 UNC
Bolt Holes (UNC)	9/16"-12 UNC
BSP Ports-ISO 1179-1	G 1 1/2 -11
BSP Ports-ISO 1179-1	G 1 1/4 -11
BSP Ports-ISO 1179-1	G 1/2-14
BSP Ports-ISO 1179-1	G 1/4-19
BSP Ports-ISO 1179-1	G 1/8-28
BSP Ports-ISO 1179-1	G 1-11
BSP Ports-ISO 1179-1	G 2-11
BSP Ports-ISO 1179-1	G 3/4-14
BSP Ports-ISO 1179-1	G 3/8-19
Deltrol	080-2
Deltrol	080-2P
Deltrol	080-3
Deltrol	080-4
Deltrol	100-2

Library Name	Cavity Name
BSPT Ports-ISO 1179-1	RP 1 1/2 -11
BSPT Ports-ISO 1179-1	RP 1 1/4 -11
BSPT Ports-ISO 1179-1	RP 1/2-14
BSPT Ports-ISO 1179-1	RP 1/4-19
BSPT Ports-ISO 1179-1	RP 1/8-28
BSPT Ports-ISO 1179-1	RP 1-11
BSPT Ports-ISO 1179-1	RP 2-11
BSPT Ports-ISO 1179-1	RP 3/4-14
BSPT Ports-ISO 1179-1	RP 3/8-19
Command Controls	C0420
Command Controls	C0430
Command Controls	C0820
Command Controls	C0825
Command Controls	C0830
Command Controls	C0840
Command Controls	C1020
Command Controls	C1025
Command Controls	C1030
Command Controls	C1040
Command Controls	C1220
Command Controls	C1225
Command Controls	C1230
Command Controls	C1240
Command Controls	C1620
Command Controls	C1625
Command Controls	C1630
Command Controls	C1640
Comp. Flow Control-ISO 6263	6263-02-01-"-97
Comp. Flow Control-ISO 6263	6263-03-03-*97
Comp. Flow Control-ISO 6263	6263-06-05-*97
Comp. Flow Control-ISO 6263	6263-06-07-*97
Comp. Flow Control-ISO 6263	6263-07-09-*97
Comp. Flow Control-ISO 6263	6263-07-11-*97
Comp. Flow Control-ISO 6263	6263-08-I 3-*97
Comp. Flow Control-ISO 6263	6263-08-I 5*97
Delta Power	40500000
Delta Power	40500001
Delta Power	40500002
Delta Power	40500003
Delta Power	40500004
Delta Power	40500005
Delta Power	40500006
Delta Power	40500012
Delta Power	40500017
Delta Power	40500018
Delta Power	40500019
Delta Power	40500020
Delta Power	40500021
Delta Power	40500024

Library Name	Cavity Name
Deltrol	100-2P
Deltrol	100-3
Deltrol	100-3S
Deltrol	100-4
Deltrol	100-4L
Deltrol	120-3
Deltrol	160-3S
Direct.Control-DIN24340 Form A	DIN 24 340-A 25
Direct.Control-DIN24340 Form A	DIN 24 340-A 32
Direct.Control-DIN24340 Form A	DIN 24 340-A 4
Direct.Control-DIN24340 Form A	DIN 24 340-A 6
Direct.Control-DIN24340 Form A	DIN 24 340-A 8
Direct.Control-DIN24340 Form A	DIN 24 340-A10
Direct.Control-DIN24340 Form A	DIN 24 340-A16
Direct.Control-DIN24340 Form B	DIN 24 340-B 10
Direct.Control-DIN24340 Form B	DIN 24 340-B 16
Direct.Control-DIN24340 Form B	DIN 24 340-B 25
Direct.Control-DIN24340 Form B	DIN 24 340-B 32
Direct.Control-DIN24340 Form B	DIN 24 340-B 40
Direct.Control-ISO 4401	4401-02-01-0-94
Direct.Control-ISO 4401	4401-03-02-0-94
Direct.Control-ISO 4401	4401-03-03-0-94
Direct.Control-ISO 4401	4401-05-04-0-94
Direct.Control-ISO 4401	4401-05-05-0-94
Direct.Control-ISO 4401	4401-07-06-0-94
Direct.Control-ISO 4401	4401-08-07-0-94
Direct.Control-ISO 4401	4401-10-08-0-94
Direct.Control-ISO 4401:2005	4401-02-01-0-05
Direct.Control-ISO 4401:2005	4401-03-02-0-05
Direct.Control-ISO 4401:2005	4401-03-03-0-05
Direct.Control-ISO 4401:2005	4401-05-04-0-05
Direct.Control-ISO 4401:2005	4401-05-05-0-05
Direct.Control-ISO 4401:2005	4401-05-06-0-05
Direct.Control-ISO 4401:2005	4401-07-07-0-05
Direct.Control-ISO 4401:2005	4401-08-08-0-05
Direct.Control-ISO 4401:2005	4401-10-09-0-05
Direct.Control-NFPA-T3.5.1	D02
Direct.Control-NFPA-T3.5.1	D03
Direct.Control-NFPA-T3.5.1	D05
Direct.Control-NFPA-T3.5.1	D05-Alt-B
Direct.Control-NFPA-T3.5.1	D05H
Direct.Control-NFPA-T3.5.1	D06
Direct.Control-NFPA-T3.5.1	D07
Direct.Control-NFPA-T3.5.1	D08
Direct.Control-NFPA-T3.5.1	D10
EPS Flanges	4" EPS Flange
EPS Flanges	5" EPS Flange
EPS Flanges	6" EPS Flange
EPS Flanges	8" EPS Flange

Library Name	Cavity Name
Delta Power	40500028
Delta Power	40500029
Delta Power	40500032
Delta Power	40500033
Delta Power	40500034
Delta Power	40500035
Delta Power	40500037
Duplomatic	D-10A
Duplomatic	D-10B
Duplomatic	D-10C
Duplomatic	D-10D
Duplomatic	D-10E
Duplomatic	KT08
Duplomatic	KT08U
Duplomatic	RS2-I
Duplomatic	RS3-I
Duplomatic	RS4-I
Duplomatic	RS5-I
Duplomatic	RS6-I
Duplomatic	RSN2-I
Duplomatic	RSN3-I
Duplomatic	RSN4-I
Duplomatic	RSN5-I
Duplomatic	VR2-I
Duplomatic	VR5-I
Duplomatic	VR7-I
Duplomatic	VSK1
Duplomatic	VSK2
Eaton	C-10-2
Eaton	C-10-3
Eaton	C-10-3S
Eaton	C-10-4
Eaton	C-10-4U
Eaton	C-10-5S
Eaton	C-12-2
Eaton	C-12-2U
Eaton	C-12-3
Eaton	C-12-3S
Eaton	C-12-4
Eaton	C-12-4U
Eaton	C-12-5S
Eaton	C-16-2
Eaton	C-16-3
Eaton	C-16-3S
Eaton	C-16-4
Eaton	C-16-5S
Eaton	C-20-2
Eaton	C-20-3
Eaton	C-20-3S
Eaton	C-20-4
Eaton	C-20-5S
Eaton	C-4-2
Eaton	C-4-3

Library Name	Cavity Name
Hawe SICV Cavities	AM1-20/E
Hawe SICV Cavities	BEV3-Z
Hawe SICV Cavities	CAV1
Hawe SICV Cavities	CAV2
Hawe SICV Cavities	CDK 3
Hawe SICV Cavities	CDSV 1
Hawe SICV Cavities	CMV1
Hawe SICV Cavities	CMV2
Hawe SICV Cavities	CMV3
Hawe SICV Cavities	CNE2
Hawe SICV Cavities	CNE21/22/23
Hawe SICV Cavities	CRH 1
Hawe SICV Cavities	CRH 2
Hawe SICV Cavities	CRH 3/3V
Hawe SICV Cavities	CRK 3
Hawe SICV Cavities	CRK/B 1
Hawe SICV Cavities	CRK/B 2
Hawe SICV Cavities	CSJ
Hawe SICV Cavities	CSV2
Hawe SICV Cavities	CSV3
Hawe SICV Cavities	EM 11D
Hawe SICV Cavities	EM 11V/S
Hawe SICV Cavities	EM 21D
Hawe SICV Cavities	EM 41V/S
Hawe SICV Cavities	EM(P) 21V/S
Hawe SICV Cavities	EM(P) 31V/S
Hawe SICV Cavities	LB1
Hawe SICV Cavities	LB14-C
Hawe SICV Cavities	LB2
Hawe SICV Cavities	LB26-C
Hawe SICV Cavities	LB28-C
Hawe SICV Cavities	LB2-UNF
Hawe SICV Cavities	LB3
Hawe SICV Cavities	LB30-C
Hawe SICV Cavities	LB32-C
Hawe SICV Cavities	LB3-UNF
Hawe SICV Cavities	LB4
Hawe SICV Cavities	LB47-C
Hawe SICV Cavities	LB4-UN
Hawe SICV Cavities	LHT 3E
Hawe SICV Cavities	RC1
Hawe SICV Cavities	RC14
Hawe SICV Cavities	RC2
Hawe SICV Cavities	RC26
Hawe SICV Cavities	RC28
Hawe SICV Cavities	RC3
Hawe SICV Cavities	RC30
Hawe SICV Cavities	RC32
Hawe SICV Cavities	RE0
Hawe SICV Cavities	RE1
Hawe SICV Cavities	RE2
Hawe SICV Cavities	RE3
Hawe SICV Cavities	RE30
Hawe SICV Cavities	RE32
Hawe SICV Cavities	RE4

Library Name	Cavity Name
Eaton	C-8-2
Eaton	C-8-3
Eaton	C-8-4
Eaton	C-8-5S
Eaton	CG02
Eaton	CG03
Eaton	CG06
Eaton	CG10
Eaton	CG2V-6
Eaton	CG2V-8
Eaton	RCG03
Eaton	RCG06
Eaton	RCG10
Eaton	URG1-06
Eaton	URG1-10
Eaton	XGL03
Hawe Valve Interface	AM11
Hawe Valve Interface	BVP-11R/S
Hawe Valve Interface	BVP-11Z
Hawe Valve Interface	BVP-2R/S
Hawe Valve Interface	BVP-2Z
Hawe Valve Interface	BVP-3R/S
Hawe Valve Interface	BVP-3Z
Hawe Valve Interface	G (Z)3-0
Hawe Valve Interface	G (Z)3-1
Hawe Valve Interface	G (Z)3-2
Hawe Valve Interface	G (Z)3-3
Hawe Valve Interface	G (Z)3-4
Hawe Valve Interface	G (Z)4-1
Hawe Valve Interface	G R/S2-0
Hawe Valve Interface	G R/S2-1
Hawe Valve Interface	G R/S2-2
Hawe Valve Interface	G R/S2-3
Hawe Valve Interface	G R/S2-4
Hawe Valve Interface	G21-0
Hawe Valve Interface	G21-1
Hawe Valve Interface	G21-2
Hawe Valve Interface	G21-3
Hawe Valve Interface	G22-0
Hawe Valve Interface	G22-1
Hawe Valve Interface	G22-2
Hawe Valve Interface	G22-3
Hawe Valve Interface	HRP1
Hawe Valve Interface	HRP2
Hawe Valve Interface	HRP3(V)
Hawe Valve Interface	HRP4(V)
Hawe Valve Interface	HRP5(V)
Hawe Valve Interface	HRP7(V)
Hawe Valve Interface	LHT 33P-11
Hawe Valve Interface	LHT 33P-15
Hawe Valve Interface	MVP 4
Hawe Valve Interface	MVP 5
Hawe Valve Interface	MVP 6
Hawe Valve Interface	MVP 8

Library Name	Cavity Name
Hawe SICV Cavities	RHC1
Hawe SICV Cavities	RHC13
Hawe SICV Cavities	RHC2
Hawe SICV Cavities	RHC23
Hawe SICV Cavities	RHC23/1
Hawe SICV Cavities	RHC3
Hawe SICV Cavities	RHC33
Hawe SICV Cavities	RHC4
Hawe SICV Cavities	RHC43
Hawe SICV Cavities	RHC43/3
Hawe SICV Cavities	RHC5
Hawe SICV Cavities	RHC53
Hawe SICV Cavities	RHC6
Hawe SICV Cavities	RHCE1
Hawe SICV Cavities	RHCE13
Hawe SICV Cavities	RHCE2
Hawe SICV Cavities	RHCE23
Hawe SICV Cavities	RHCE3
Hawe SICV Cavities	RHCE33
Hawe SICV Cavities	RHCE4
Hawe SICV Cavities	RHCE43
Hawe SICV Cavities	RHCE5
Hawe SICV Cavities	RHCE53
Hawe SICV Cavities	RHCE6
Hawe SICV Cavities	RHCE63
Hawe SICV Cavities	RK/B0
Hawe SICV Cavities	RK/B1
Hawe SICV Cavities	RK/B14
Hawe SICV Cavities	RK/B2
Hawe SICV Cavities	RK/B28
Hawe SICV Cavities	RK/B3
Hawe SICV Cavities	RK/B32
Hawe SICV Cavities	RK/B4
Hawe SICV Cavities	RK/B47
Hawe SICV Cavities	SB0
Hawe SICV Cavities	SB0-14
Hawe SICV Cavities	SB1
Hawe SICV Cavities	SB1-18
Hawe SICV Cavities	SB2
Hawe SICV Cavities	SB2-22
Hawe SICV Cavities	SB3
Hawe SICV Cavities	SB3-27
Hawe SICV Cavities	WVC1
HydraForce	VC04-2
HydraForce	VC04-B2
HydraForce	VC04-B3
HydraForce	VC06-2
HydraForce	VC07-3
HydraForce	VC08-2
HydraForce	VC08-3
HydraForce	VC08-4
HydraForce	VC08-PCV
HydraForce	VC09-2
HydraForce	VC10-2

Library Name	Cavity Name
Hawe Valve Interface	PDM4P
Hawe Valve Interface	PDM5P
Hawe Valve Interface	PMVP 4
Hawe Valve Interface	PMVP 5
Hawe Valve Interface	PMVP 6
Hawe Valve Interface	PMVP 8
Hawe Valve Interface	PSLF3
Hawe Valve Interface	PSLF5
Hawe Valve Interface	SF2-3
Hawe Valve Interface	SF2-4
Hawe Valve Interface	SF2-5
Hawe Valve Interface	SF3-3
Hawe Valve Interface	SF3-4
Hawe Valve Interface	SF3-5
Hawe Valve Interface	SLF3
Hawe Valve Interface	SLF5
Hawe Valve Interface	TQ 3P-A
Hawe Valve Interface	TQ 4P-A
Hawe Valve Interface	TQ 5P-A
Hydac	03030
Hydac	3230
Hydac	04220
Hydac	05030
Hydac	05220
Hydac	05330
Hydac	05520
Hydac	05830
Hydac	06020
Hydac	06320
Hydac	08021
Hydac	08030
Hydac	08130
Hydac	08140
Hydac	08220
Hydac	08520
Hydac	08920
Hydac	10120
Hydac	10120A
Hydac	10130
Hydac	10520
Hydac	10920
Hydac	12120
Hydac	12120A
Hydac	12121
Hydac	12130
Hydac	12230
Hydac	12520
Hydac	12920
Hydac	16920
Hydac	20021
Hydac	FC07-3
Hydac	FC081-2
Hydac	FC08-2
Hydac	FC08-3

Library Name	Cavity Name
HydraForce	VC10-3
HydraForce	VC10-4
HydraForce	VC10-5
HydraForce	VC10-6
HydraForce	VC10-PCV
HydraForce	VC10-S3
HydraForce	VC10-S6
HydraForce	VC12-2
HydraForce	VC12-3
HydraForce	VC12-4
HydraForce	VC12-6
HydraForce	VC12-S3
HydraForce	VC12-S5
HydraForce	VC12-S6
HydraForce	VC16-2
HydraForce	VC16-3
HydraForce	VC16-4
HydraForce	VC16-PCV
HydraForce	VC16-S3
HydraForce	VC16-S5
HydraForce	VC16-S6
HydraForce	VC20-2
HydraForce	VC20-S3
HydraForce	VC42-M2
HydraForce	VC42-M3
HydraForce	VC42-M4
HydraForce	VC42-S6
HydraForce	VC98-3
HydraForce	VC-T001
HydraForce	VC-T004
HydraForce	VC-T009
HydraForce	VC-T011
Miscellaneous	Thru. Bolthole
Miscellaneous	Thru. Bolthole. Hole w/Cbore
Moog	CEE-NG25
Moog	D662
Moog	D663
Moog	D664
Moog	D665
Moog	D791
Moog	D792
Moog	G761
NPT Ports	NPT 1
NPT Ports	NPT 1/16
NPT Ports	NPT 1/2
NPT Ports	NPT 1/4
NPT Ports	NPT 1/8
NPT Ports	NPT 1-1/2
NPT Ports	NPT 1-1/4
NPT Ports	NPT 2
NPT Ports	NPT 3/4
NPT Ports	NPT 3/8

Library Name	Cavity Name
Hydac	FC08-4
Hydac	FC10-2
Hydac	FC10-3
Hydac	FC10-4
Hydac	FC12-2
Hydac	FC12-3
Hydac	FC12-4
Hydac	FC16-2
Hydac	FC16-3
Hydac	FC16-4
HYDAC 2-way Ball Valves	2-Way BV KHP-10
HYDAC 2-way Ball Valves	2-Way BV KHP-16
HYDAC 2-way Ball Valves	2-Way BV KHP-20
HYDAC 2-way Ball Valves	2-Way BV KHP-25
HYDAC 2-way Ball Valves	2-Way BV KHP-32
HYDAC 2-way Ball Valves	2-Way BV KHP-40
HYDAC 2-way Ball Valves	2-Way BV KHP-50
HYDAC Filters	CF-*-20
HYDAC Filters	CP-SAE 120
HYDAC Filters	CP-SAE 15
HYDAC Filters	CP-SAE 40
HYDAC Filters	DF-MA/MHA-160-280
HYDAC Filters	DF-MA-60-140
HYDAC Filters	DFP 160-280
HYDAC Filters	DFP/DFPF 330-1320
HYDAC Filters	DFP/DFPF 60-140
HYDAC Filters	DFPF 160-280
HYDAC Filters	DF-QE/MHE-330-1320
HYDAC Filters	DF-QE-160-280
HYDAC Filters	DF-QE-30
HYDAC Filters	DF-QE-60-140
HYDAC Filters	HF2P-04-08
HYDAC Filters	HF4P-09-18-27
HYDAC Filters	QE/OAI-160-280
Integrated Hydraulics	A1126
Integrated Hydraulics	A12088
Integrated Hydraulics	A12336
Integrated Hydraulics	A13245
Integrated Hydraulics	A2791
Integrated Hydraulics	A2976
Integrated Hydraulics	A3145
Integrated Hydraulics	A3146
Integrated Hydraulics	A3377
Integrated Hydraulics	A3531
Integrated Hydraulics	A5302
Integrated Hydraulics	A6610
Integrated Hydraulics	A6701
Integrated Hydraulics	A6835
Integrated Hydraulics	A6935
Integrated Hydraulics	A6951
Integrated Hydraulics	A7447
Integrated Hydraulics	A7708

Library Name	Cavity Name
Olmsted Flanges	4" Olmsted Flange
Olmsted Flanges	5" Olmsted Flange
Olmsted Flanges	6" Olmsted Flange
Polyhydron	C-06
Polyhydron	C-10
Polyhydron	C-20
Polyhydron	C-30
Polyhydron	CBS20S
Polyhydron	DPR06
Polyhydron	DPR10
Polyhydron	DPR20
Polyhydron	PPR06
Pr.Red, Seq, Unload-ISO 5781	5781-02-01-0-00
Pr.Red, Seq, Unload-ISO 5781	5781-03-04-0-00
Pr.Red, Seq, Unload-ISO 5781	5781-06-07-0-00
Pr.Red, Seq, Unload-ISO 5781	5781-08-10-0-00
Pr.Red, Seq, Unload-ISO 5781	5781-10-13-0-00
Pressure Control-ISO 6264	6264-02-01-97
Pressure Control-ISO 6264	6264-03-04-97
Pressure Control-ISO 6264	6264-06-07-97
Pressure Control-ISO 6264	6264-06-09-97
Pressure Control-ISO 6264	6264-08-11-97
Pressure Control-ISO 6264	6264-08-13-97
Pressure Control-ISO 6264	6264-10-15-97
Pressure Control-ISO 6264	6264-10-17-97
Rexroth	003
Rexroth	004
Rexroth	019-E
Rexroth	065
Rexroth	348
Rexroth	CA-04A-3Y
Rexroth	CA-07A-3N
Rexroth	CA-08A-2N
Rexroth	CA-08A-3C
Rexroth	CA-08A-3N
Rexroth	CA-08A-4N
Rexroth	CA-10A-2N
Rexroth	CA-10A-3C
Rexroth	CA-10A-3N
Rexroth	CA-10A-4N
Rexroth	CA-12A-2N
Rexroth	CA-12A-3C
Rexroth	CA-12A-3N
Rexroth	CA-12A-4N
Rexroth	CA-16A-2N
Rexroth	CA-16A-3C
Rexroth	CA-16A-3N
Rexroth	CA-16A-4N
Rexroth	CA-20A-2N
Rexroth	CA-20A-3C

Library Name	Cavity Name
Integrated Hydraulics	A877
Integrated Hydraulics	A878
Integrated Hydraulics	A879
Integrated Hydraulics	A880
Integrated Hydraulics	A881
Integrated Hydraulics	A890
Integrated Hydraulics	A892
Integrated Hydraulics	A893
Integrated Hydraulics	CVA-20-01-0
Integrated Hydraulics	CVA-22-06-0
Integrated Hydraulics	CVA-27-04-0
Integrated Hydraulics	CVB-22-06-0
Integrated Hydraulics	CVB-27-04-0
Integrated Hydraulics	CVB-42-04-0
Parker	100-1
Parker	2G
Parker	2R
Parker	2X
Parker	3A
Parker	3C
Parker	3J
Parker	3K
Parker	3M
Parker	3X
Parker	3Z
Parker	4C
Parker	53-1
Parker	54-1
Parker	5A
Parker	68-1
Parker	91-1
Parker	C04-2
Parker	C04-3
Parker	C08-2
Parker	C08-3
Parker	C08-4
Parker	C09-2
Parker	C10-2
Parker	C10-3
Parker	C10-3S
Parker	C10-4
Parker	C12-2
Parker	C12-3
Parker	C12-3L
Parker	C12-4
Parker	C12-4L
Parker	C16-2
Parker	C16-3
Parker	C16-3S
Parker	C16-4
Parker	C20-2
Parker	C20-3S
Parker	CAV0W-2

Library Name	Cavity Name
Rexroth	CA-20A-3N
Rexroth	CA-20A-4N
Rexroth	CC063A-01
Rexroth	CD072A-01
Rexroth	CD073A-01
Rexroth	DBD10K
Rexroth	DBD20K
Rexroth	DBD30K
Rexroth	DBD6K
Rexroth	MSR10KD
Rexroth	MSR10KE
Rexroth	MSR15KD
Rexroth	MSR15KE
Rexroth	MSR20KD
Rexroth	MSR20KE
Rexroth	MSR25KD
Rexroth	MSR25KE
Rexroth	MSR30KD
Rexroth	MSR30KE
Rexroth	MSR8KD
Rexroth	MSR8KE
Sauer Danfoss	CP04-2
Sauer Danfoss	CP04-3
Sauer Danfoss	CP07-3
Sauer Danfoss	CP08-3L
Sauer Danfoss	CP12-2
Sauer Danfoss	CP12-3
Sauer Danfoss	CP12-3M
Sauer Danfoss	CP12-3S
Sauer Danfoss	CP12-4
Sauer Danfoss	CP16-4
Sauer Danfoss	CP20-3S
Sauer Danfoss	FC-144
Sauer Danfoss	FC-304
Sauer Danfoss	FC-336
Sauer Danfoss	NCS04/2
Sauer Danfoss	NCS04/3
Sauer Danfoss	NCS06/2
Sauer Danfoss	NCS06/3
Sauer Danfoss	NCS06/4
Sauer Danfoss	NCS12/2
Sauer Danfoss	NCS12/3
Sauer Danfoss	NCS12/4
Sauer Danfoss	SDC08-2
Sauer Danfoss	SDC08-3
Sauer Danfoss	SDC08-4
Sauer Danfoss	SDC10-2
Sauer Danfoss	SDC10-3
Sauer Danfoss	SDC10-3S
Sauer Danfoss	SDC10-4
Sauer Danfoss	SDC12-2
Sauer Danfoss	SDC12-3
Sauer Danfoss	SDC16-2
Sauer Danfoss	SDC16-3

Library Name	Cavity Name
Parker	CAVSW-3
Parker	CAVT11A
Parker	CAVT21A
Parker	CDD-1010
Parker	CDD-1012
Parker	CDD-1013
Parker	CDD-1036
Roetelmann Ball Valves	2-Way SM DN 10
Roetelmann Ball Valves	2-Way SM DN 12
Roetelmann Ball Valves	2-Way SM DN 20
Roetelmann Ball Valves	2-Way SM DN 25
Roetelmann Ball Valves	2-Way SM DN 32
Roetelmann Ball Valves	2-Way SM DN 40
Roetelmann Ball Valves	2-Way SM DN 50
Roetelmann Ball Valves	2-Way SM DN 6
SAE Flanges-J518	1" Code 61
SAE Flanges-J518	1" Code 62
SAE Flanges-J518	1/2" Code 61
SAE Flanges-J518	1/2" Code 62
SAE Flanges-J518	1-1/2" Code 61
SAE Flanges-J518	1-1/2" Code 62
SAE Flanges-J518	1-1/4" Code 61
SAE Flanges-J518	1-1/4" Code 62
SAE Flanges-J518	2" Code 61
SAE Flanges-J518	2" Code 62
SAE Flanges-J518	2-1/2" Code 61
SAE Flanges-J518	2-1/2" Code 62
SAE Flanges-J518	3" Code 61
SAE Flanges-J518	3" Code 62
SAE Flanges-J518	3/4" Code 61
SAE Flanges-J518	3/4" Code 62
SAE Flanges-J518	3-1/2" Code 61
SAE Flanges-J518	4" Code 61
SAE Flanges-J518	5" Code 61
SAE Ports-J1926-1	#10 SAE
SAE Ports-J1926-1	#12 SAE
SAE Ports-J1926-1	#14 SAE
SAE Ports-J1926-1	#16 SAE
SAE Ports-J1926-1	#2 SAE
SAE Ports-J1926-1	#20 SAE
SAE Ports-J1926-1	#24 SAE
SAE Ports-J1926-1	#3 SAE
SAE Ports-J1926-1	#32 SAE
SAE Ports-J1926-1	#4 SAE
SAE Ports-J1926-1	#5 SAE
SAE Ports-J1926-1	#6 SAE
SAE Ports-J1926-1	#8 SAE
Screw-In Cartridge-ISO 7789	18-01-0-07
Screw-In Cartridge-ISO 7789	18-02-0-07
Screw-In Cartridge-ISO 7789	20-01-0-07
Screw-In Cartridge-ISO 7789	20-02-0-07

Library Name	Cavity Name
Sauer Danfoss	SDC16-3S
Sauer Danfoss	SDC20-2
Sauer Danfoss	SDC20-3
Sauer Danfoss	SDC20-4
Sauer Danfoss	VME06
Sauer Danfoss	VME07
Sauer Danfoss	VME08
Servo Valve-ISO 10372	10372-01-01-0-92
Servo Valve-ISO 10372	10372-02-02-0-92
Servo Valve-ISO 10372	10372-03-03-0-92
Servo Valve-ISO 10372	10372-04-04-0-92
Servo Valve-ISO 10372	10372-06-05-0-92
Short Ports	SP-02
Short Ports	SP-03
Short Ports	SP-04
Short Ports	SP-05
Short Ports	SP-06
Short Ports	SP-08
Short Ports	SP-10
Short Ports	SP-12
Short Ports	SP-16
Slip-In Cartridge-ISO 7368	BA-06-2-A
Slip-In Cartridge-ISO 7368	BA-06-2-B
Slip-In Cartridge-ISO 7368	BB-08-2-A
Slip-In Cartridge-ISO 7368	BB-08-2-B
Slip-In Cartridge-ISO 7368	BC-09-2-A
Slip-In Cartridge-ISO 7368	BC-09-2-B
Slip-In Cartridge-ISO 7368	BD-10-2-A
Slip-In Cartridge-ISO 7368	BD-10-2-B
Slip-In Cartridge-ISO 7368	BE-11-2-A
Slip-In Cartridge-ISO 7368	BE-11-2-B
Slip-In Cartridge-ISO 7368	BF-12-2-A
Slip-In Cartridge-ISO 7368	BF-12-2-B
Slip-In Cartridge-ISO 7368	BG-13-2-A
Slip-In Cartridge-ISO 7368	BH-14-2-A
Square Flanges-6000 Series	1" Square Flange
Square Flanges-6000 Series	1/2" Square Flange
Square Flanges-6000 Series	1-1/2" Square Flange
Square Flanges-6000 Series	1-1/4" Square Flange
Square Flanges-6000 Series	2" Square Flange
Square Flanges-6000 Series	2-1/2" Square Flange
Square Flanges-6000 Series	3" Square Flange
Square Flanges-6000 Series	3/4" Square Flange
Square Flanges-6000 Series	3-1/2" Square Flange
Square Flanges-6000 Series	4" Square Flange
Square Flanges-6000 Series	5" Square Flange
Square Flanges-ISO 6164	250 Bar - DN-10
Square Flanges-ISO 6164	250 Bar - DN-13
Square Flanges-ISO 6164	250 Bar - DN-19
Square Flanges-ISO 6164	250 Bar - DN-25

Library Name	Cavity Name
Screw-In Cartridge-ISO 7789	20-03-0-07
Screw-In Cartridge-ISO 7789	20-04-0-07
Screw-In Cartridge-ISO 7789	20-05-0-07
Screw-In Cartridge-ISO 7789	22-01-0-07
Screw-In Cartridge-ISO 7789	22-02-0-07
Screw-In Cartridge-ISO 7789	22-03-0-07
Screw-In Cartridge-ISO 7789	22-04-0-07
Screw-In Cartridge-ISO 7789	22-05-0-07
Screw-In Cartridge-ISO 7789	22-06-0-07
Screw-In Cartridge-ISO 7789	22-07-0-07
Screw-In Cartridge-ISO 7789	22-08-0-07
Screw-In Cartridge-ISO 7789	22-09-0-07
Screw-In Cartridge-ISO 7789	27-01-0-07
Screw-In Cartridge-ISO 7789	27-02-0-07
Screw-In Cartridge-ISO 7789	27-03-0-07
Screw-In Cartridge-ISO 7789	27-04-0-07
Screw-In Cartridge-ISO 7789	27-05-0-07
Screw-In Cartridge-ISO 7789	27-06-0-07
Screw-In Cartridge-ISO 7789	27-07-0-07
Screw-In Cartridge-ISO 7789	27-08-0-07
Screw-In Cartridge-ISO 7789	27-09-0-07
Screw-In Cartridge-ISO 7789	33-01-0-07
Screw-In Cartridge-ISO 7789	33-02-0-07
Screw-In Cartridge-ISO 7789	33-03-0-07
Screw-In Cartridge-ISO 7789	33-04-0-07
Screw-In Cartridge-ISO 7789	33-05-0-07
Screw-In Cartridge-ISO 7789	33-06-0-07
Screw-In Cartridge-ISO 7789	33-07-0-07
Screw-In Cartridge-ISO 7789	33-08-0-07
Screw-In Cartridge-ISO 7789	33-09-0-07
Screw-In Cartridge-ISO 7789	42-01-0-07
Screw-In Cartridge-ISO 7789	42-02-0-07
Screw-In Cartridge-ISO 7789	42-03-0-07
Screw-In Cartridge-ISO 7789	42-04-0-07
Screw-In Cartridge-ISO 7789	42-05-0-07
Screw-In Cartridge-ISO 7789	42-06-0-07
Screw-In Cartridge-ISO 7789	42-07-0-07
Screw-In Cartridge-ISO 7789	42-08-0-07
Screw-In Cartridge-ISO 7789	42-09-0-07
Sun Hydraulics	T-10A
Sun Hydraulics	T-11A
Sun Hydraulics	T-13A
Sun Hydraulics	T-162A
Sun Hydraulics	T-162DP
Sun Hydraulics	T-163A
Sun Hydraulics	T-16A
Sun Hydraulics	T-17A
Sun Hydraulics	T-18A
Sun Hydraulics	T-18AU
Sun Hydraulics	T-19A
Sun Hydraulics	T-19AU
Sun Hydraulics	T-21A
Sun Hydraulics	T-22A
Sun Hydraulics	T-23A

Library Name	Cavity Name
Square Flanges-ISO 6164	250 Bar - DN-32
Square Flanges-ISO 6164	250 Bar - DN-38
Square Flanges-ISO 6164	250 Bar - DN-51
Square Flanges-ISO 6164	250 Bar - DN-56
Square Flanges-ISO 6164	250 Bar - DN-63
Square Flanges-ISO 6164	400 Bar - DN-10
Square Flanges-ISO 6164	400 Bar - DN-13
Square Flanges-ISO 6164	400 Bar - DN-19
Square Flanges-ISO 6164	400 Bar - DN-25
Square Flanges-ISO 6164	400 Bar - DN-32
Square Flanges-ISO 6164	400 Bar - DN-38
Square Flanges-ISO 6164	400 Bar - DN-51
Square Flanges-ISO 6164	400 Bar - DN-56
Square Flanges-ISO 6164	400 Bar - DN-63
Square Flanges-ISO 6164	400 Bar - DN-70
Square Flanges-ISO 6164	400 Bar - DN-80
Valve Patterns-NFPA-T3.5.1	2F06
Valve Patterns-NFPA-T3.5.1	2F07
Valve Patterns-NFPA-T3.5.1	2F08
Valve Patterns-NFPA-T3.5.1	2F09
Valve Patterns-NFPA-T3.5.1	2FB07
Valve Patterns-NFPA-T3.5.1	3F06
Valve Patterns-NFPA-T3.5.1	3F07
Valve Patterns-NFPA-T3.5.1	C06
Valve Patterns-NFPA-T3.5.1	C08
Valve Patterns-NFPA-T3.5.1	C09
Valve Patterns-NFPA-T3.5.1	D06
Valve Patterns-NFPA-T3.5.1	F02
Valve Patterns-NFPA-T3.5.1	F03
Valve Patterns-NFPA-T3.5.1	P02
Valve Patterns-NFPA-T3.5.1	P03
Valve Patterns-NFPA-T3.5.1	P06
Valve Patterns-NFPA-T3.5.1	P08
Valve Patterns-NFPA-T3.5.1	P10
Valve Patterns-NFPA-T3.5.1	POC06
Valve Patterns-NFPA-T3.5.1	POC08
Valve Patterns-NFPA-T3.5.1	R02
Valve Patterns-NFPA-T3.5.1	R03
Valve Patterns-NFPA-T3.5.1	R06
Valve Patterns-NFPA-T3.5.1	R08
Valve Patterns-NFPA-T3.5.1	R10
Valve Patterns-NFPA-T3.5.1	RP06
Valve Patterns-NFPA-T3.5.1	RP08
Valve Patterns-NFPA-T3.5.1	RV08
Valve Patterns-NFPA-T3.5.1	RV10

Library Name	Cavity Name
Sun Hydraulics	T-24A
Sun Hydraulics	T-2A
Sun Hydraulics	T-31A
Sun Hydraulics	T-32A
Sun Hydraulics	T-33A
Sun Hydraulics	T-34A
Sun Hydraulics	T-382A
Sun Hydraulics	T-3A
Sun Hydraulics	T-52A
Sun Hydraulics	T-5A
Sun Hydraulics	T-61A
Sun Hydraulics	T-62A
Sun Hydraulics	T-63A
Sun Hydraulics	T-64A
Sun Hydraulics	T-8A
Sun Hydraulics	T-9A

Inch Only

Library Name	Cavity Name
Drill Holes	0.21875
Drill Holes	0.25
Drill Holes	0.28125
Drill Holes	0.3125
Drill Holes	0.34375
Drill Holes	0.375
Drill Holes	0.40625
Drill Holes	0.4375
Drill Holes	0.46875
Drill Holes	0.5
Drill Holes	0.53125
Drill Holes	0.5625
Drill Holes	0.59375
Drill Holes	0.625
Drill Holes	0.65625
Drill Holes	0.6875
Drill Holes	0.71875
Drill Holes	0.75
Drill Holes	0.78125
Drill Holes	0.8125
Drill Holes	0.84375
Drill Holes	0.875
Drill Holes	0.90625
Drill Holes	0.9375
Drill Holes	0.96875
Drill Holes	1
Drill Holes	1.25
Drill Holes	1.5
Drill Holes	1.75
Drill Holes	2
Drill Holes	2.5
Drill Holes	3
Drill Holes	3.5
Drill Holes	4
Expander Plug Ports	MB-600-093 A
Expander Plug Ports	MB-600-125 A
Expander Plug Ports	MB-600-156 A
Expander Plug Ports	MB-600-187 A
Expander Plug Ports	MB-600-218 A
Expander Plug Ports	MB-600-250 A
Expander Plug Ports	MB-600-281 A
Metric Ports-ISO 6149-1	ISO 6149-1-M10
Metric Ports-ISO 6149-1	ISO 6149-1-M12
Metric Ports-ISO 6149-1	ISO 6149-1-M14
Metric Ports-ISO 6149-1	ISO 6149-1-M16
Metric Ports-ISO 6149-1	ISO 6149-1-M18
Metric Ports-ISO 6149-1	ISO 6149-1-M22
Metric Ports-ISO 6149-1	ISO 6149-1-M27
Metric Ports-ISO 6149-1	ISO 6149-1-M33
Metric Ports-ISO 6149-1	ISO 6149-1-M42
Metric Ports-ISO 6149-1	ISO 6149-1-M48
Metric Ports-ISO 6149-1	ISO 6149-1-M60
Metric Ports-ISO 6149-1	ISO 6149-1-M8

MM Only

Library Name	Cavity Name
Drill Holes	10
Drill Holes	11
Drill Holes	12
Drill Holes	14
Drill Holes	15
Drill Holes	16
Drill Holes	17
Drill Holes	18
Drill Holes	19
Drill Holes	20
Drill Holes	22
Drill Holes	24
Drill Holes	25
Drill Holes	28
Drill Holes	30
Drill Holes	32
Drill Holes	35
Drill Holes	38
Drill Holes	40
Drill Holes	45
Drill Holes	5
Drill Holes	50
Drill Holes	55
Drill Holes	6
Drill Holes	63
Drill Holes	8
Expander Plug Ports	MB-600-030
Expander Plug Ports	MB-600-040
Expander Plug Ports	MB-600-050
Expander Plug Ports	MB-600-060
Expander Plug Ports	MB-600-070
Expander Plug Ports	MB-600-080
Expander Plug Ports	MB-600-090
Expander Plug Ports	MB-600-120
Expander Plug Ports	MB-600-140
Metric Ports-ISO 6149-1	ISO 6149-1-M10 X 1
Metric Ports-ISO 6149-1	ISO 6149-1-M12 X 1.5
Metric Ports-ISO 6149-1	ISO 6149-1-M14 X 1.5
Metric Ports-ISO 6149-1	ISO 6149-1-M16 X 1.5
Metric Ports-ISO 6149-1	ISO 6149-1-M18 X 1.5
Metric Ports-ISO 6149-1	ISO 6149-1-M22 X 1.5
Metric Ports-ISO 6149-1	ISO 6149-1-M27 X 2
Metric Ports-ISO 6149-1	ISO 6149-1-M33 X 2
Metric Ports-ISO 6149-1	ISO 6149-1-M42 X 2
Metric Ports-ISO 6149-1	ISO 6149-1-M48 X 2
Metric Ports-ISO 6149-1	ISO 6149-1-M60 X 2
Metric Ports-ISO 6149-1	ISO 6149-1-M8 X 1
Orifice Plugs	M10x1.5-6H
Orifice Plugs	M12x1.75-6H
Orifice Plugs	M5x0.8-6H
Orifice Plugs	M6x1.0-6H
Orifice Plugs	M8x1.25-6H

Library Name	Cavity Name
Orifice Plugs	1/4"-28 UNF
Orifice Plugs	5/16"-24 UNF
Orifice Plugs	5/8"-18 UNF
Orifice Plugs	7/16"-20 UNF
Orifice Plugs	9/16"-18 UNF
Valve Patterns-NFPA-T3.5.1	POC09

A

About MDTools Library Manager · 55
Adding a Library · 8
Adding a Tool · 49
Adding Circular Outlines · 37
Adding Custom Outlines · 38
Adding Rectangular Outlines · 35
Adding Rounded Rectangular Outline · 36
Adding/Modifying a Cavity · 12
Assigning Plug Models for Construction Ports · 45

B

Bolt Holes · 5

C

Cartridge Valve Cavities · 4
Cartridge Valve Port Details · 18
Cavity Geometry and Machining details · 17
Create Cavities · 11
Create Footprints · 22
Create New Cavities · 16
Creating O-ring Groove · 31
Creating Outlines · 34
Creating Slot · 32
Creating/Modifying Footprint Outline · 29
Creating/Modifying Footprints · 24

D

Deleting a Library · 9
Deleting a Tool · 50
De-Linking a Plug File from a Construction Port · 47
Drill Holes · 5

E

Editing Footprint Child Cavities · 27

H

Help · 54

I

Importing Cavity Data · 21
Installation · 3
Installing MDTools Library Manager 2018 · 3
Introduction · 1

L

Linking a Plug File with a Construction Port · 46
List of Cavities - MLM 2018 · 57
Locating Pin Holes · 5

M

MDTools Cavities · 4
MDTools Edit Cavity Library · 6
Modeling Cavities · 4
Modifying an existing cavity · 15
Modifying Circular Outlines · 37
Modifying Custom Outlines · 38
Modifying Rectangular Outline · 35
Modifying Rounded Rectangular Outline · 36

O

Options · 52
Outlines · 33

P

Plug Details · 20
Plugs · 44
Ports · 5

R

Reading Envelope Data from AutoCAD · 39
Reading Outline Data from Inventor · 41
Reading Outline Data from SolidWorks · 43
Renaming a Library · 10

S


Selected Cavity/Footprint Section · 13
Setup · 51
Software Installation · 3
System Requirements · 3

T

Tools · 48

U

Undercut Details · 19
Updating a Tool · 50

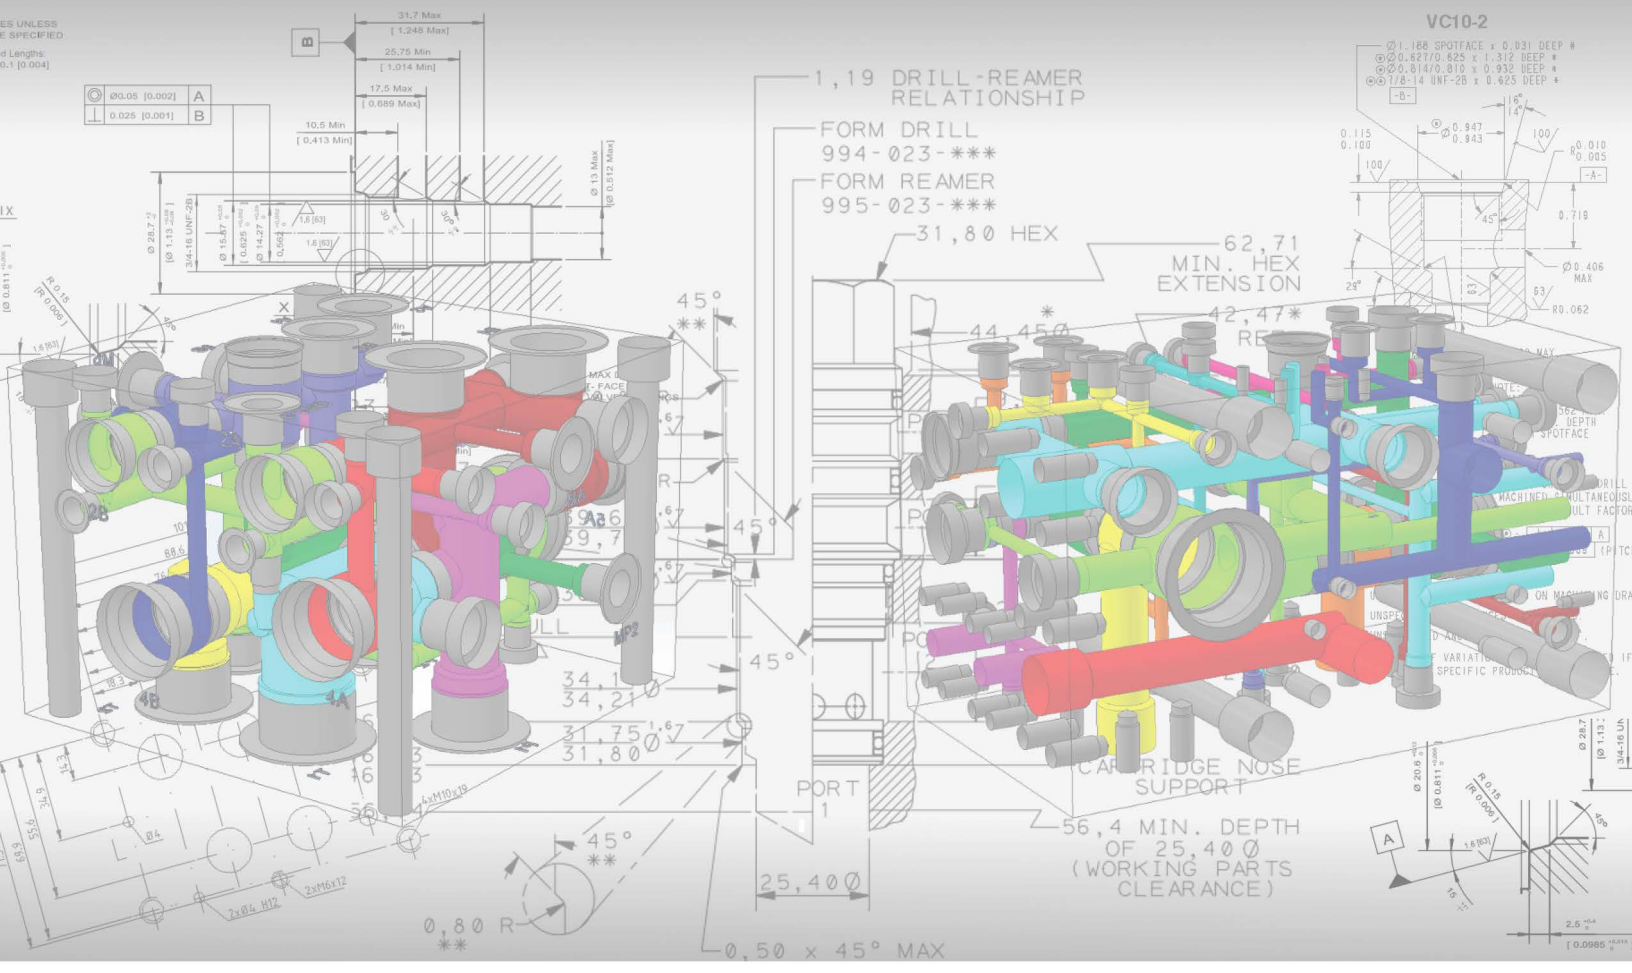

VEST, Inc.
 3250 W Big Beaver Rd #440
 Troy, MI 48084 USA

 01 (248) 649 9550

 sales@VESTusa.com

 VESTusa.com